

# Setup for Helix Bio Mechanical Reactor

Connect shop vac or air pump to stand pipe to agitate during cleaning / draining.

In from 25L air pump

Remote connection

In from Water Pump

Waste  
Water  
Out

Knife valves to control waste water flow may be located remotely for easy access. Instructions:

1. Shut off Water Pump.
2. Hook Shop Vac (or other air source) to stand pipe at top rubber boot and turn on to agitate.
3. Open knife valve for TOP drain. Allow to empty until water stops flowing, then close knife valve for TOP drain.
4. Open knife valve for LOWER drain. Allow to empty until water stops flowing. Close valve for LOWER drain.
5. Turn on Pump to refill filter. Repeat as needed. It is recommended that you do this every week.