

# Cleaning the **nexus**<sup>TM</sup> ON A PUMP FED SYSTEM

Follow these cleaning instructions if the Nexus is installed on a pump-fed setup when a **pump** is **pumping** water into your Nexus.

EVOLUTION  
**AQUA**  
INNOVATION IN WATER




**Insert** cleaning pipe into the centre of the Eazy. Water level in the filter will start to rise.



Once the water level has risen to the height indicated just below the overflow, **close** the inlet valve.



**Switch** water pump off.

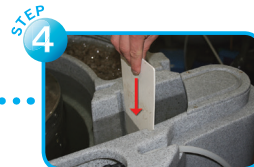

**Insert** inlet slide plate.



**Open** air valve to the **inner chamber**.



**Close** the air valve to the **outer chamber**.



Allow the K1 Micro in the Eazy to **agitate** for **5 minutes**.



**Open** the larger waste valve and wait for the **inner chamber** to empty.



At this stage you may want to **hose down** any debris from underneath the Eazy.



**Close** the waste valve.



**Open** the air valve to the **outer chamber**.



**Close** the air valve to the **inner chamber**.



**Open** Nexus inlet valve.



**Remove** inlet slide plate and then **switch** pump on.



When water level rises to the same level as the **outer chamber**, **remove** the cleaning pipe.

**Steps 2 to 14 should be repeated until the Eazy is clean.**

## PUMP FED CLEANING INSTRUCTIONS – NEXUS 220 & 320