







When you need help, press the SOS button for 3-4 seconds until you hear a voice prompt, indicating an SOS alarm. This starts the sequence of sending a "help me!" text message to your emergency contact numbers followed by the outgoing calls.

If the device fails to connect to the first number, it will call the second number after delay of 10 seconds. In case the second number fails to be connected as well, the system will connect to the third number etc.



• Use the side buttons +/- to adjust the sound volume during a call.

Please remember to program emergency contact numbers. It is not mandatory for all ten authorized numbers to be set, however a minimum of one must always be set.

Please be patient during the call sequence. There can be short delays as the alarm calls phones which maybe out of range or delivered to recipients' voicemail.

Getting a GPS fix

use outdoors or near a window so the device seconds and you will hear a beep, and then it will dial the defined number. can get a fix on the satellites. This could take a few minutes depending on your environment.



To end the call, press the SOS button.

Making a phone call



Silent mode button

warnings; double-click once more to turn voice warnings on.



seconds, and they will be paired automatically via Bluetooth.



Specification:

• Weight: 53g



• Put device on charging base more than 30



- Battery: Rechargeable, 3.7V, 950mAh
- Charging voltage: 5V DC
- Waterproof: IP67
- 4 locating technologies: GPS, BLE, WIFI,

Caution:

Please comply with the instructions to extend the

- Don't use or store the unit in dusty places.
- · Avoid storing or using the unit likely to be
- Clean the unit with a piece of dry cloth. Don't clean using chemicals or detergents. Don't disassemble or refit the unit.
- Using other batteries will cause unwanted situation.

Warning: Keep the IMEI and SIM con dential to maintain Privacy and security.

