


## Guide to Use of Control Panel

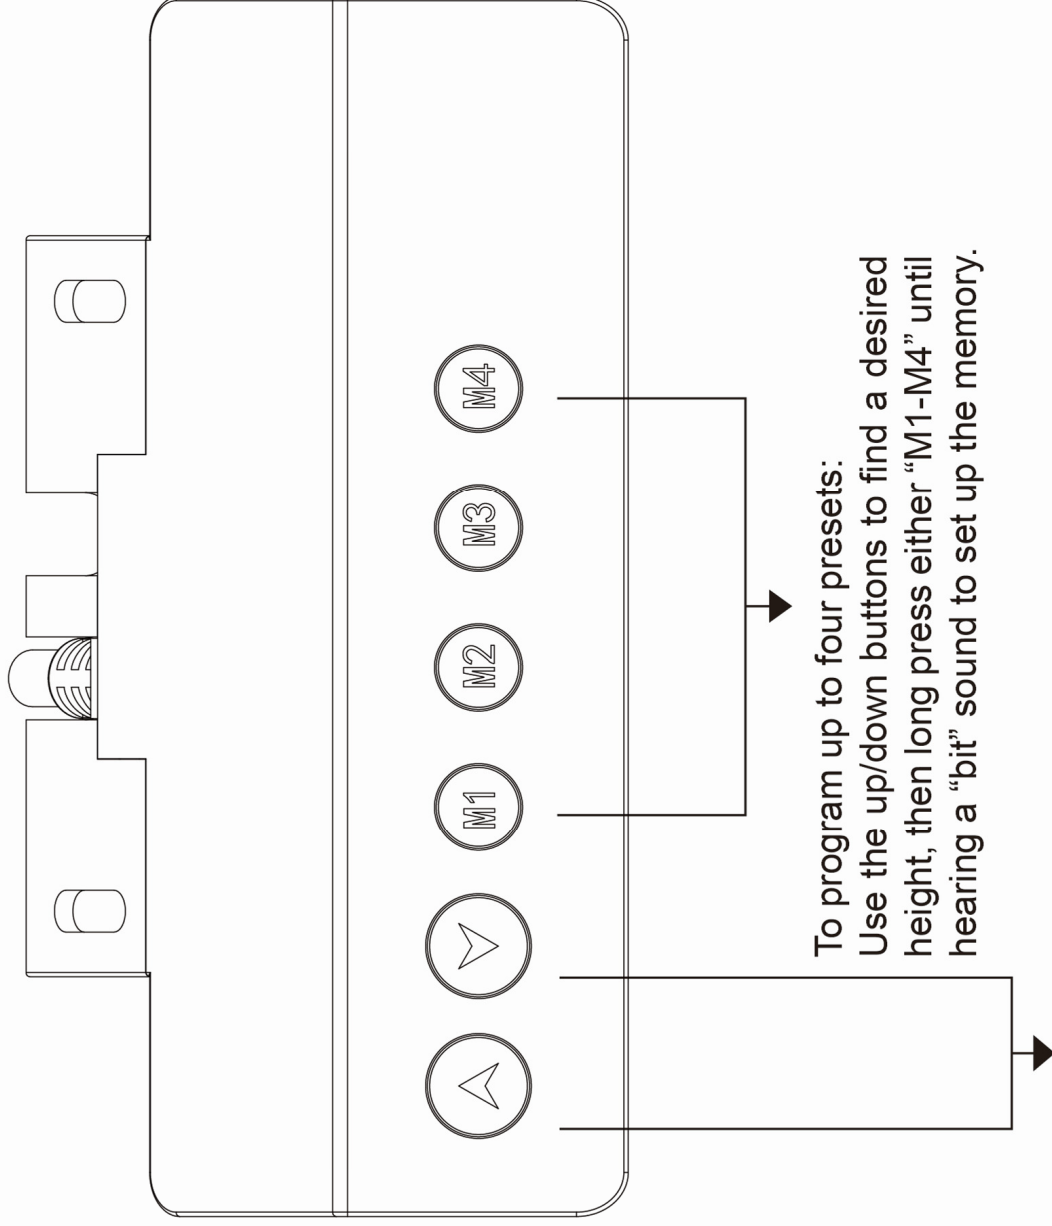

To program up to four presets:  
Use the up/down buttons to find a desired height, then long press either "M1-M4" until hearing a "bit" sound to set up the memory.

Press  $\wedge$  /  $\vee$  to control the desk up and down.