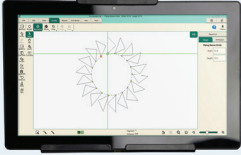 
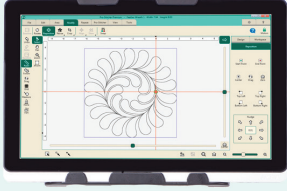 


Handi Quilter Longarms + Pro-Stitcher COMPARISON GUIDE

Pro-Stitcher Premium and Pro-Stitcher Lite computerized quilting systems offer quilters the ability to do what they love, faster. While the two systems are similar in their function, there are several differences between the two. This guide outlines features and HQ compatibility.

	PRO-STITCHER LITE	PRO-STITCHER PREMIUM
MSRP	\$5,995	\$10,995
System Features		
Color touchscreen tablet (Included as part of robotics system)	✓ (11 inches) 	✓ (12 inches) 
Computer-guided and Free-motion Quilting	✓	✓
Tablet Integration*		✓
Cable Integration*	✓	✓
Digital Designs Included	250	800+
Pro-Stitcher Designer Design Software	✓ Available	✓ Included
Software Features		
Simulation Mode	✓	✓
Free-Motion Record + Save		✓
Create, Position, and Quilt Designs	✓ Condensed settings	✓
Channel Locks (horizontal + vertical)	✓	✓
Tie-off Settings	✓ Set increments	✓
Wrap Designs	✓ Set increments	✓
See reverse for additional features or visit ProStitcher.com for more information.		
Warranty (mechanical/electrical)	5yr/5yr	5yr/5yr
Machine + Frame Compatibility (width in feet)		
HQ Moxie + Little Foot Frame (5)	✓	
HQ Moxie + Loft Frame (8/10)	✓	
HQ Simply Sixteen + Little Foot Frame (5)	✓	✓
HQ Simply Sixteen + Loft Frame (8/10)	✓	
HQ Simply Sixteen + Studio2 Frame (10/12)		✓
HQ Amara + Little Foot Frame (5)		✓
HQ Amara + Studio2 Frame (10/12)		✓
HQ Forte + Gallery2 Frame (10/12/14)		✓
HQ Infinity + Gallery2 Frame (10/12/14)		✓
Other Compatibility		
HQ Avanté, HQ Fusion, HQ Sixteen		✓

*Tablet integration is available for HQ Amara, HQ Forte, and HQ Infinity. Cable integration is available for HQ Moxie, HQ Amara, HQ Forte, and HQ Infinity.

SOFTWARE FEATURES		PRO-STITCHER LITE	PRO-STITCHER PREMIUM
GENERAL	Workspace, Save + Open		✓
	Load multiple designs	✓	✓
	Needle Drag + Drop	✓	✓
	Follow	✓	✓
	Zoom	✓	✓
	Pan	✓	✓
	Select	✓	✓
	Undo/Redo	✓	✓
MODIFY	Skew 1, Skew 2 (border), Skew 3 (triangle)	✓ Limited options	✓
	Mirror + Flip patterns	✓	✓
	Rotate patterns	✓	✓
	2-point rotation		✓
	Custom rotation	✓	✓
	Align	✓	✓
	Reposition + Nudge	✓	✓
	Reposition: Start Point	✓	✓
	Reposition: Current + End Point	✓	✓
	Reposition: Center	✓	✓
	Reposition: Drag + Drop	✓	✓
	Reposition: Zero		✓
	Reposition: top/bottom, left/right	✓	✓
	Resize	✓	✓
	Crop - inside / outside	✓	✓
	Crop - edges	✓	✓
	Crop - start / end	✓	✓
	Swap start + end points	✓	✓
	Baseline	✓	✓
	Transform, xform		✓
REPEAT	Basic Repeat	✓	✓
	P2P basic	✓	✓
	Fill	✓	✓
	Stretch	✓	✓
	Horizontal + Vertical Gap	✓	✓
	Wrap, Window	✓ Set increments	✓
	Wrap, Row	✓ Set increments	✓
	Wrap, Gap	✓ Set increments	✓
	Wrap: edges, drag		✓
Wrap: no wrap	✓	✓	
VIEW	Rubber band		✓
	Design	✓	✓
	Area	✓	✓
	Rulers / Grid	✓	✓
	Design Points		✓
	Start + End	✓	✓
	Jumps	✓	✓
	Bounds		✓
	Scroll	✓	✓
	Transparency		✓

SOFTWARE FEATURES		PRO-STITCHER LITE	PRO-STITCHER PREMIUM
PRO-STITCHER	Free-Motion Record + Save		✓
	Mark + Clear	✓	✓
	Half Stitch	✓	✓
	Full Stitch	✓	✓
	Follow	✓	✓
	Measure	✓	✓
	Baste		✓
	Channel Locks Horizontal/Vertical	✓	✓
	Move	✓	✓
	New Start + End	✓	✓
Auto Stat + End	✓	✓	
Push button release of gears	✓	✓	
AREA	2-pt area	✓	✓
	Multi-point area	✓	✓
	Manual numeric area dimension adjustment	✓	✓
	Quilting/hoop space	✓	✓
	Rubber band to area		✓
QUILT	Stitch	✓	✓
	Tie offs, start + end	✓	✓
	Pullup options	✓ Set increments	✓
	Trace Bounds		✓
	Trace Area	✓	✓
SETTINGS	Nudge defaults	✓	✓
	Auto Jump defaults	✓ Set increments	✓
	Opti-Stitch	✓	✓
	Stitches-per-inch setting	✓	✓
	Baste setting		✓
	Tie-off number setting	✓ Set increments	✓
	Tie-off distance setting	✓ Set increments	✓
	Tie-off start + end setting	✓ Set increments	✓
	Tie-off tack		✓
	Tie-off micro	✓ Set increments	✓
Pullup preferences	✓ Set increments	✓	
Pause Delay preferences (time + distance)		✓	
Stitch Stats		✓	
ADVANCED	Simulation Mode	✓	✓
	General, thread break sensor*		✓
	General, verify before quilt	✓	✓
	General, Keep Motors Locked		✓
	General, Load start point at crosshairs		✓
	General, Load Point to Point		✓
	Communications, PS	✓	✓
	Communications, Reconnect Motors	✓	✓
	Communications, Reconnect Machine	✓	✓
	Speed Profile, Max SPM	✓	✓
Logging preferences	✓	✓	
Motors, Motor Torque Limit	✓	✓	

*Thread-break sensor applies to HQ Amara, HQ Forte, and HQ Infinity machines, only.