

This page is used to remove the ENTER pressed after each scan.

1. Print this page.

2. Scan barcodes 1 - 9 in order.

LS4278.com

1 855-427-8684

www.LS4278.com

1



2

Scan Options



<DATA> <SUFFIX>

3



Enter

4



Scan Suffix

5



6



7



8



9



Write to Custom Defaults