

Full Function Adjustable Arms #18A



Arm Height (Up/Down)

Type: Button

Press the button found beneath the armrest while grasping the armrest with both hands. Raise or lower each arm to desired height. Release the button.

Armrest In/Out

Type: Armrest

While sitting in the chair, grasp the armrest and rotate in to 1 of 3 positions:

1. Armrest at unrotated position
2. Armrest rotated 22° inward
3. Armrest rotated 45° inward

Arm Width (In/Out)

Type: Switch

Rotate the switch located beneath the arm forward. Use your hand to grasp the arm and adjust it out to your desired width away from seat. Each arm adjusts separately. When finished making adjustments, rotate the switch back to its original position.



< Watch our 18A
Online User Guide