

Adjustable Arms #51A/#51AG/#52A/#53A



Arm Height (Up/Down)

Type: Button

Press the button found beneath the armrest while grasping the armrest with both hands. Raise or lower each arm to desired height. Release the button.

Optional Armrest Rotation

Type: Armrest

Grasp armrest and turn left or right to rotate a max of 15° each way.

Optional Arm Width (In/Out)

Type: Switch

Rotate the switch located beneath the arm forward. Use your hand to grasp the arm and adjust it out to your desired width away from seat. Each arm adjusts separately. When finished making adjustments, rotate the switch back to its original position.

Optional Armrest Back/Forth

Type: Armrest

Grasp armrest & slide it forward or back to desire position. Armrest slides forward a max of 1.5".



< Watch our 51A/51AG/52A/53A
Online User Guide