


LumaBella™

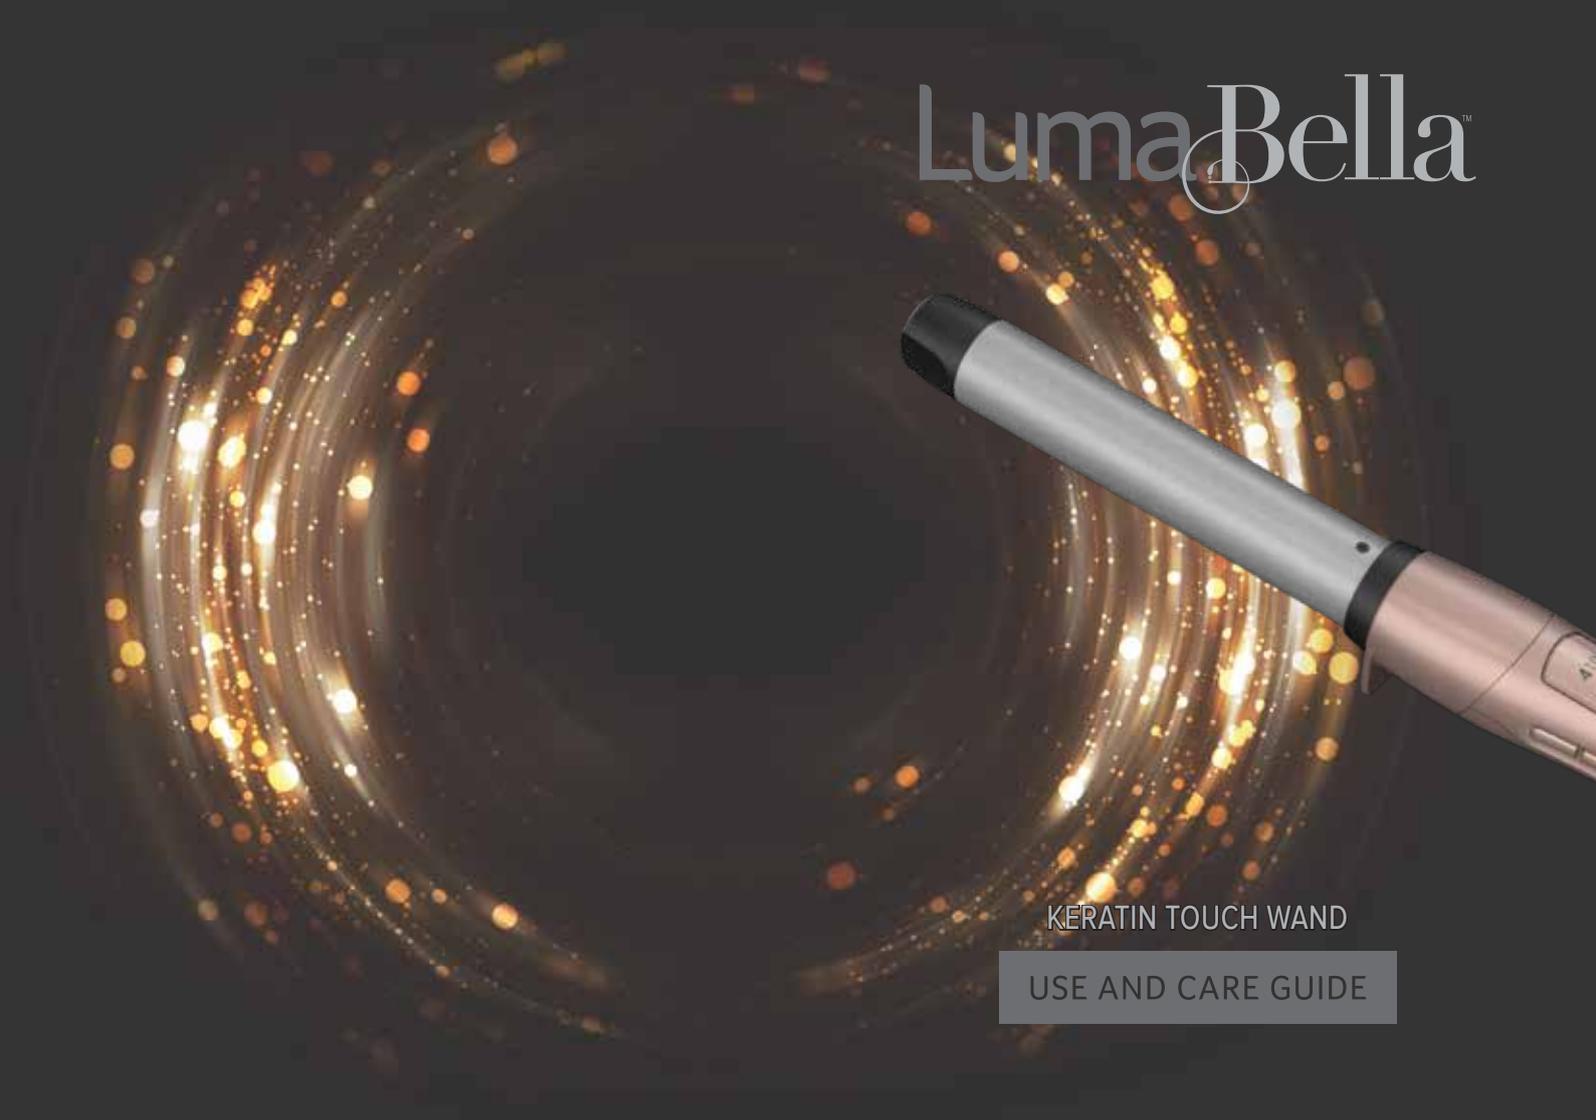

KERATIN TOUCH WAND

USE AND CARE GUIDE

⚠️ READ ALL INSTRUCTIONS BEFORE USING THIS DEVICE.

When using electrical devices, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER**

DANGER

As with most electrical devices, electrical parts are electrically live even when the power button is off.

To reduce the risk of death by electric shock:

- Always unplug the device from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this device where it can fall or be pulled into a tub or sink.
- Do not place or drop the device into water or other liquid.
- Do not reach for a device that has fallen into water. Unplug it immediately.
- Unplug the device before cleaning it.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:


- A device should never be left unattended when it is plugged in.
- Close supervision is necessary when this device is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this device only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated barrel. Do not wrap the cord around the device.
- Never use while sleeping.

- Never drop or insert any object into any of the device's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This device is hot when in use. Do not let surface areas touch eyes or bare skin.
- Do not place the heated barrel directly on any surface while it is hot or plugged in. Use the stand provided.
- The plug on this device is a polarized plug with one blade wider than the other. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this device and cord in a moisture-free area. Do not store it in temperatures exceeding 140° F (60° C).
- This device is for household use only.
- Do not plug or unplug this device when your hands are wet.



SAVE THESE INSTRUCTIONS

STYLER FEATURES

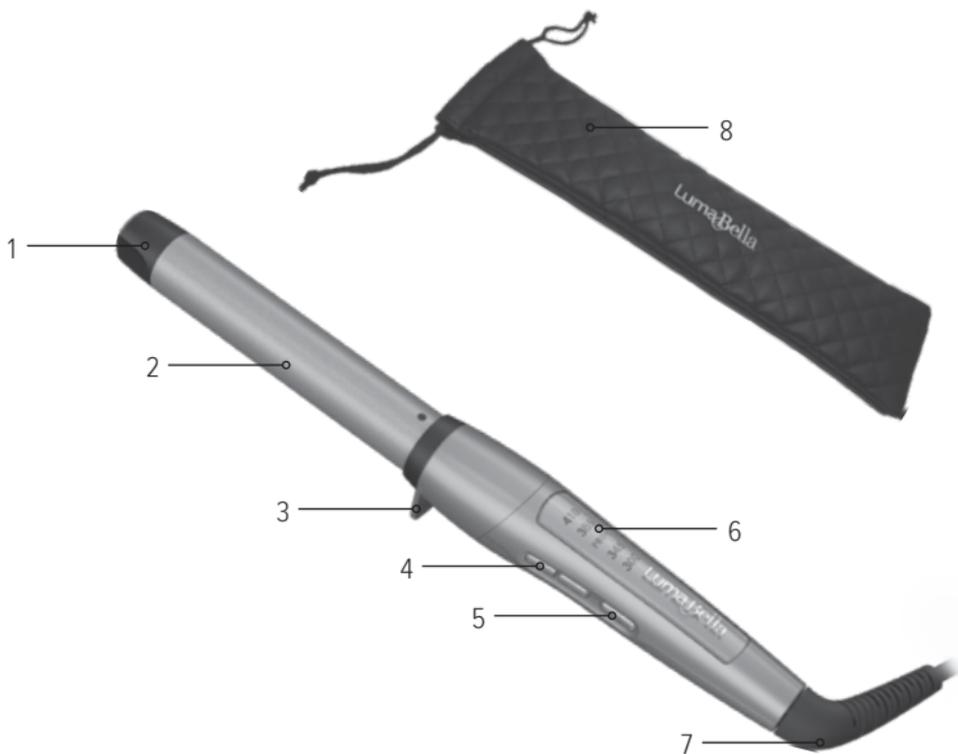

1. Cool Tip
2. 1 inch Grip coated barrel
3. Stand
4. Temperature controls
5. On-off switch
6. Temperature display
7. Fabric Swivel cord
8. Heat resistant pouch
9. Heat resistant glove (not shown)

STYLER FEATURES

Titanium and Ceramic Barrel with Micro-Conditioners

- Advanced Keratin oil, almond oil and micro-conditioner infused barrel for volume and healthy curls.

Grip Coating

- Better hold and more control during styling than a standard Spectrum Brands curling tool.

Pro + Heat Setting

- Reach the optimal, safe temperature setting of 365 by holding down the '+' button for 2 seconds.

Heating System

- High heat — 300°F–410°F.
- Fast heat up — ready in 30 seconds.

Multivoltage

- Perfect for traveling

Automatic Safety Shutoff

This styler is equipped with automatic shutoff. After approximately 60 minutes, the styler will automatically shut itself off. To reactivate the styler, press the power button.

HOW TO USE

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.

Hairsprays contain flammable material – do not use while using this product.

- Section the hair prior to styling. Style the lower layers first.
- Plug in the styler and press and hold the on button to switch on.
- Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product.
- To increase the temperature press the button marked '+' to decrease the temperature press the button marked '-'

Temperature Settings

Take extra care when using this styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

Temp.	Hair Type
300 – 345°F	Fine, fragile or damaged hair
365 – 385°F	Normal, easy-to-curl hair
385 – 410°F	Thick, difficult-to-curl hair

Caution: the hottest temperatures should only be used by experienced stylists.

- The temperature display will stop flashing once the desired temperature is reached.
- Start by dividing hair into sections not more than 1 inch deep and 2 inches wide. For tighter curls, use thinner sections. For looser curls, use larger sections.
- Keep the section smooth by brushing or combing through it while holding the ends taut with the other hand.
- Taking one section at a time, wrap the hair around the barrel.
- Hold the hair in place for up to 20 seconds for tight curls or if hair is hard to curl. Hold for less time if hair is easy to curl, or if you want loose curls or just waves.
- Repeat this around the head to create as many curls as desired.
- Allow the hair to cool before styling.
- After use, press and hold the off button to turn off then unplug the appliance.
- Let the appliance cool down before cleaning and storing.

MAINTENANCE

This appliance has no user serviceable parts.

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.
- Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

FOUR-YEAR LIMITED WARRANTY

Spectrum Brands, Inc. warrants this device against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase.

If the device should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and daytime phone number to:

Spectrum Brands Returns Center
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532

For more information, call 800-736-4648 in the United States and Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover devices damaged by the following:

- Accident, misuse, abuse or alteration of the device
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around the device, causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this device.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS DEVICE. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

PERFORMANCE GUARANTEE

If within 60 days after you have purchased your device you are not completely satisfied and would like a refund, return it with the original dated sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased.

Spectrum Brands, Inc. will reimburse all retailers who accept the device within 60 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the United States and Canada.

If you purchased the device directly from the LumaBella™ website and would like to return it for a full refund*, please follow these terms and conditions:

1. Refund will be in the form of a check issued in U.S. dollars and will be provided only if all terms and conditions are met.
2. The following items must be returned to Spectrum Brands and postmarked no later than 60 days after purchase of the device:
 - a. The LumaBella™ device
 - b. The original sales receipt indicating price and date purchased
 - c. The completed 60-day money-back guarantee form (located at www.LumaBella.com)
3. In addition, Spectrum Brands, Inc., in its discretion, must determine that the returned device was used in accordance with the instruction booklet (included with the device at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Spectrum Brands Returns Center
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532
5. Refund does not include postage costs for the return of the device, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged devices.
7. Please allow 4-6 weeks to receive your refund by check.

*Applies to U.S. and Canadian returns only. Terms and conditions apply.

CUSTOMER SERVICE

Questions or comments? Contact us:

800-736-4648

www.LumaBella.com

120–240 VAC 50/60 Hz TYPE: CI8325

LumaBella is a trademark of Spectrum Brands, Inc.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Made in China.



Intertek