

LumaBella™



ULTIMATE COMPACT STYLER



ULTIMATE COMPACT STYLER

USE AND CARE GUIDE

IMPORTANT SAFETY INSTRUCTIONS

⚠ READ ALL INSTRUCTIONS BEFORE USING THIS DEVICE.

When using electrical devices, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER

As with most electrical devices, electrical parts are electrically live even when the power button is off.

To reduce the risk of death by electric shock:

- Always unplug the device from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this device where it can fall or be pulled into a tub or sink.
- Do not place or drop the device into water or other liquid.
- Do not reach for a device that has fallen into water. Unplug it immediately.
- Unplug the device before cleaning it.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

- A device should never be left unattended when it is plugged in.
- Close supervision is necessary when this device is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this device only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated plates. Do not wrap the cord around the device.

- Never use while sleeping.
- Never drop or insert any object into any of the device's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This device is hot when in use. Do not let surface areas touch eyes or bare skin.
- Do not place the heated plates directly on any surface while the appliance is hot or plugged in.
- The plug on this device is a polarized plug with one blade wider than the other. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this device and cord in a moisture-free area. Do not store it in temperatures exceeding 140° F (60° C).
- This device is for household use only.
- Do not plug or unplug this device when your hands are wet.



SAVE THESE INSTRUCTIONS

STYLER FEATURES



STYLER FEATURES

Ceramic and Tourmaline Plates

The 1" ceramic and tourmaline plates help control frizz and static for a smooth glide.

Cool Touch

The full sized plates are suspended from outer housing allowing for more control during styling without hand getting hot.

Conditioned Plates

The plates contain keratin oil, almond oil and microconditioners that evenly emit onto hair during styling with no oily residue.

Worldwide Voltage

The styler is dual voltage and can be great for travel and used anywhere.

Automatic Safety Shutoff

This styler is equipped with automatic shutoff. After approximately 60 minutes, the styler will automatically shut itself off. To reactivate the styler press the power button.

HOW TO USE

Temperature Settings

Take extra care when using this styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

Temp.	Hair Type
300° F	Very fine, fragile or damaged hair
355° F	Normal, easy-to-straighten hair
410° F	Thick, difficult-to-straighten hair

Temperature Control

- Set to desired temperature setting by rotating the temperature control dial.
- During heat-up time, the temperature display will pulse until the desired temperature is reached.
- When the styler reaches the desired temperature, the pulsing will stop.

USAGE TIPS

Straightening Your Hair

1. Hair should be dry and free of tangles before using the styler.
2. Plug the styler into an electrical outlet. Rotate the temperature control dial until the unit powers on and lights up.
3. Adjust the temperature by rotating the temperature control dial. The display will flash while the unit heats up, and then glow steadily when it has reached the selected temperature.
4. Divide hair into manageable sections, and clip the upper layers on top of your head, out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

NOTE:

- If you find you need a higher heat setting while styling your hair, simply adjust the temperature to a higher heat setting.
 - If you find you need a lower heat setting, adjust the temperature to a lower heat setting. Because the styler is already hot, it may take a few minutes to cool off.
6. Take a small section of hair, pull down and away from your scalp, and hold it taut.
 7. Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold the styler in one area for a long period of time or hair damage may occur.
 8. To create curves or flicks, rotate your wrist to turn the styler in toward your head or out away from your head as you run the styler down the hair strand.
 9. Repeat with all the sections of your hair, working with the underneath layers first, then the top and sides to finish.
 10. When you are finished styling, press and hold the power button to turn the unit off. Unplug it, and allow it to cool before storing.

MAINTENANCE

This appliance has no user serviceable parts.

Cleaning

Make sure the device is unplugged and cool. Use a damp cloth to clean the plates and the outside of the handle. No other maintenance of the styler is required.

Storage

Unplug the styler whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location. Never wrap the cord around the styler, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

FOUR-YEAR LIMITED WARRANTY

Spectrum Brands, Inc. warrants this device against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase.

If the device should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and daytime phone number to:

Spectrum Brands Returns Center
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532

For more information, call 800-736-4648 in the United States and Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover devices damaged by the following:

- Accident, misuse, abuse or alteration of the device
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around the device, causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this device.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS DEVICE. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

PERFORMANCE GUARANTEE

If within 60 days after you have purchased your device you are not completely satisfied and would like a refund, return it with the original dated sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased.

Spectrum Brands, Inc. will reimburse all retailers who accept the device within 60 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the United States and Canada.

If you purchased the device directly from the LumaBella™ website and would like to return it for a full refund*, please follow these terms and conditions:

1. Refund will be in the form of a check issued in U.S. dollars and will be provided only if all terms and conditions are met.
2. The following items must be returned to Spectrum Brands and postmarked no later than 60 days after purchase of the device:
 - a. The LumaBella™ device
 - b. The original sales receipt indicating price and date purchased
 - c. The completed 60-day money-back guarantee form (located at www.LumaBella.com)
3. In addition, Spectrum Brands, Inc., in its discretion, must determine that the returned device was used in accordance with the instruction booklet (included with the device at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Spectrum Brands Returns Center
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532

5. Refund does not include postage costs for the return of the device, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged devices.
7. Please allow 4-6 weeks to receive your refund by check.

*Applies to U.S. and Canadian returns only. Terms and conditions apply.

CUSTOMER SERVICE

Questions or comments? Contact us:

800-736-4648

www.LumaBella.com

120–240 VAC 50/60 Hz TYPE: S14A

LumaBella is a trademark of Spectrum Brands, Inc.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Made in China.

