

LumaBella™



DUAL TOUCH STYLER

USE AND CARE GUIDE

▲ READ ALL INSTRUCTIONS BEFORE USING THIS DEVICE.

When using electrical devices, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.
KEEP AWAY FROM WATER.

DANGERS

As with most electrical devices, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug this device from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this device where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for a device that has fallen into water. Unplug it immediately.
- Unplug this device before cleaning it.





 

WARNINGS

To reduce the risk of burns, fire, electric shock or injury to persons:

- A device should never be left unattended when it is plugged in.
- Close supervision is necessary when this device is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this device only for its intended use as described in this manual.
- Never operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the device.
- Never use while sleeping.
- Never block the air openings of the device or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
- Never drop or insert any object into any of the device's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This device is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated plates directly on any surface while it is hot or plugged in.
- The plug on this device is a polarized plug with one blade wider than the other. As a safety feature, this plug will fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this device and cord in a moisture-free area. Do not store it in temperatures exceeding 140° F (60° C).
- This device is for household use only.
- Do not plug or unplug this device when your hands are wet.

DEVICE FEATURES



1. Keratin Micro-Conditioner-Infused, Floating Ceramic Plates
2. Heat Sensor Strip
3. Heat Sensor Power Button 
4. Temperature Control Buttons 
5. Power Button 
6. Hinge Lock
7. Salon-Length Swivel Cord
8. Temperature Display
9. Heat Sensor Indicator Light 

HOW TO USE: KERATIN MICRO-CONDITIONERS

This device is infused with a special blend of keratin micro-conditioners that are evenly emitted onto your hair through the ceramic plates. Micro-conditioners in the coating come to the surface of the plates during heating and operation of the device, and are transferred to the hair during styling. These micro-conditioners do not need to be activated, and they last the lifetime of the product.

HOW TO USE: HEAT SETTINGS

Take extra care when using this device. This device reaches a professional heat of 450° F. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

Temperature Control Buttons

- Press the temperature control buttons (+) (-) to select your desired temperature.
- During the heat-up time, the temperature display will pulse until the desired temperature is reached.
- When the device reaches the desired temperature, the pulsing will stop, and the temperature will be displayed.

Temperature Settings

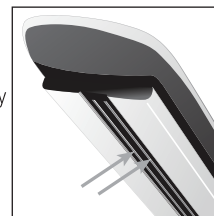 
Temp.	Hair Type
300° F	Very fine, fragile or damaged hair
340° F	Very fine, fragile or damaged hair
375° F	Normal, easy-to-straighten hair
410° F	Thick, difficult-to-straighten hair
450° F	Thick, difficult-to-straighten hair

Turbo Mode

- This device can automatically increase from your current temperature setting to the maximum 450° F setting.
- To activate, press and hold the (+) button for 2 seconds.
- To deactivate, press the (-) button to decrease to your desired temperature.

HOW TO USE: HEAT SENSOR

A computerized heat sensor strip has been integrated in the top plate to detect hair overheating. This feature allows you to protect the hair and avoid excessive heat to already damaged or dry areas of your hair by automatically adjusting the temperature to a safe styling zone.



- The heat sensor technology is automatically activated when you turn on the device.
- The pulsing heat sensor indicator light (☉) illuminates through the top of the device, letting you know that the sensor is activated and is protecting your hair from excessive damage.
- As you move the plates through your hair, the sensor will automatically detect the dry or damaged areas, and will adjust the temperature to a safe styling zone.
- Once you pass over the damaged area, and the sensor identifies normal or healthy hair, the device will re-adjust to your selected temperature.
- Press the heat sensor power button (☉) to turn off the heat sensor feature.

HOW TO USE: SAFETY FEATURES

Automatic Safety Shutoff

After approximately one hour, the device will automatically shut itself off. To reactivate the device, press the power button (⏻).

Hinge Lock

This device has a hinge lock to make it easier to store and to protect the ceramic plates during storage.

- To lock the device, squeeze the plates together, and push the switch to the locked position.
- To unlock the device, pull the switch to the unlock position.

 

 
NOTE: Do not heat the device in the locked position.



HOW TO USE: STYLING TIPS

1. Hair should be dry and free of tangles before using the device.
2. Divide hair into manageable sections, and clip the upper layers on top of your head and out of the way. Work with underneath layers first.
3. Test the device on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

NOTE:

- If you find that you need a higher heat setting while styling your hair, press the  button to a higher setting.
 - If you find that you need a lower heat setting while styling your hair, press the  button to a lower setting. Because the device is already hot, it may take a few minutes to cool off.
4. Take a small section of hair, pull hair down and away from your scalp, and hold it taut.
 7. Starting at the roots, clamp hair firmly between the plates and run the device down the entire hair strand, from root to tip, in one smooth stroke. Do not hold the device in one area for a long period of time or damage to hair may occur.
 8. To create curves or flicks, rotate your wrist to turn the device in toward your head or out away from your head as you run the plates down the hair strand.
 9. Repeat with all the sections of your hair, working with the underneath layers first, then the top and sides to finish.
 10. When you are finished styling, press and hold the power button  to turn the device off. Unplug it and allow it to cool before storing.

MAINTENANCE

Cleaning

Make sure the device is unplugged and cool. Use a damp cloth to clean the plates, sensor strip, and the outside of the power handle. No other maintenance of the device is required.

Storage

Unplug the device whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the device. This will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

NOTE: This device has no user serviceable parts.

WARRANTY

Limited Four-Year Warranty

Spectrum Brands, Inc. warrants this device against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase.

If the device should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and daytime phone number to:

Spectrum Brands Returns Center
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532

For more information, call 800-736-4648 in the United States or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover devices damaged by the following:

- Accident, misuse, abuse or alteration of the device
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around the device, causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this device.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS DEVICE. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

PERFORMANCE GUARANTEE

If within 60 days after you have purchased your device you are not completely satisfied and would like a refund, return it with the original dated sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased.

Spectrum Brands, Inc. will reimburse all retailers who accept the device within 60 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the United States or 800-268-0425 in Canada.

If you purchased the device directly from the LumaBella™ website and would like to return it for a full refund*, please follow these terms and conditions:

1. Refund will be in the form of a check issued in U.S. dollars and will be provided only if all terms and conditions are met.
2. The following items must be returned to Spectrum Brands and postmarked no later than 60 days after purchase of the device:
 - a. The LumaBella™ device
 - b. The original sales receipt indicating price and date purchased
 - c. The completed 60-day money-back guarantee form (located at www.LumaBella.com)
3. In addition, Spectrum Brands, Inc., in its discretion, must determine that the returned device was used in accordance with the instruction booklet (included with the device at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Spectrum Brands Returns Center
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532
5. Refund does not include postage costs for the return of the device, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged devices.
7. Please allow 4-6 weeks to receive your refund by check.

*Applies to U.S. and Canadian returns only. Terms and conditions apply.

CUSTOMER SERVICE

Questions or comments? Contact us:

800-736-4648

www.LumaBella.com

120VAC 60 Hz

LumaBella is a trademark of Spectrum Brands, Inc.

© 2016 Spectrum Brands, Inc.

5/16, T22-0004207-A

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Made in China.

