

# Luma Bella™



COOL MIST STRAIGHTENER

USE AND CARE GUIDE



## **▲ READ ALL INSTRUCTIONS BEFORE USING THIS DEVICE**

---

When using electrical devices, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.  
KEEP AWAY FROM WATER.**

## **DANGERS**

---

As with most electrical devices, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug this device from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this device where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for a device that has fallen into water. Unplug it immediately.
- Unplug this device before cleaning.

## **WARNINGS**

---

To reduce the risk of burns, fire, electric shock or injury to persons:

- A device should never be left unattended when it is plugged in.
- Close supervision is necessary when this device is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this device only for its intended use as described in this manual.
- Never operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the device.
- Never use while sleeping.



## **WARNINGS CONTINUED**

---

- Never block the air openings of the device or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
- Never drop or insert any object into any of the device's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This device is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated plates directly on any surface while it is hot or plugged in.
- The plug on this device is a polarized plug with one blade wider than the other. As a safety feature, this plug will fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this device and cord in a moisture-free area. Do not store it in temperatures exceeding 140° F (60° C).
- This device is for household use only.
- Do not plug or unplug this device when your hands are wet.
- Unplug this device before filling. Fill reservoir with distilled water or the LumaBella™ conditioning treatment only. Do not overfill.

## DEVICE FEATURES

---



- |  |   |
|--|---|
| 1. Cool Mist Channel                   | 7. Reservoir Cap                                  |
| 2. Floating Ceramic Plates             | 8. Hinge Lock                                     |
| 3. Temperature Control Buttons (+) (-) | 9. Salon-Length Swivel Cord                       |
| 4. Power Button (power symbol)         | 10. Button Lock Indicator                         |
| 5. Wick                                | 11. Temperature Indicator Lights                  |
| 6. Removable Cool Mist Reservoir       | 12. Cool Mist Activation Button (circle with dot) |

## HOW TO USE: HEAT SETTINGS

Take extra care when using this device. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

### Temperature Control Buttons

- Press the temperature control buttons   to select your desired temperature.
- During the heat-up time, the temperature indicator lights will blink.
- When the device reaches the desired temperature, the indicator light will become solid, and your device is ready for use.

### Temperature Settings

Temp.	Hair Type
• 300° F	Very fine, fragile or damaged hair
•• 340° F	Very fine, fragile or damaged hair
••• 375° F	Normal, easy-to-straighten hair
•••• 410° F	Thick, difficult-to-straighten hair
••••• 450° F	Thick, difficult-to-straighten hair

### Turbo Mode

- This device can automatically increase from your current temperature setting to the maximum 450° F setting.
- To activate, press the  button and hold for 2 seconds.
- To deactivate, press the  button to decrease to your desired temperature.

### Temperature Lock

- This device features a mode to lock-in your current temperature.
- To activate, press and hold the  button for 2 seconds. All buttons will become locked, and the unit will display the lock symbol.
- To deactivate, press and hold the  button for 2 seconds. All buttons will become unlocked, and the lock symbol will disappear.



## HOW TO USE: COOL MIST

This device features a cool mist function that hydrates and preps the hair for heat.

### Filling the Reservoir

1. Make sure the device is unplugged and cool.
2. Remove the reservoir by lifting at the notch in the handle at the bottom of the reservoir.

NOTE: DO NOT remove wick from reservoir as it aids the cool mist

3. Remove the reservoir cap.
4. Fill the reservoir with the LumaBella™ conditioning treatment (shake well prior to opening), or distilled water.
5. Replace the cap.
6. Insert the wick end into the unit and press down until the reservoir is back in place on the device.



### WARNINGS:

- Do not operate vapor feature when empty.
- Use only distilled water or LumaBella™ conditioning treatment.
- Mineral-rich tap water will clog the cool mist generator.

**USE ONLY AS DIRECTED. STRAIGHTENER TO BE USED ONLY WITH DISTILLED WATER OR LumaBella™ CONDITIONING TREATMENT.**

### LumaBella™ Conditioning Treatment

12 mL - 0.4 fl oz. U.S.

CAUTION: External use only. Avoid contact with eyes. Keep out of reach of children.

INGREDIENTS: Aqua, Glycereth-8 Macadamia Seed Oil Esters, Sodium Arganamphoacetate, Keratin, Hydrolyzed Keratin, Phenoxyethanol, Ethylhexylglycerin

### Activating the Cool Mist Feature

1. Turn on the device and select your desired temperature.
2. Press and hold the cool mist activation button for 2 seconds.
3. Make sure you hold the device so the cool mist channel is furthest from your scalp and below the plates. This position will apply the mist protection prior to applying heat.
4. Cool mist will only dispense when the device is in use with the plates closed.



## HOW TO USE: STYLING TIPS

---

1. Hair should be dry and free of tangles before using the device.
2. Divide hair into manageable sections, and clip the upper layers on top of your head, out of the way. Work with underneath layers first.
3. Test the device on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

### NOTE:

- If you find that you need a higher heat setting while styling your hair, press the  button to a higher setting.
  - If you find that you need a lower heat setting while styling your hair, press the  button to a lower setting. Because the device is already hot, it may take a few minutes to cool off.
4. Take a small section of hair, pull it down and away from your scalp, and hold it taut.
  5. Starting at the roots, clamp hair firmly between the plates and run the device down the entire hair strand, from root to tip, in one smooth stroke. Do not hold the device in one area for a long period of time or damage to hair may occur.
  6. To create curves or flicks, rotate your wrist to turn the device in toward your head or out away from your head as you run the plates down the hair strand.
  7. Repeat with all the sections of your hair, working with the underneath layers first, then the top and sides to finish.
  8. When you are finished styling, press and hold the power button  to turn off the device. Unplug it and allow it to cool before storing.

## HOW TO USE: SAFETY FEATURES

---


### Automatic Safety Shut-Off

After approximately one hour, the device will automatically shut itself off. To reactivate the device, press the power button .

### Hinge Lock

This device has a hinge lock to make it easier to store and to protect the ceramic plates during storage.

- To lock the device, squeeze the plates together, and push the switch to the locked position.
- To unlock the device, pull the switch to the unlock position.

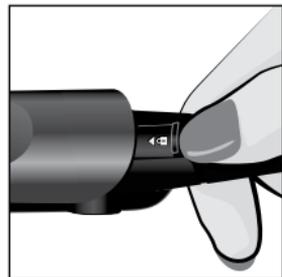

NOTE: do not heat the unit in the locked position.

## MAINTENANCE

---

### Cleaning

Make sure the device is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required.

### Storage

Unplug the device whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the device. This will cause the cord to wear prematurely and break, thus voiding the warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Note: This device has no user serviceable parts.

## **WARRANTY**

---

### **Limited Four-Year Warranty**

Spectrum Brands, Inc. warrants this device against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase.

If the device should become defective within the warranty period, we will replace it free of charge. Return your device and sales receipt with your name, address and daytime phone number to:

Spectrum Brands Returns Center  
507 Stokely Drive  
P.O. Box 1  
Deforest, WI 53532

For more information, call 800-736-4648 in the United States or 800-268-0425 in Canada.

### **KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.**

This warranty does not cover devices damaged by the following:

- Accident, misuse, abuse, or alteration of the device
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping the cord around the device, causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this device.

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS DEVICE. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

## PERFORMANCE GUARANTEE

---

If within 60 days after you have purchased your device you are not completely satisfied and would like a refund, return it with the original dated sales receipt indicating purchase price and date of purchase to the retailer from whom it was purchased.

Spectrum Brands, Inc. will reimburse all retailers who accept the device within 60 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the United States or 800-268-0425 in Canada.

If you purchased the device directly from the LumaBella™ website and would like to return it for a full refund\*, please follow these terms and conditions:

1. Refund will be in the form of a check issued in U.S. dollars and will be provided only if all terms and conditions are met.
2. The following items must be returned to Spectrum Brands and postmarked no later than 60 days after purchase of the device:
  - a. The LumaBella™ device
  - b. The original sales receipt indicating price and date purchased
  - c. The completed 60-day money-back guarantee form (located at [www.LumaBella.com](http://www.LumaBella.com))
3. In addition, Spectrum Brands, Inc., in its discretion, must determine that the returned device was used in accordance with the instruction booklet (included with the device at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:  
Spectrum Brands Returns Center  
507 Stokely Drive  
P.O. Box 1  
Deforest, WI 53532
5. Refund does not include postage costs for the return of the device, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged device.
7. Please allow 4-6 weeks to receive your refund by check.

\*Applies to U.S. and Canadian returns only. Terms and conditions apply.

## CUSTOMER SERVICE

---

Questions or comments? Contact us:

800-736-4648

[www.LumaBella.com](http://www.LumaBella.com)

120VAC 60 Hz

LumaBella is a trademark of Spectrum Brands, Inc.

© 2016 Spectrum Brands, Inc.

4/16, T22-0004152-A

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Made in China.

