
Assembly Instructions

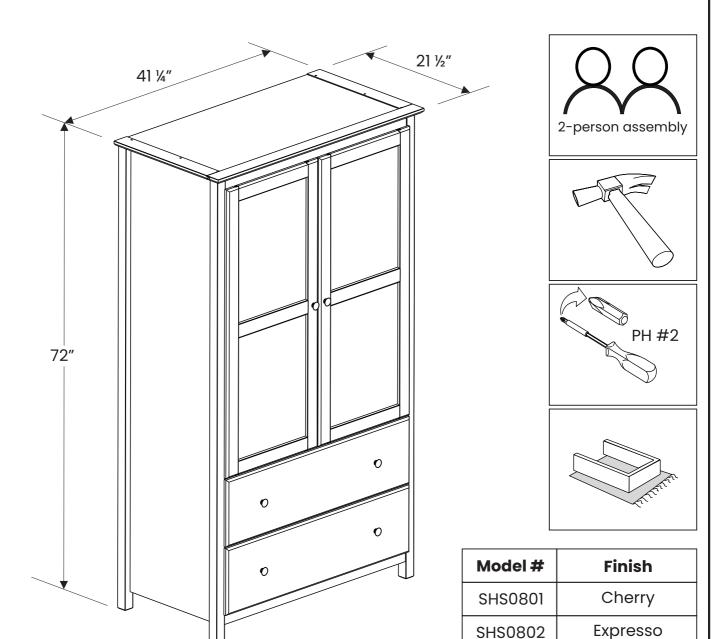

Thank you for choosing Grain Wood Furniture, it is an honor to be in your home! If you have any questions, feedback, or need replacement parts please contact us at: grainwoodfurniture.com/help or support@grainwoodfurniture.com

Shaker Collection 2-Door Wardrobe

Grain Wood

SHS0804

Walnut

PLEASE READ BELOW BEFORE BEGINNING ASSEMBLY

- Enlist help from a friend or family member as most items require two people for proper assembly.
- Choose a spacious, open area near where the piece will be located once assembled. It is easier to move parts than to relocate the furniture after it is fully assembled.
- Do not throw away packaging material until assembly is complete.
- Assemble the item on a soft surface, such as cardboard or an old blanket in order to protect the finish from possible dents or scratches.
- Lay out the parts in order and count them twice. In case any parts are
 missing or damaged, document the problem with pictures and contact
 support so we can make it right.
- Solid wood furniture may present imperfections such as wood knots, minor splits or cracks which are a natural aspect of the material.
 Whenever stability of the furniture is not compromised, we recommend customers perform cosmetic touch-ups with wax crayon fillers sold at all major hardware stores.
- It is best to use the tools provided in the box, such as a hex key, because they may be specially sized for the piece of furniture.
- We do not recommend the use of power drills as they can damage your furniture if not used correctly.
- Use a carpenter's square or hardcover book to check angles when assembling drawers and doors. If they are not at 90 degrees, they will not close properly.
- If you have any problems, we are here to help. Just go to grainwoodfurniture.com/help.
- See grainwoodfurniture.com/care-guide for suggestions that will help your furniture last for years.



grainwoodfurniture.com/assembly-troubleshooting

HARDWARE LIST

A1	(httttttttttttt	42 + 3	
Α4	3,5x14	8 + 1	
А9	(111111) 3,5x16	29 + 2	
A16	4,0x40	6+1	
A25	M4x25	6 + 1	
B31	6,0x10	20 + 1	
C2	8,0x25	46 + 3	
D4	metal	4+1	
D10		2	
D21		2 + 1	
E21		2	
E22	385mm - 15 1/4"	2	
F10		6	
G1	10x10	38	
G12	30x30	4	
H4		6	

ANTI-TIPPING RESTRAINT KIT				
A47	3,0x20	2 + 1		
F8	[d_n]	2		
F15	250 - 9 3/4"	1		




Before starting assembly please verify the hardware set is complete.

For missing hardware please contact us at grainwoodfurniture.com/help


WARNING: CHOKING HAZARD


Small parts, not for children. To be assembled by an adult.

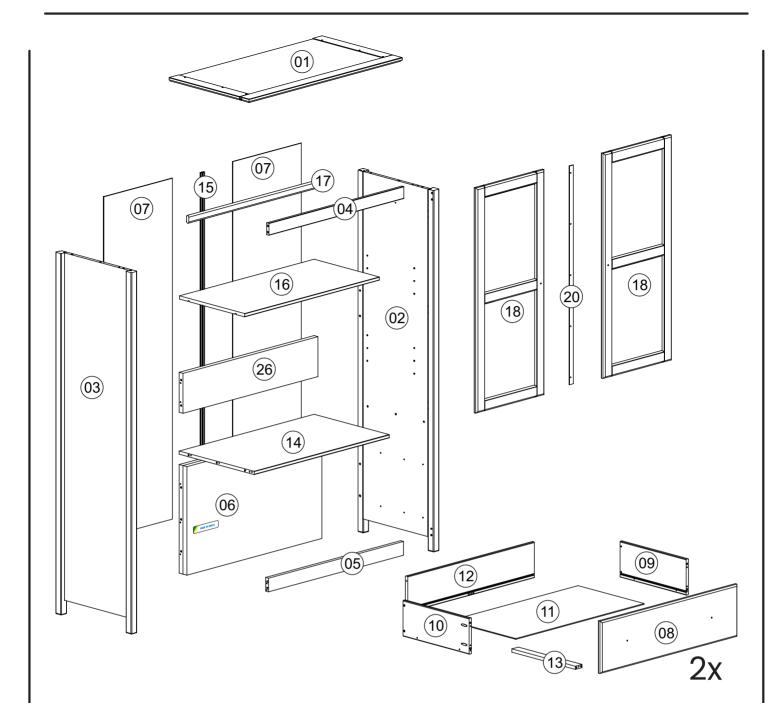



Box A - 1 of 2				
Part #	Description	Qty.		
01	Тор	1		
02	Right side	1		
03	Left side	1		
07	Back panel	2		
09	Drawer right side	2		
10	Drawer left side	2		
12	Drawer back	2		
13	Drawer bottom support	2		
15	Profile "H"	1		
20	Door stop	1		


	Box B - 2 of 2	
Part #	Description	Qty.
04	Upper crosspiece	1
05	Lower crosspiece	1
06	Rear panel	1
80	Drawer front	2
11	Drawer bottom	2
14	Fixed shelf	1
16	Adjustable shelf	1
17	Hanging bar	1
18	Door	2
26	Long stabilizer	1
HW	Hardware	1

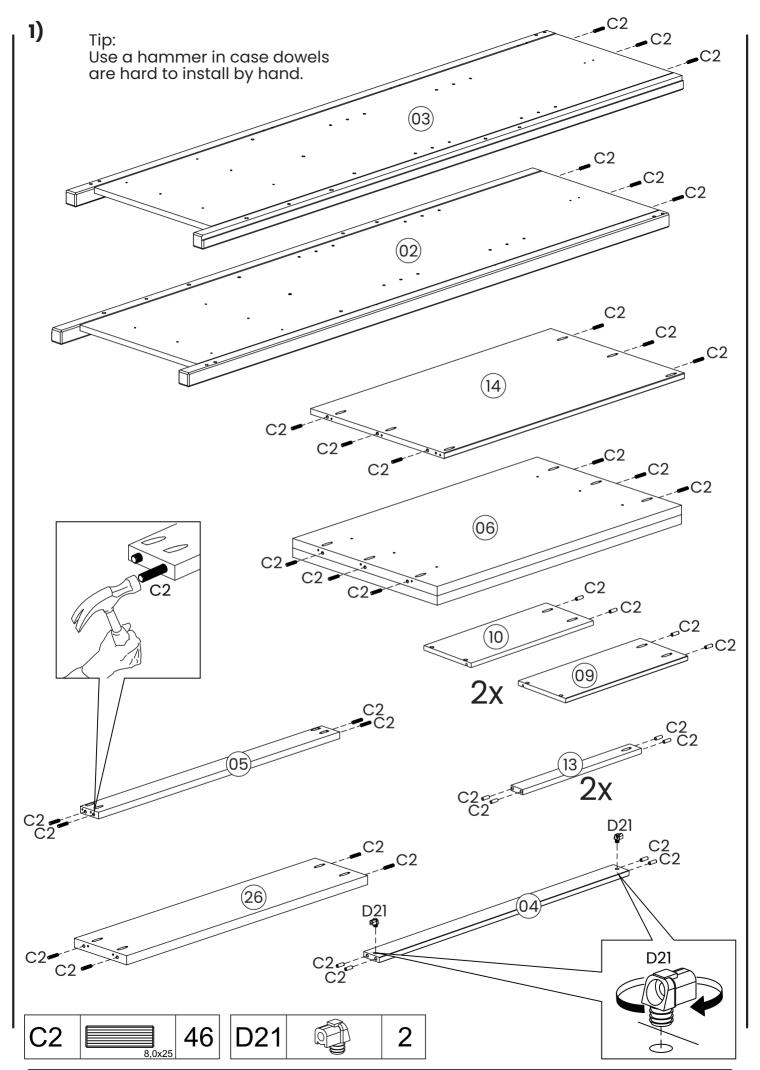


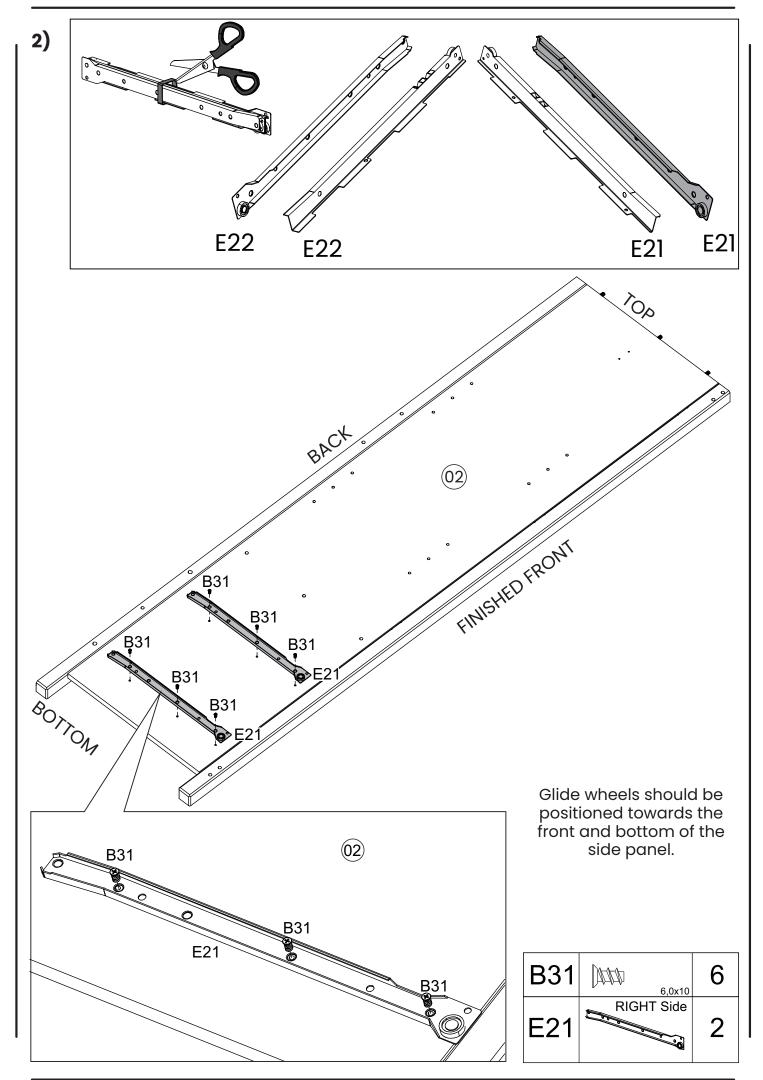


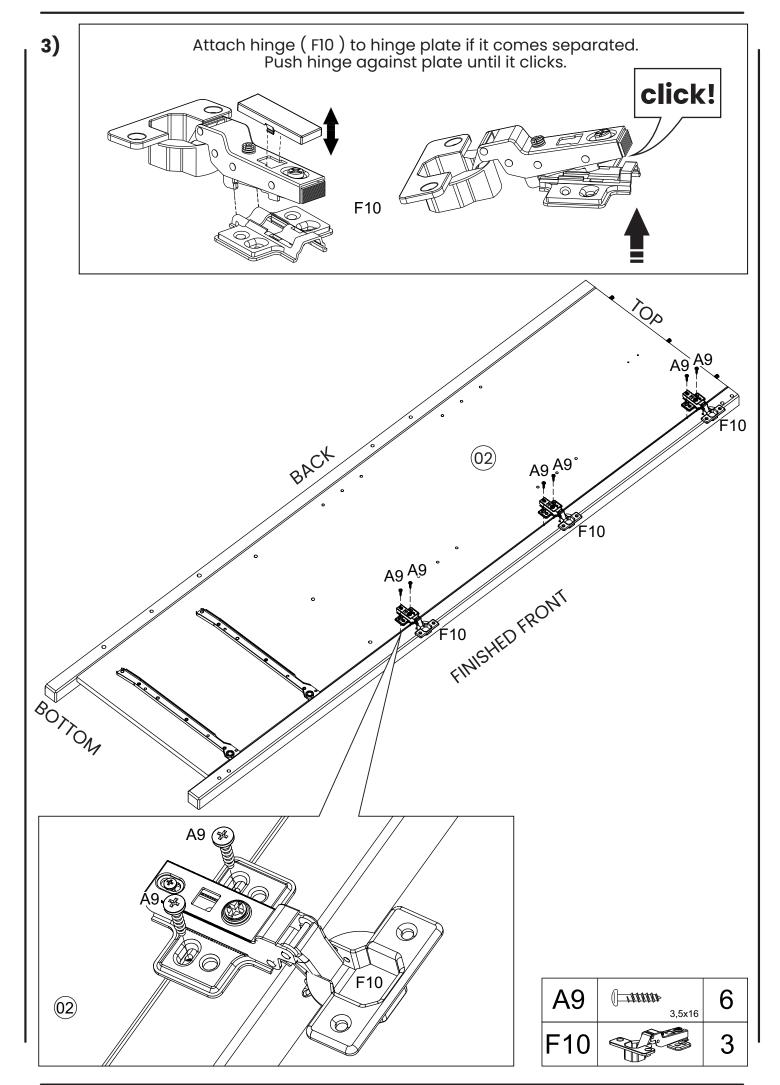


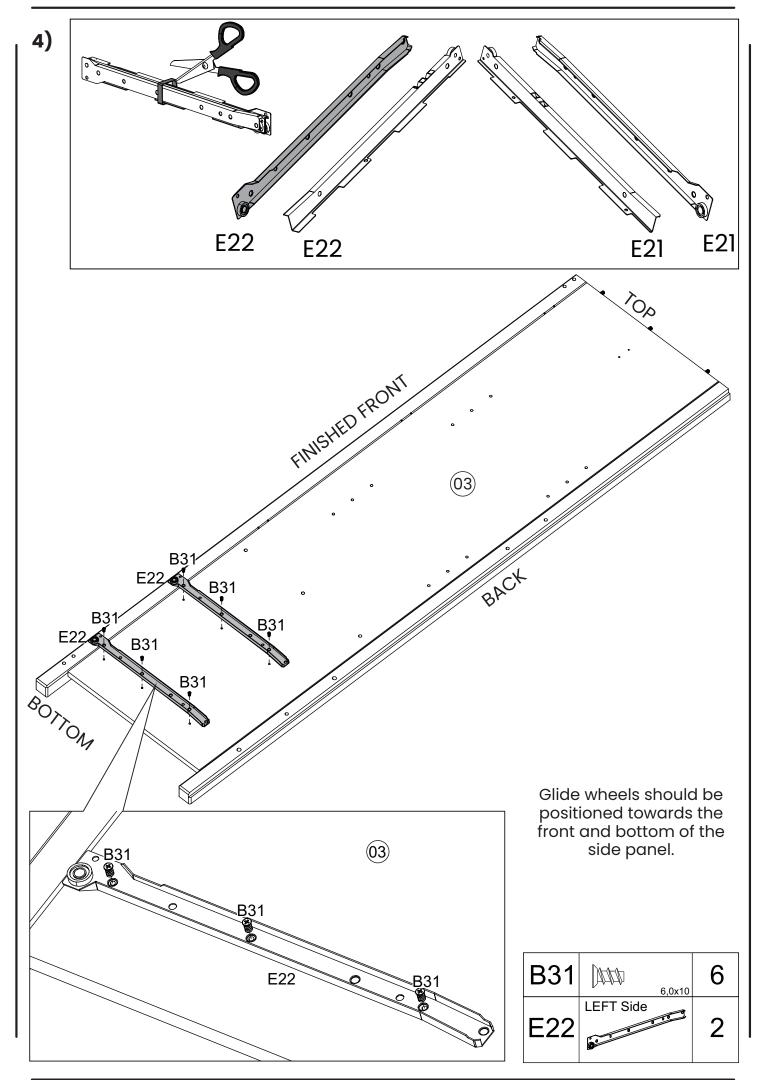


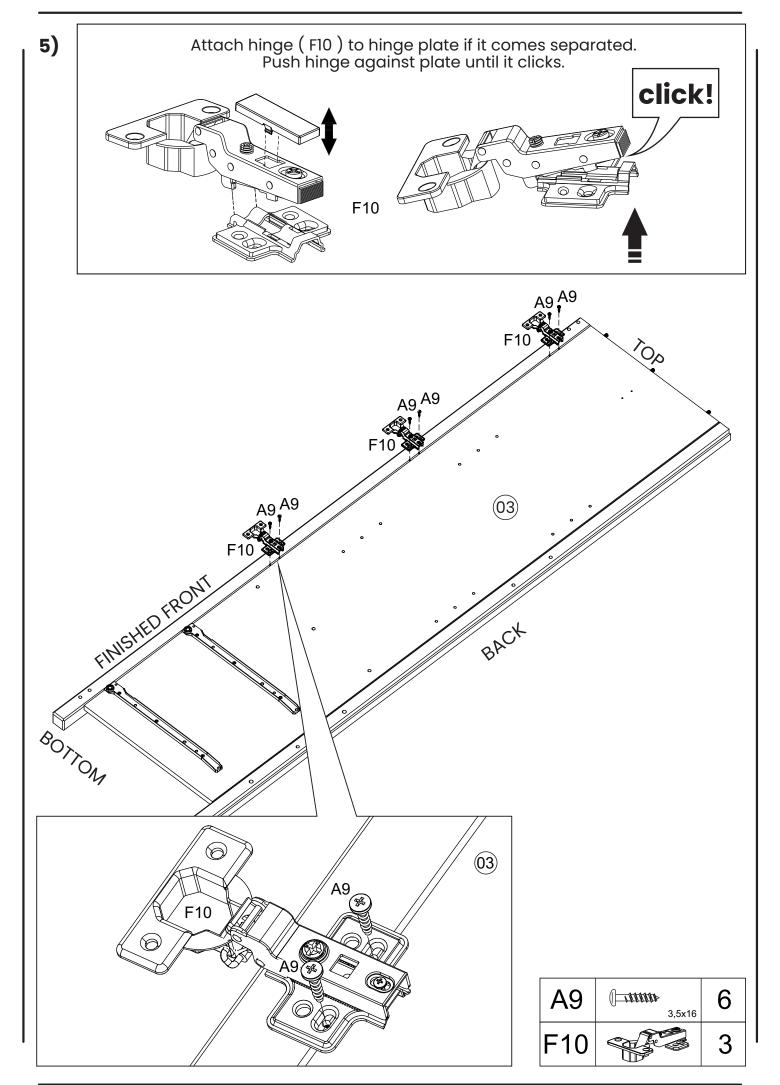

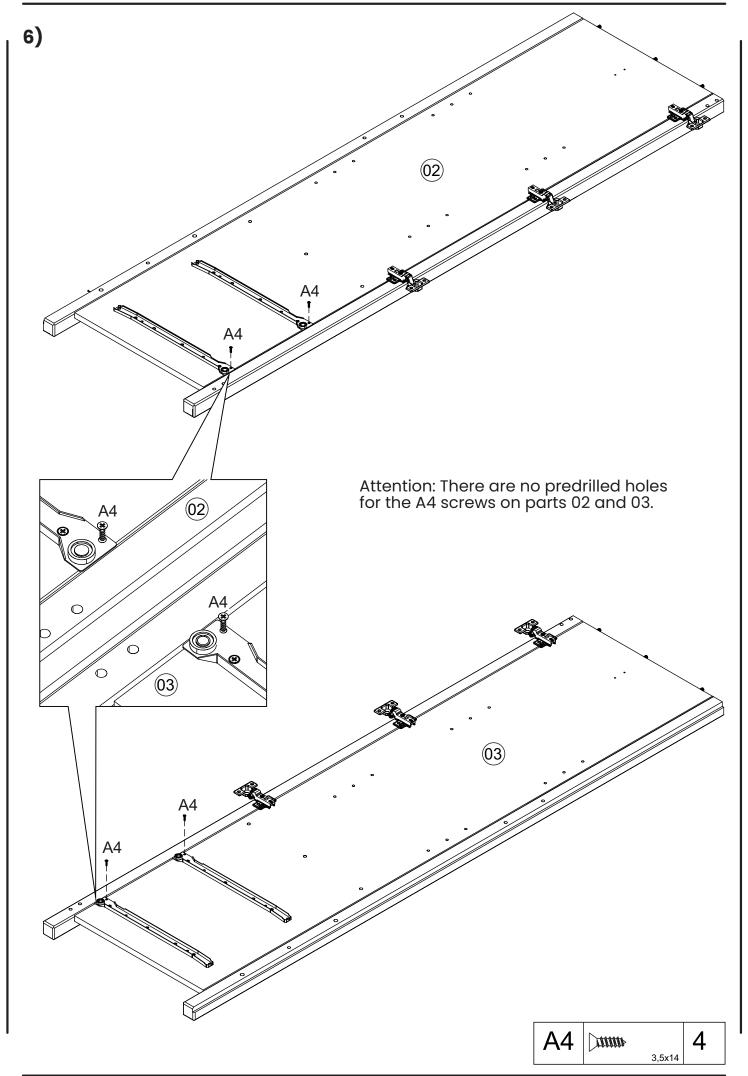


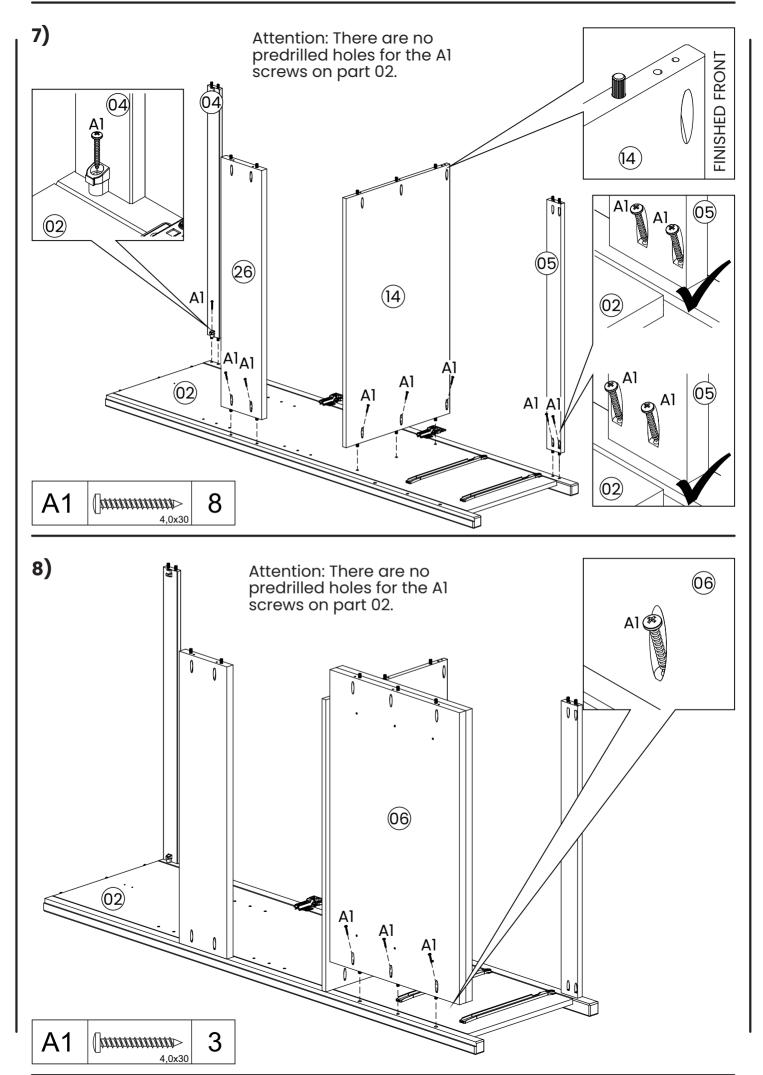


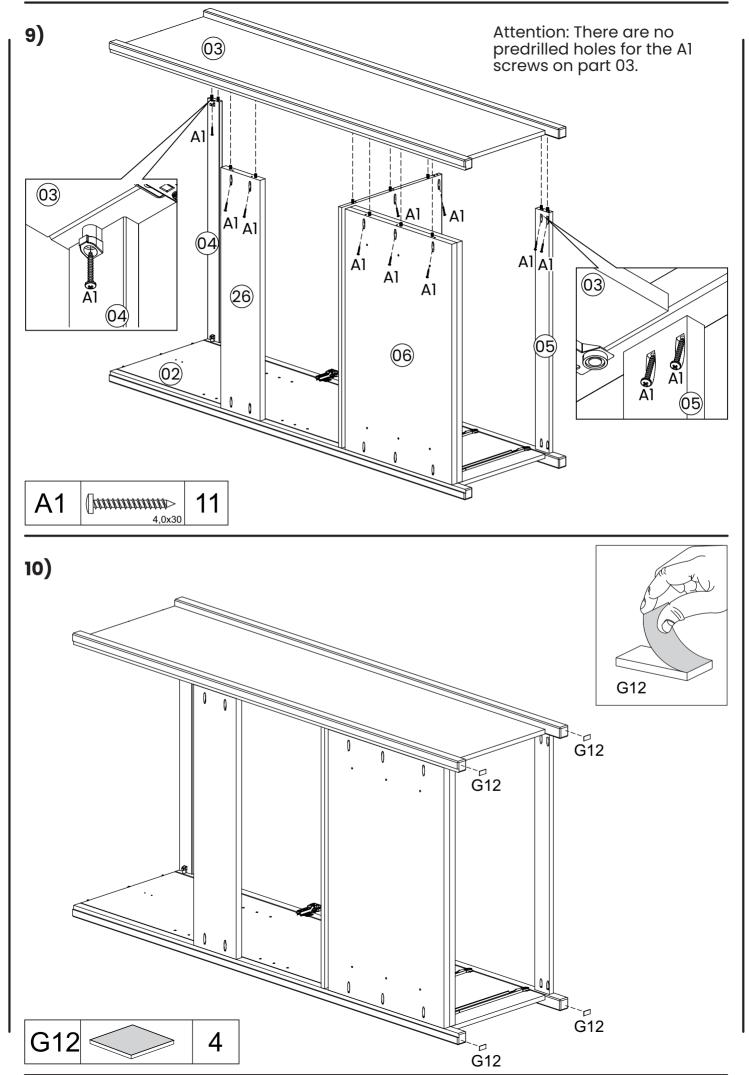


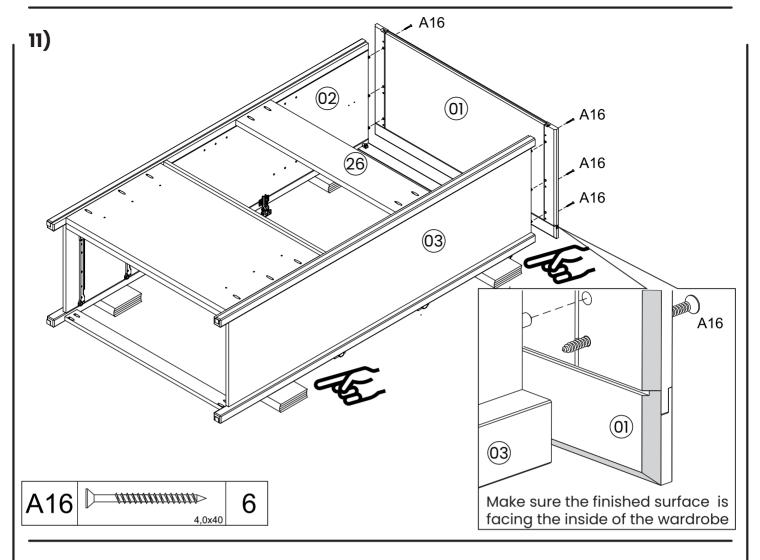



Make sure back panels are perfectly aligned with side panels and top and there are no gaps.

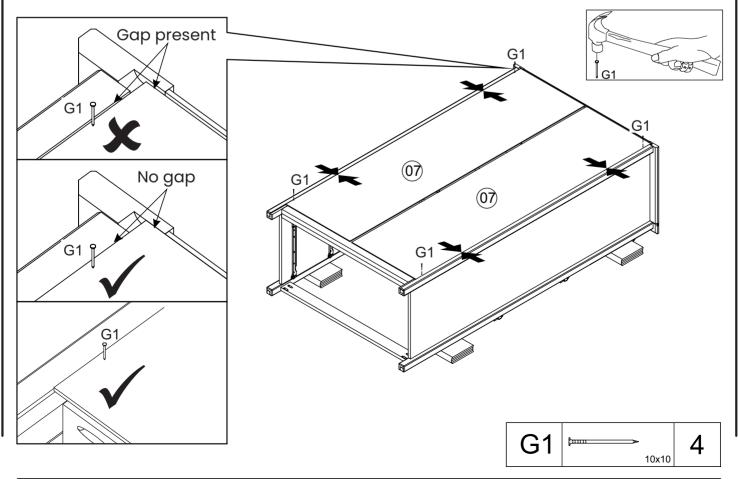


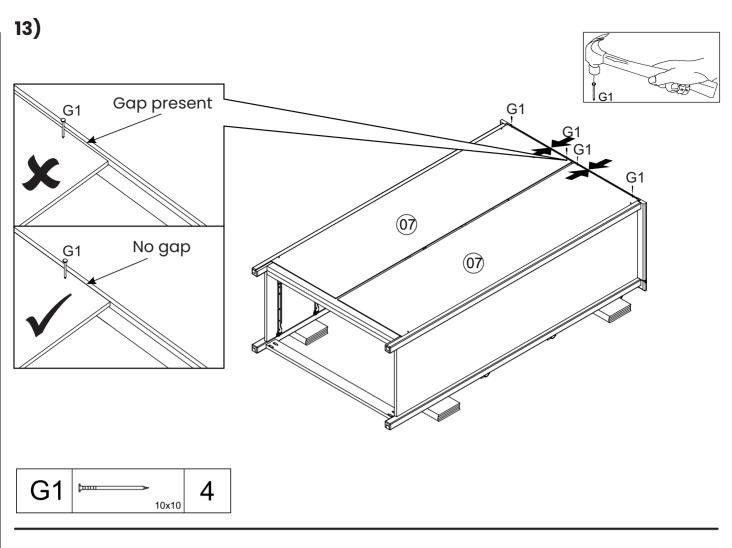


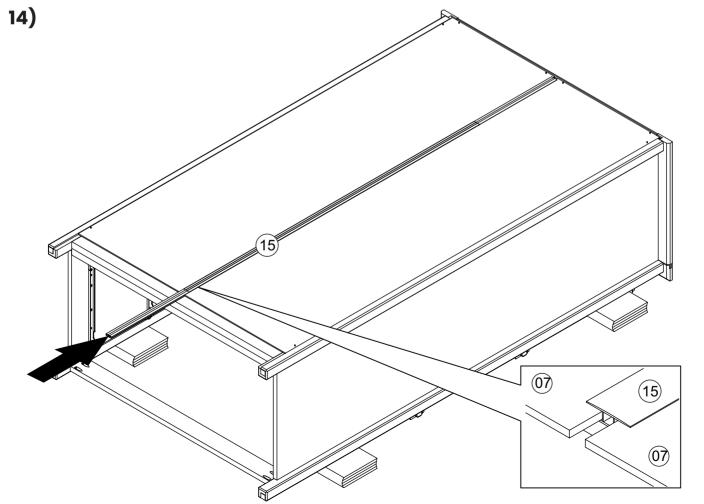


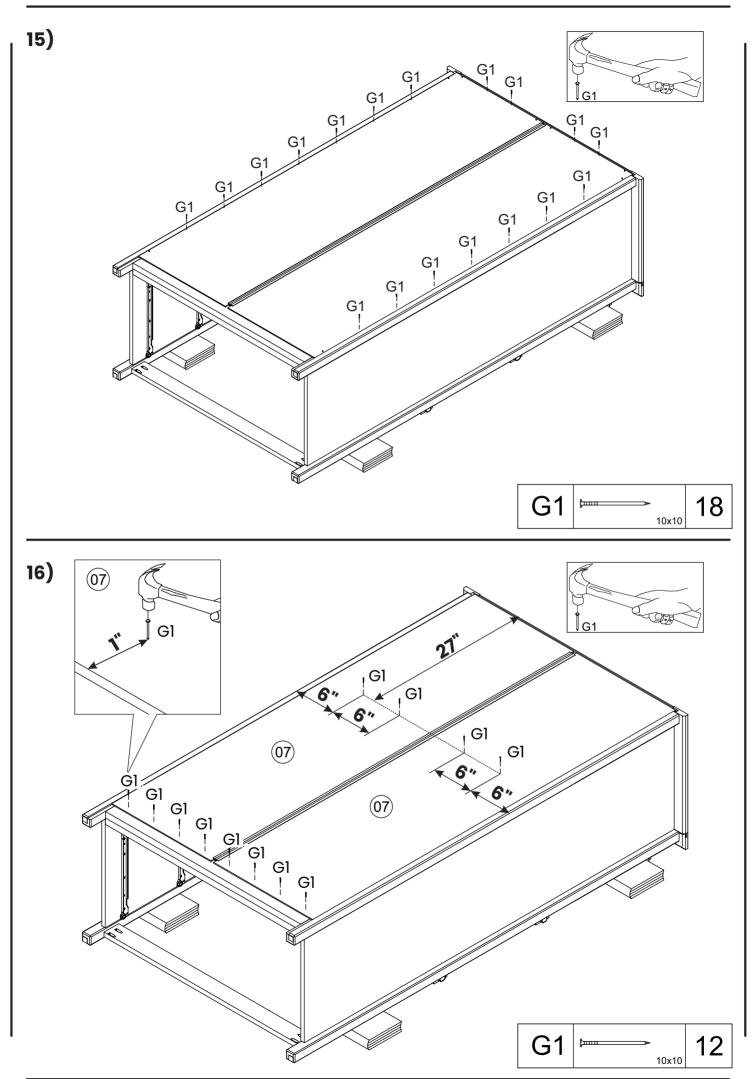


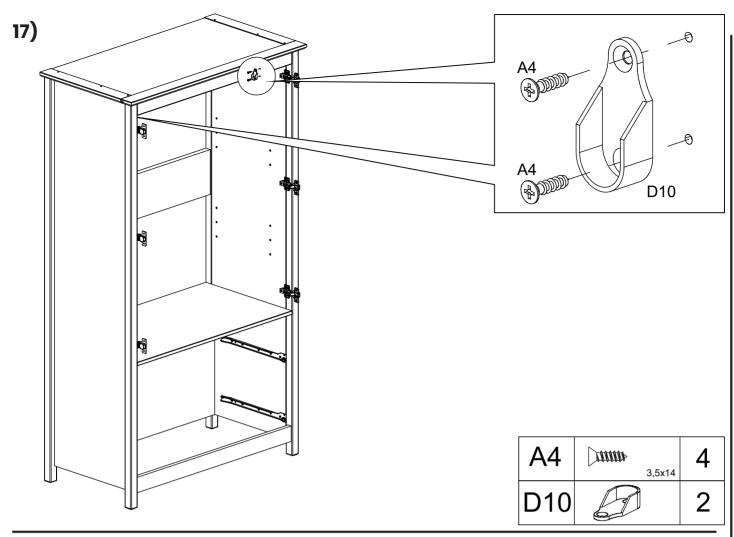


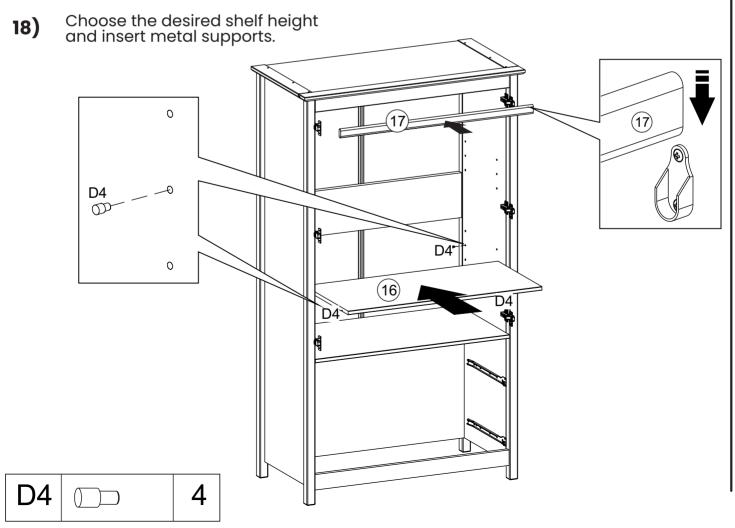


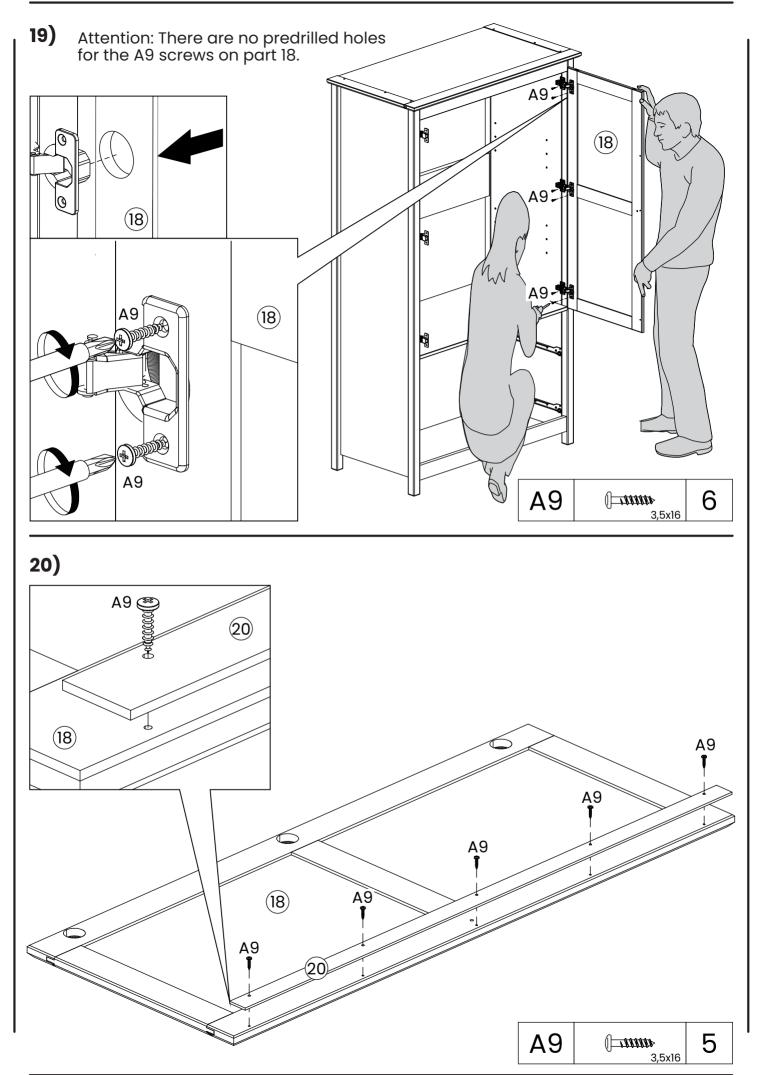

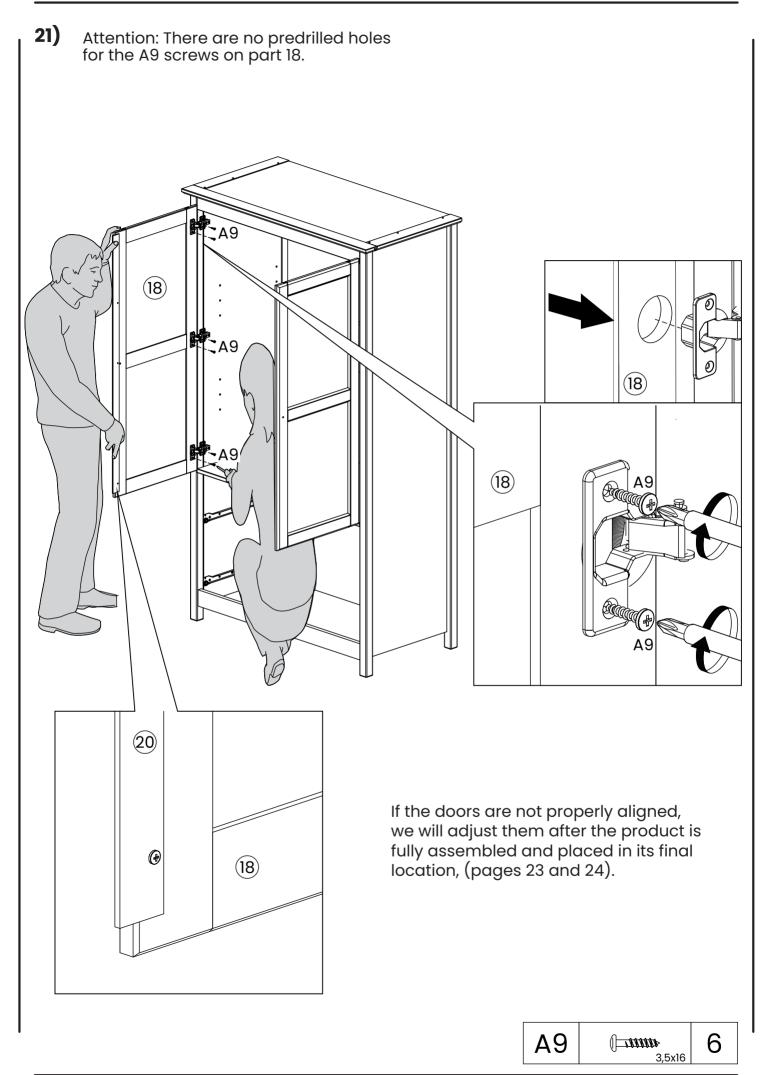


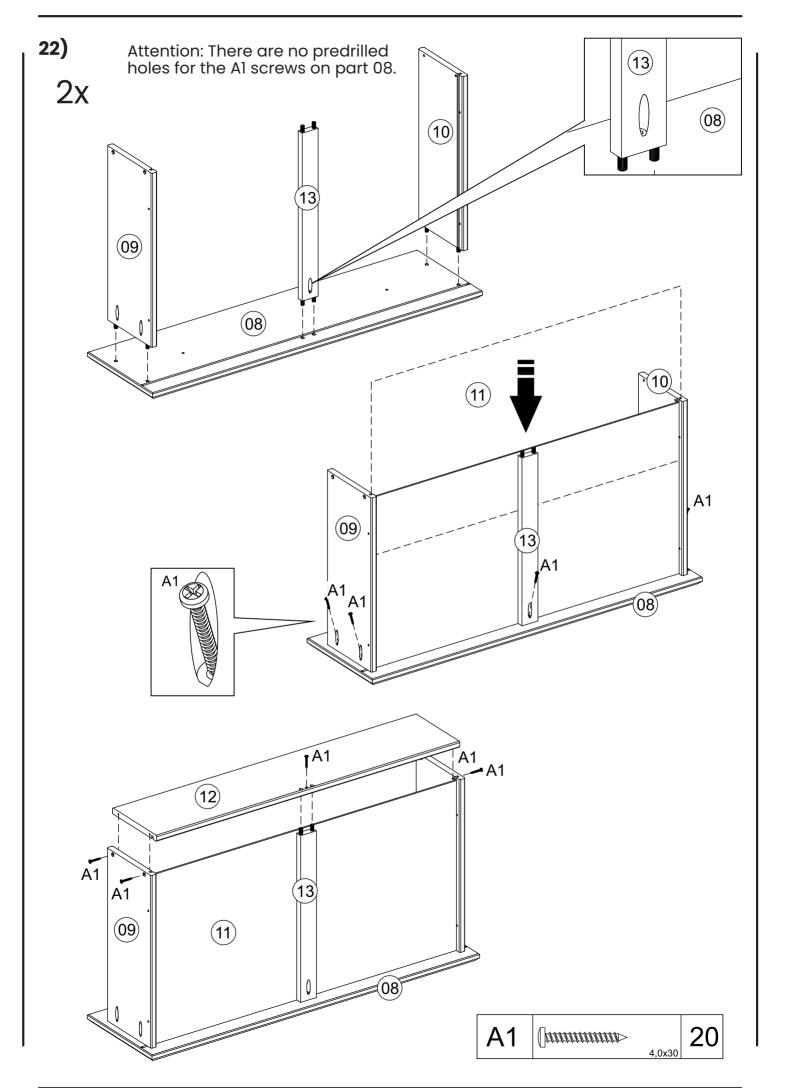


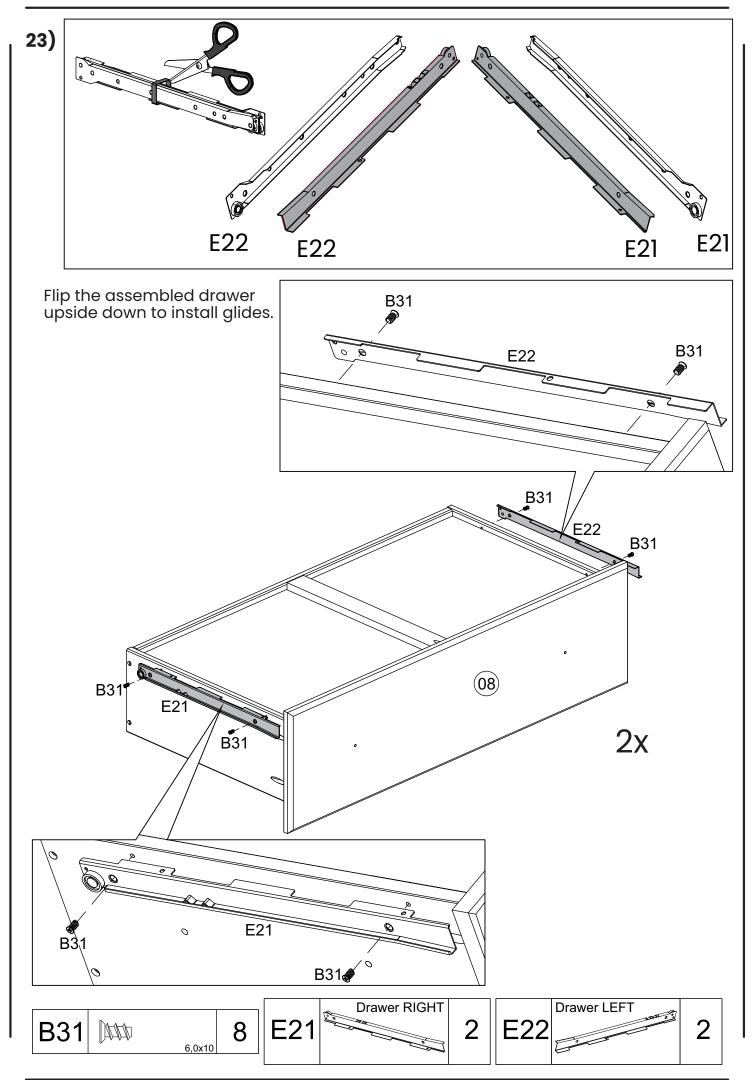

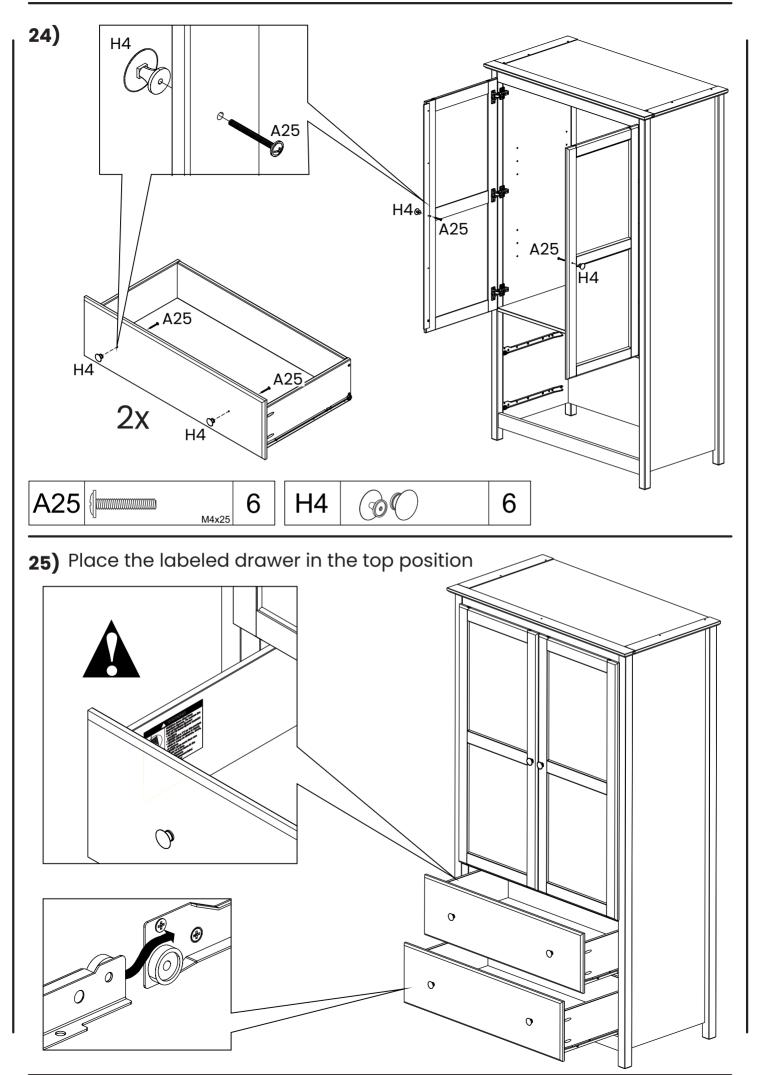



26) ANTI-TIPPING RESTRAINT KIT

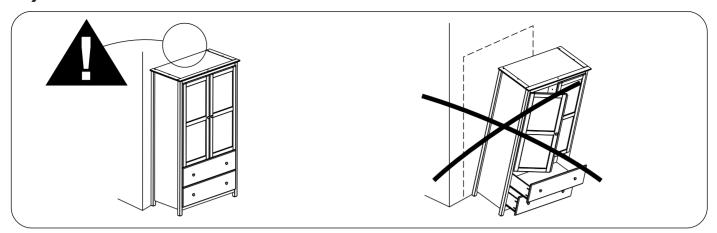


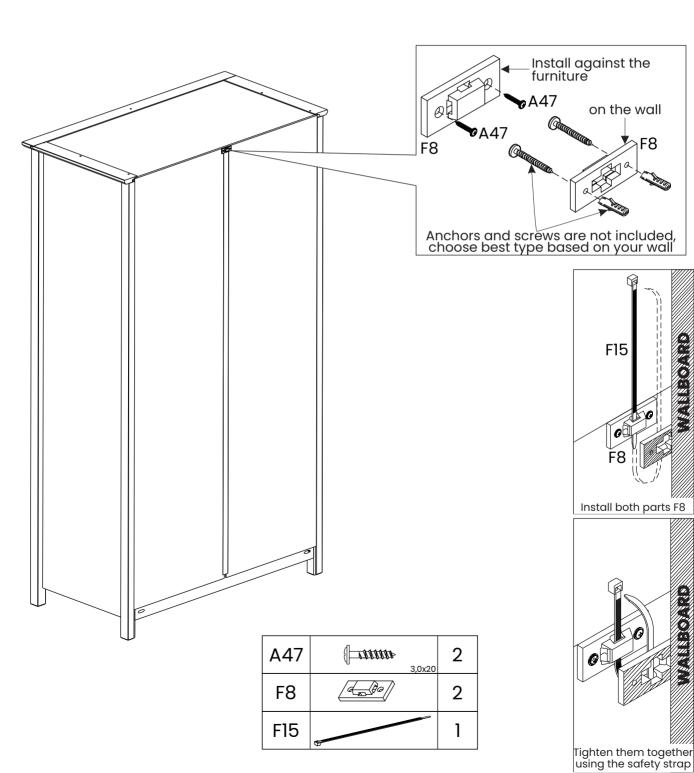


Removing the Gap Between the Door and the Frame

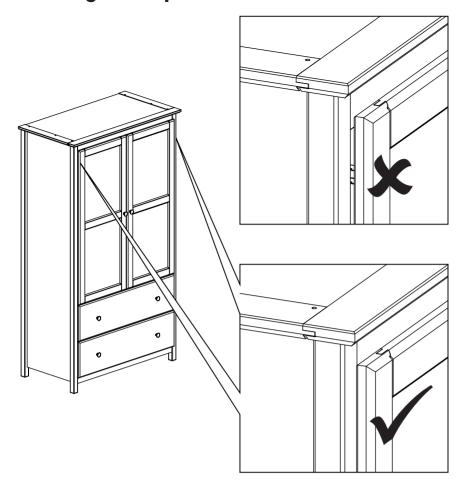

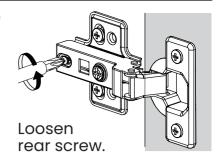


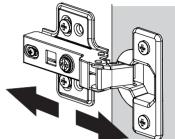


Adjust door forwards or backwards.

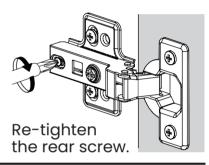


 Adjusting the Space Betweeen the Door and the Top Drawer

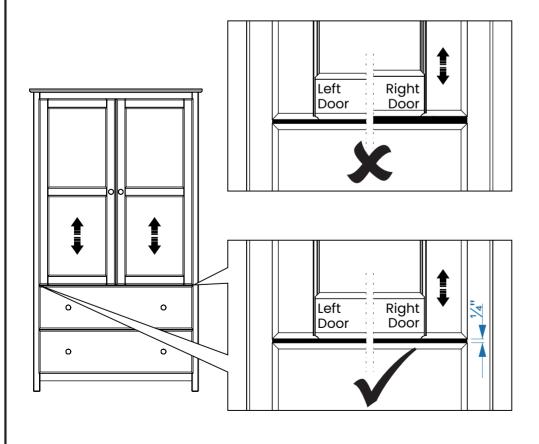




Loosen top and bottom screw on all hinges.

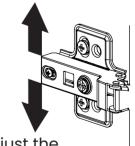


Adjust the door height.

 

Re-tighten the screws on all hinges.

Aligning Crooked Doors

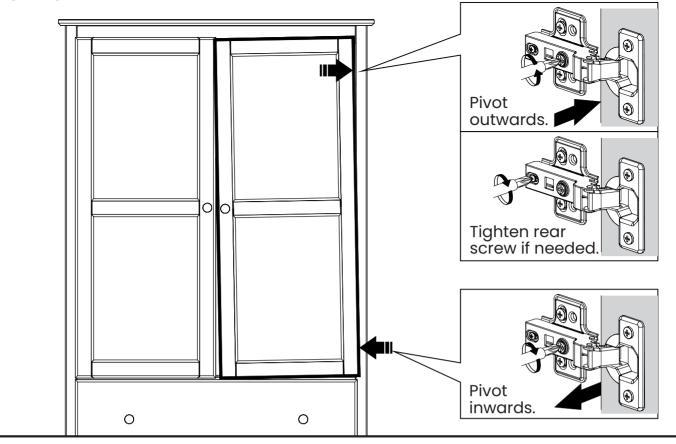

Aligning Crooked Doors

