LiftMaster

SL3000UL™ Series Heater

Model G6518SL

Connect the black, white and ground wire from the heater to the 120 Vac power supply as shown. When the heater switch is left in the "**ON**" position, the heater will turn on and off automatically as needed.

