# **Wiring Specifications**

Refer to the following steps for details on power and accessory wiring for the operator.

# A WARNING A

ALL AC ELECTRICAL CONNECTIONS TO THE POWER SOURCE AND THE OPERATOR MUST BE MADE BY A LICENSED ELECTRICIAN AND MUST OBSERVE ALL NATIONAL AND LOCAL ELECTRICAL CODES.

### **USE COPPER WIRE ONLY!**

### **AC Power Wiring**

- 1. Find the listing on this page corresponding to the model, voltage and horsepower rating of your operator.
- 2. The distance shown in the table is measured in feet from the operator to the power source. DO NOT EXCEED THE MAXIMUM DISTANCE. These calculations have been based on standard 115 V and 230 V supplies with a 10% drop allowable. If your supply is under the standard rating, the runs listed may be longer than what your application will handle, and you should not run wire too near the maximum distance for the gauge of wire you are using.
- 3. When large-gauge wire is used, a separate junction box (not supplied) may be needed for the operator power connection.
- 4. Wire length calculations are based on the National Electrical Code, Article 430 and have been carefully determined based on motor inrush, brake solenoids, and operator requirements.
- 5. Connect power in accordance with local codes. The green ground wire must be properly connected.
- 6. Wire insulation must be suitable to the application.
- 7. Electrical outlets are supplied in all 115 VAC models for convenience with occasional use or low power consumption devices only. If you choose to run dedicated equipment from these devices, it will decrease the distance for maximum length and the charts will no longer be accurate.

#### DC Control and Accessory Wiring

- 1. All control devices are now 24 VDC, which can be run up to 2000 feet with 14 AWG wire.
- Control wiring must be run in a separate conduit from power wiring.
   Running them together may cause interference and faulty signals in some accessories.
- 3. A three-wire shielded conductor cable is required to connect two operators together for dual operation. You must use Belden 8760 Twisted Pair Shielded Cable (or equivalent) only P/N 2500-1982, per foot). See Page 21 for details of this connection. Note: The shield wire should be connected in both the operators.

MODEL SWG SINGLE PHASE POWER WIRING				
VOLTS & HP	MAXIMUM DISTANCE (FEET)			
	SINGLE	DUAL	WIRE GAUGE	
115 VOLTS	222	111	12	
	354	177	10	
	566	283	8	
1/2-HP	900	450	6	
	1430	715	4	
	178	89	12	
115 VOLTS 3/4-HP	282	141	10	
	450	255	8	
	716	358	6	
	1140	570	4	
115 VOLTS	160	80	12	
	254	127	10	
1-HP	406	203	8	
I-DF	646	323	6	
	1026	513	4	
	760	380	12	
208 VOLTS	1200	600	10	
1/2-HP	1924	962	8	
1/2-ПР	3060	1830	6	
	4864	2432	4	
	604	302	12	
208 VOLTS	958	478	10	
3/4-HP	1526	763	8	
3/4-116	2424	1212	6	
	3856	1928	4	
	544	272	12	
208 VOLTS	864	432	10	
1-HP	1374	686	8	
1-111	2184	1092	6	
	3476	1738	4	
	894	447	12	
230 VOLTS	1422	711	10	
1/2-HP	2264	1132	8	
1/2-111	3600	1800	6	
	5724	2862	4	
	710	355	12	
230 VOLTS 3/4-HP	1128	564	10	
	1796	898	8	
	2852	1426	6	
	4538	2269	4	
	640	320	12	
230 VOLTS 1-HP	1016	508	10	
	1616	808	8	
	2570	1285	6	
	4090	2045	4	

MODEL SWG THREE PHASE POWER WIRING				
VOLTS & HP	MAXIMUM DIS SINGLE	STANCE (FEET) DUAL	WIRE GAUGE	
208 VOLTS 1/2-HP	1142 1816 2890	571 908 1445	12 10 8	
208 VOLTS 3/4-HP	920 1464 2330	460 732 1165	12 10 8	
208 VOLTS 1-HP	714 1136 1804	357 568 902	12 10 8	
230 VOLTS 1/2-HP	1344 2137 3400	672 1069 1700	12 10 8	
230 VOLTS 3/4-HP	1084 1723 2741	542 862 1371	12 10 8	
230 VOLTS 1-HP	840 1336 2124	420 668 1062	12 10 8	
460 VOLTS 1/2-HP	3841 6106 9712	1921 3053 4856	12 10 8	
460 VOLTS 3/4-HP	3279 5212 8291	1640 2606 4146	12 10 8	
460 VOLTS 1-HP	2689 4274 6798	1345 2437 3399	12 10 8	