Before you begin, read all warnings and installation instructions thoroughly.

Safety & Warnings

- Install in a well-ventilated area free from explosive gases and vapors.
- This product is rated dry/indoor installations.
- Only install compatible constant voltage LED fixtures. Contact technical support or visit the online product page for compatible products.
- Do not modify or disassemble this product beyond instructions or the warranty will be void.
- Ensure applicable wire is installed between driver, fixture, and any controls in between. When choosing wire, factor in voltage drop, amperage rating, and type (in-wall rated, wet location rated, etc.).
 Inadequate wire installation could overheat wires and cause fire.
- Packaging will indicate output voltage & max load. Never load the battery more than its max output rating. This may damage your battery or significantly decrease the battery discharge rate.

 
Quick Specs Output Voltage 10.8 ~ 12.6VDC Max Load 3800mAh battery: 2A / 24W Included Items • Rechargeable battery pack • Battery adapter (charger) • Male-to-male DC extension cable

Installation


- 1. Charge the battery pack (see Charging Instructions).
- 2. Once charging is complete, flip the battery pack switch to OFF (O) and plug in the male-to-male DC extension cable.
- Attach a compatible LED load. Do not overload the battery pack. A female DC connection is required to attach to the male-to-male DC extension cable.
- 4. Turn the battery pack switch to ON (|) and a red LED will light up on the battery pack.

Charging Instructions


1. Plug the adapter into a 120VAC receptacle, and a green LED will light up on the adapter.



Insert the male DC plug of the adapter into the battery pack.
 Turn the pack ON (|) and both the green and the red LED indicators light up on the adapter, although the red LED appears brightest.

 

 3. Charging is about 98% complete when the red light turns off and only the green led is illuminated on the adapter. A full charge may take between 1-3 hours.



4. Once fully charged, disconnect the battery pack from the adapter and flip the battery pack switch to OFF (O) to prevent battery drainage.

