

## Wood Heat Stoves & Solar

Info@WoodHeatStoves.com

www.WoodHeatStoves.com

Here is a [link to the AUGER ONLY](#)

TO FIND PARTS AND ORDER:

Put the part number in the search box on our web site to find and order those parts.

<p><b>PART DESCRIPTION</b>          (Most parts will work for All Pellet Masters )          Go here to see Stove Models</p>		
<p>A copy of Owner Manual          Specify Model on Dropdown list in cart.          This is a copy NOT the original</p>		
<p>Ash Pan Gasket (Bay window model)</p>	<p>PM 06-210007</p>	
<p>1 RPM Auger Motor &amp; Gear box All Models</p>	<p>PM 01-200001</p>	
<p><b>Auger</b>          (You will need bushing kit LISTED BELOW          if you have blue or green bearing)  <i>(the shaft and flights that goes through the burn          pot is know to wear down in about 8 years of          steady use)</i>           Specify Model on Dropdown list in cart.    <p style="text-align: center;">need a bushing kit?</p> </p>	<p>PM 01-140003</p>	
<p><b>Brass Bushing Kit</b> (auger bearing update)All Models  <b>Auger bearing</b> ( they have replace the bearing to          a bushing in the newer models you can upgrade          yours)          Click here for photo</p>	<p>PM 01-140004</p>	
<p><b>Brass Bushing ONLY. All Models</b>  <i>If your stove has a Bushing Plate Like this</i></p>	<p>Brass Bushing</p>	
<p><b>PRODUCT:</b> Pellet master Burn ring with air slits --          The top half of the burn pot</p>		

<b>Clinker Ring All Models</b> <i>this is the Cast ring that turns on top of the burn pot.</i>	PM 01-150003	
<b>Clinker Ring Gear All Models</b> <i>This is the Gear on the end of the auger that turns the clinker ring.</i>	PM 01-150004	
<b>Combustion Blower All Models</b> <i>This is the blower that Give air to the fire</i>	PM 01-200002	
<b>CONVECTION Blower</b> Specify Model on Dropdown list in shopping cart. This is the blower that blows air into the room	PM 01-200003	
<b>Door Gasket (Bay window 1" or 1 1/4" buy Locally)</b>	PM 01-210006	
<b>Electronic Controller All Models</b>	PM 01-190020	
<b>Hopper Lid Gasket All Models</b>	PM 01-210001	
<b>Low Fan Rheostat All Models</b>	PM 01-190023	
<b>Thermal Disc (auger overheat 120-10) All Models</b>	PM 01-190001	
<b>Thermal Disc (convection fan 130-15) All Models</b>	PM 01-190003	
<b>Thermal Disc (exhaust temp110-20) Close@110 All Models</b>	PM 01-190002	
<b>Thermal Disc (stove overheat 180-40) All Models</b>	PM 01-190004	