



Part number list on following page.

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.



**Stocked  
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
	Electric Log Assy		4030-055	Y
1	120VAC Heater Assembly (Must order both parts)		SRV4030-541	Y
			4050-104	Y
2	Upper Glass Retainer		4030-218	Y
3	Lenticular Lens		4030-840	Y
4	Acrylic Panel		4038-810	Y
5	Grate Assembly		4030-898	
6	Rock Retainer		4030-219	Y
7	Light Tray Assembly		SRV-020	Y
7.1	Flame Element Kit		4030-200	Y
7.2	Halogen Light	Qty 2 req	33961	Y
7.3	Motor w/Vinyl Cover Assy		4030-883	Y
8	31 in. Door Track	No longer available	4030-225	
9	Screen & Rod Assy		4030-050	Y
10	Door Pivot Clip		31527	
	Ember Bed		4030-914	Y
	Light Receptacle		33962	
	Light Shield	No longer available	4030-108	
	ON/OFF Switch Assembly		4030-847	Y
	Power Cord	No longer available	4030-802	Y
	Reflective Flame Decal		4021-190	Y
	<b>Refractory Assy</b>			
	Refractory Side LH		4030-831	Y
	Refractory Side RH		4030-832	Y
	Hearth Refractory LH		4030-833	
	Hearth Refractory RH		4030-834	
	Installation Manual		4030-240	