




H CONTROL PANEL(1) P.C.B.

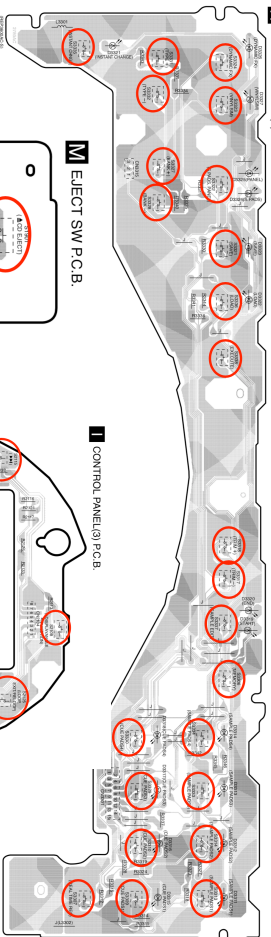


M EJECT SW P.C.B.

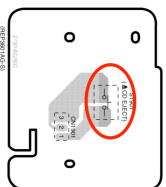

I CONTROL PANEL(3) P.C.B.

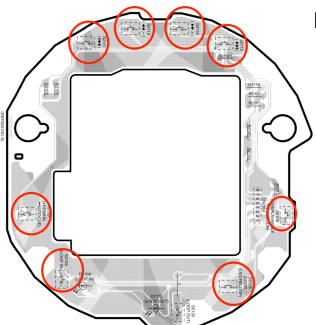

E CONTROL PANEL(2) P.C.B.

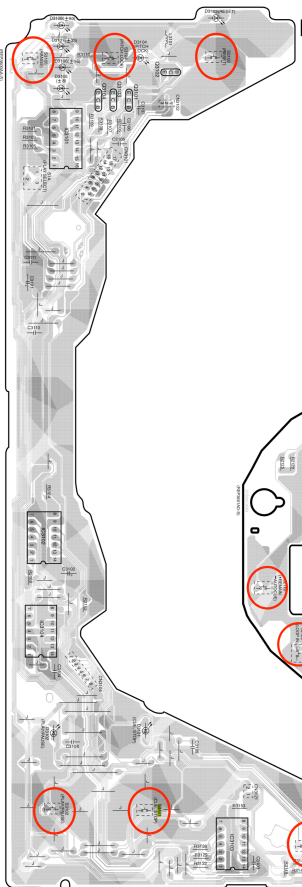

Circuit Reference	Switch Function
S1901:	CD eject button ( CD EJECT)
S2108:	Display angle setting, function setting button (†DISPLAY ANGLE -FUNCTION)
S2111:	Track skip, setting button ()
S2112:	Track search, setting button ()
S2115:	Track skip, setting button ()
S2116:	Track search, setting button ()
S2119:	Remaining time display, auto cue setting button (†REMAIN -AUTO CUE)
S2120:	End of loop play point setting, erase button (LOOP OUT)
S2125:	Play or cancel loop play button (LOOP, EXIT/RELOOP)
S2126:	Start of loop play point setting, erase button (LOOP IN)
S3101:	Cue setting, load and stop button (CUE STOP)
S3102:	Play pause button (PLAY/PAUSE)
S3103:	Normal tempo button (RESET)
S3104:	Fixed pitch play button (PITCH LOCK)
S3105:	Tempo variation range button (RANGE)
S3139:	Platter free wheel setting button (FREE WHEEL)
S3306:	Sample pad play mode, edit memory button (MEMORY)
S3307:	Cue point, pad memory button (REALTIME REC)
S3309:	Cue memory, play and erase button (CUE PADS1)
S3310:	Cue memory, play and erase button (CUE PADS2)
S3313:	Sampling data record, play, and erase button (SAMPLE PADS1)
S3314:	Sampling data record, play, and erase button (SAMPLE PADS2)
S3317:	Modify data button (TRIM -)
S3318:	Modify data button (TRIM +)
S3321:	Save SD Memory Card data button (SAVE)
S3322:	SD Memory Card save mode select button (S.PADS, PANEL)
S3323:	Analog player simulation button (VINYL SIM)
S3324:	Special effects button (DYNAMIC FX)
S3327:	Cue bank, file number select button (BANK +)
S3328:	Cue bank, file number select button (BANK -)
S3329:	Cue memory, play and erase button (CUE PADS3)
S3330:	Cue memory, play and erase button (CUE PADS4)

S3331:	Simulation, effect type select button (TYPE +)
S3332:	Simulation, effect type select button (TYPE -)
S3333:	Sampling data record, play, and erase button (SAMPLE PADS3)
S3334:	Sampling data record, play, and erase button (SAMPLE PADS4)
S3335:	Instant play select button (INSTANT CHANGE)
S3336:	Load SD Memory Card data button (LOAD)
S3337:	Play mode and edit item select button (SAMPLE EDIT)
S3338:	Execute button (EXECUTE)