

LIMITED LIFETIME WARRANTY & INSTRUCTIONS MANUAL

FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, Date and Day of the Week)
- Calendar Mode (Month, Date, and Day of the Week)
- (2) 24 Hour Daily and Weekly Alarms
- Hourly Chime: One 'Beep' sound every full Hour
- Chronograph Mode: Hours, Minutes, Seconds, and 1/100 of a second with Lap Operation
- Countdown Timer
- Second Time Zone
- 12/24 Hour (Military Time)
- Water Resistant as indicated on the watch
- INSTALITE - Electro Luminescent Display

SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, Date, and Day of the Week.
2. From Time Telling Mode, press and hold 'C'. Calendar Mode appears and the Month, Date, and Day of the Week are displayed. Release 'C' to return to Time Telling Mode.
3. From Time Telling Mode, press 'B' once. Chronograph appears. Press 'B' four times to return to Time Telling Mode.
4. From Time Telling Mode, press 'B' twice. Alarm Mode appears. Press 'B' three times to return to Time Telling Mode.
5. From Time Telling Mode, press 'B' three times. Countdown Timer Mode appears. Press 'B' twice to return to Time Telling Mode.
6. From Time Telling Mode, press 'B' four times. Dual Time Zone Mode appears. Press 'B' once to return to Time Telling Mode.

SETTING THE TIME AND CALENDAR


1. From Time Telling Mode, press and hold 'A'. Seconds flash. Press 'C' to zero out the Seconds.
- NOTE:** Zeroing out 30 or more seconds automatically adds one minute to time.
2. Press 'B'. Hours flash. Press 'C' to advance the Hour.
- NOTE:** Pressing and holding 'C' will advance digits rapidly. When 12 Hour Format is selected, 'PM' indicates 'p.m.' times; there is no indicator for 'a.m.' times.
3. Press 'B'. Minutes flash. Press 'C' to advance the Minutes.
 4. Press 'B'. Months flash. Press 'C' to advance the Months.
 5. Press 'B'. The Date flashes. Press 'C' to advance the Date.
 6. Press 'B'. The Day flashes. Press 'C' to advance the Day.
 7. Press 'B'. 12/24 Hour Time Format flashes. Press 'C' to select either 12 Hour Time or 24 Hour (Military) Time.
- NOTE:** '12' indicates 12 Hour Format; '24' indicates 24 Hour (Military) Time.
8. Press 'A' to end sequence and return to Time Telling Mode.

SETTING THE 24 HOUR ALARM

1. From Time Telling Mode, press 'B' twice to enter the Alarm Mode.
 2. Press and hold 'A'. Alarm Hours flash. Press 'C' to advance the Alarm Hour.
 3. Press 'B'. Alarm Minutes flash. Press 'C' to advance the Alarm Minute.
- NOTE:** Pressing and holding 'C' will advance digits rapidly.
4. Press 'B'. Alarm Number flashes. Press 'C' to select either Alarm One (t1) or Alarm Two (t2).
 5. Press 'A' to end set sequence.
 6. Press 'B' to return to Time Telling Mode.

DUAL TIME ZONE

1. From Time Telling Mode, press 'B' four times to enter the Second Time Zone Mode.
 2. Press and hold 'A'. Hours flash. Press 'C' to advance the Hour.
 3. Press 'B'. Minutes flash. Press 'C' to adjust the Minutes.
 4. Press 'A' to end set sequence.
 5. Press 'B' to return to Time Telling Mode.
- NOTE:** The Dual Time (Second Time Zone) Clock may be used to keep track of a foreign time.

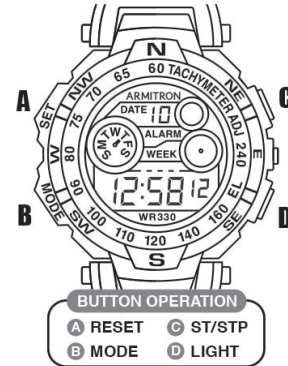

ACTIVATING ALARM + HOURLY CHIME

1. While in Alarm Mode, press 'C' to activate the Alarm. The Alarm Symbol appears to indicate the Alarm will sound at the preset Alarm Time for about 60 seconds or until any button is pressed.
2. Press 'C' again to activate both the Alarm and the Hourly Chime. The Hourly Chime Symbol appears to indicate the Hourly Chime will sound every hour on the hour.
3. Press 'C' again to deactivate the Alarm.
4. Press 'C' again to deactivate the Hourly Chime.
5. Press 'B' to return to Time Telling Mode.

STOPWATCH

1. From Time Telling Mode, press 'B' once to enter the Stopwatch Mode.
2. Press 'C' to start timing.
3. Press 'C' again to stop timing.
4. Press 'A' to reset to zero.
5. Press 'B' to return to Time Telling Mode.

SPLIT TIME

1. While in the Stopwatch Mode, press 'C' to start timing.
2. Press 'A' to measure and display Split Times.
3. Press 'C' to stop timing at the end of the event.
4. Press 'A' to reveal the final Split Time.
5. Press 'A' again to reset to zero.
6. Press 'B' to return to Time Telling Mode.

COUNTDOWN TIMER

1. From Time Telling Mode, press 'B' three times to enter the Timer Mode.
 1. Press and hold 'A'. Hours flash. Press 'C' to adjust the Hour.
 3. Press 'B'. Minutes flash. Press 'C' to adjust the Minutes.
 4. Press 'B'. Seconds flash. Press 'C' to adjust the Seconds.
 5. When the Countdown Timer is set, press 'A' to end set sequence and return to Timer Mode.
 6. Press 'C' to start the Countdown Timer.
 7. If desired, press 'C' again to stop the Countdown Timer. Press 'C' again to resume the Countdown Timer.
- NOTE:** The Countdown timing will continue in any mode until 'C' is pressed. When the Timer has expired, the alarm will sound for about 60 seconds or until any button is pressed.
8. Press 'C' to stop the Timer.
 9. Press 'B' to return to Time Telling Mode.

EL LIGHT FEATURE

1. Press 'D' in any mode to illuminate the watch face. The backlight will remain lit for 2 to 3 seconds.
- NOTE:** EXCESSIVE USE OF LIGHT WILL SHORTEN BATTERY LIFE.

LIMITED LIFETIME WARRANTY & INSTRUCTIONS MANUAL

CHANGING THE BATTERY

Change the battery when the watch becomes slow, the readout darkens or does not appear, or the backlight fails. Before removing the old battery, be sure to denote its polarity so that the new battery is installed in exactly the same way. Replace with the same kind or equivalent only. This watch contains precise electronic components and should only be opened by a qualified watch technician. However, it is not necessary to return your watch to the manufacturer for battery replacement. It is recommended that you bring your timepiece to a local jeweler.

WATER RESISTANCE

This is a **WATER RESISTANT** watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron Adventure approved Service Centers are available in your area. These repair facilities use Armitron Adventure parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

RETURN YOUR WATCH FOR SERVICING

Please call **(718) 482-4195** for a listing of all approved and authorized service centers and locations, or visit our website at:

WWW.ARMITRON.COM

YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE. Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.

LIMITED WARRANTY

This Armitron Adventure Watch is warranted to you, the owner, for your lifetime against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option, provided that it is returned prepaid with a check or money order for \$9.95 to cover the cost of handling and return postage. This charge does not apply to California residents. (This is not a repair charge.) **DO NOT SEND CASH.** No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made. The movement of any timepiece requires periodic cleaning/timing which is not a defect and, as such not warranted. After one year from the date of purchase each cleaning/timing will be performed as required without charging a fee in excess of the specified \$9.95 handling charge. The above remedy is exclusive. Armitron Adventure shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Center for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. In the event of a problem with warranty service or performance, you may be able to go to Small Claims Court, a State Court or a Federal District Court. **CALIFORNIA RESIDENTS ONLY!!** There is no handling charge for in warranty service. Charges apply only for NON-WARRANTY ITEMS such as cleaning after one year and other routine maintenance.