

LIMITED WARRANTY

This EGC Watch is warranted to you, the owner, for your lifetime against all defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and excludes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option, provided that it is returned prepaid with a check or money order for \$9.95 to cover the cost of handling and return postage. This charge does not apply to California residents. (This is not a repair charge.) DO NOT SEND CASH. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made.

The movement of any timepiece requires periodic cleaning/timing which is not a defect and, as such not warranted. After one year from the date of purchase each cleaning/timing will be performed as required without charging a fee in excess of the specified \$9.95 handling charge. The above remedy is exclusive, EGC shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please use our Service Center for quick and inexpensive repairs on your watch. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, or the

exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. In the event of a problem with warranty service or performance, you may be able to go to Small Claims Court, a State Court or a Federal District Court.

CALIFORNIA RESIDENTS ONLY!!

There is no handling charge for in warranty service. Charges apply only for NON-WARRANTY ITEMS such as cleaning after one year and other routine maintenance.

NOTES:

ARMITRON®

M1178

LIMITED WARRANTY & INSTRUCTIONS MANUAL



VISIT US AT OUR WEBSITE
WWW.ARMITRON.COM

LAST UPDATE 6/12/2017



FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, Date and Day of the Week)
- Calendar Mode (Month, Date, and Day of the Week)
- (3) 24 Hour Alarms
- Hourly Chime: One 'Beep' sound every full Hour
- Chronograph Mode: Hours, Minutes, Seconds and 1/100 of a Second with Lap Operation
- Countdown Timer
- Second Time Zone
- 12/24 Hour (Military Time)
- Water Resistant as indicated on the watch
- INSTALITE – Electro Luminescent Display

SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, Date, and Day of the Week.
2. From Time Telling Mode, press and hold 'C'. Calendar Mode appears and the Month, Date, and Day of the Week are displayed. Release 'C' to return to Time Telling Mode.
3. From Time Telling Mode, press 'B' once. Chronograph appears. Press 'B' four times to return to Time Telling Mode.
4. From Time Telling Mode, press 'B' twice. Alarm Mode appears. Press 'B' three times to return to Time Telling Mode.
5. From Time Telling Mode, press 'B' three times. Countdown Timer Mode appears. Press 'B' twice to return to Time Telling Mode.
6. From Time Telling Mode, press 'B' four times. Second Time Zone Mode appears. Press 'B' once to return to Time Telling Mode.

SETTING THE TIME AND CALENDAR

1. From Time Telling Mode, press and hold 'A'. Seconds flash. Press 'C' to zero out the Seconds.
2. Press 'B'. Hours flash. Press 'C' to advance the Hour. *NOTE: Pressing and holding 'C' will advance digits rapidly. When 12 Hour Format is selected, 'P' indicates 'p.m.' times; there is no indicator for 'a.m.' times.*
3. Press 'B'. Minutes flash. Press 'C' to advance the Minutes.
4. Press 'B'. Months flash. Press 'C' to advance the Months.
5. Press 'B'. The Date flashes. Press 'C' to advance the Date.
6. Press 'B'. The Day of the Week flashes. Press 'C' to advance the Day.
7. Press 'B'. 12/24 Hour Time Format flashes. Press 'C' to select either 12 Hour Time or 24 Hour (Military) Time. *NOTE: 'PM' indicates 'p.m.' times in 12 Hour Format; there is no indicator for 'a.m.' times. '24HR' indicates 24 Hour (Military Time).*
8. Press 'A' to end sequence and return to Time Telling Mode.