

LIMITED WARRANTY

This EDC Watch is warranted to you, the owner, for your lifetime against defects in material or workmanship. This warranty does not apply to normal wear and tear or abuse and includes batteries, case, strap, crystal, or bracelet. In the event of a defect or malfunction of the movement within this period it will be repaired or replaced, at our option, provided that it is returned prepaid with a check or money order for \$5.95 to cover the cost of handling and return postage. This charge does not apply to California residents. (This is not a repair charge.) DO NOT SEND CASH. No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted is required such as case, crystal, strap, bracelet or batteries in which event a moderate charge will be made.

The movement of any timepiece requires periodic cleaning/tuning which is not a defect and, as such, not warranted. After one year from the date of purchase each cleaning/tuning will be performed as required without charging a fee in excess of the specified \$35.00 handling charge. The above remedy is exclusive. EDC shall not be liable for any incidental or consequential damages. Should any other part of your watch require repair, please see our Service Center for quick and inexpensive repairs on your watch. This warranty gives you specific rights and you may also have other rights which may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, or the

extension or limitation of incidental or consequential damages, so the above limitations and conditions may not apply to you. In the event of a problem with warranty service or performance, you may be able to go to Small Claims Court, a State Court or a Federal District Court.

CALIFORNIA RESIDENTS ONLY

There is no handling charge for its warranty service. Charge apply only for NON-WARRANTY ITEMS such as cleaning after one year and other routine maintenance.

NOTES:

ARMITRON®

MD1705

LIMITED WARRANTY & INSTRUCTIONS MANUAL



VISIT US AT OUR WEBSITE
WWW.ARMITRON.COM

LAST UPDATED 10/2007



SETTING & ACTIVATING THE ALARM

1. From Time Telling Mode, press 'B' three times to enter the Alarm Mode.
2. Press 'D' to select the Hourly Chime or Alarms 1-5.
3. Press 'C' to activate or deactivate the Hourly Chime or the selected Alarm.

NOTE: When an Alarm is activated, the Alarm Symbol appears on the display to indicate that the Alarm will sound at the preset Alarm Time for 60 seconds or until any button is pressed.

4. While in the Alarm Mode, press 'A' The selected Alarm's Hours flash, Press 'C' to advance the Alarm Hours.
5. Press 'B' The selected Alarm's Minutes flash. Press 'C' to advance the Alarm Minutes.

12/24 HOUR (MILITARY) TIME

From Time Telling Mode, press 'C' to select either 12 Hour or 24 Hour (Military) Time. When 12 Hour Format is selected, 'AM' indicates 'a.m.' times; 'PM' indicates 'p.m.' times.

EL LIGHT FEATURE

1. Press 'D' in any mode to illuminate the watch face.

The backlight will remain lit for 2 to 3 seconds.

NOTE: EXCESSIVE USE OF LIGHT WILL SHORTEN BATTERY LIFE.

FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, Month, Date, and Day of the Week)
- (5) 24 Hour Alarms
- Chronograph Mode: Hours, Minutes, Seconds and 1/100th of a Second with Lap Operation
- Hourly Chime: One 'Beep' sound every full Hour
- Countdown Timer
- 12/24 Hour (Military Time)
- Water Resistant as indicated on the watch

6. Press 'A' to end set sequence.
7. Press 'B' to return to Time Telling Mode.

CHRONOGRAPH

1. From Time Telling Mode, press 'B' once to enter the Chronograph Mode.
2. Press 'C' to start timing.
3. Press 'C' again to stop timing.
4. Press 'A' to reset to zero.
5. Press 'B' three times to return to Time Telling Mode.

LAP OPERATION

1. While in the Chronograph Mode, press 'C' to start timing.
2. Press 'A' to measure Laps.
3. Press 'C' to stop timing at the end of the event.
4. Press 'A' to reset to zero.
5. Press 'B' three times to return to Time Telling Mode.

CHANGING THE BATTERY

Change the battery when the watch becomes slow, the readout darkens or does not appear, or the backlight fails. Before removing the old battery, be sure to denote its polarity so that the new battery is installed in exactly the same way. Replace with the same kind or equivalent one. This watch contains precise electronic components and should only be opened by a qualified watch technician. However, it is not necessary to return your watch to the manufacturer for battery replacement. It is recommended that you bring your timepiece to a local jeweler.

WATER RESISTANCE

This is a WATER RESISTANT Watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, Month, Date, and Day of the Week.
2. From Time Telling Mode, press 'B' once, Chronograph Mode appears. Press 'B' three times to return to Time Telling Mode.
3. From Time Telling Mode, press 'B' twice, Countdown Timer Mode appears. Press 'B' twice to return to Time Telling Mode.
4. From Time Telling Mode, press 'B' three times, Alarm Mode appears. Press 'B' to return to Time Telling Mode.

SETTING THE TIME AND CALENDAR

Analog

Push the Crown, 'E' out. The second hand stops. Rotate the Crown in either direction until the desired time is obtained. Push the Crown back in to re-engage time keeping.

COUNTDOWN TIMER

1. From Time Telling Mode, press 'B' twice to enter the Timer Mode.
2. Press and hold 'A'. Timer Hours flash. Press 'C' to advance the Hours.
3. Press 'B'; Timer Minutes flash. Press 'C' to advance the Minutes.
4. Press 'B'; Timer Seconds flash. Press 'C' to advance the Seconds.
5. When the Countdown Time is set, press 'A' to end the set sequence and return to Timer Mode.
7. Press 'C' to start the Timer.
8. If desired, press 'C' again to stop the Timer. Press 'C' again to resume the countdown.

USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron approved Service Centers are available in your area. These repair facilities use Armitron parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

Digital

1. From Time Telling Mode, press and hold 'A'. Seconds flash. Press 'C' to zero out the Seconds.
NOTE: Zeroing out 30 or more seconds automatically adds one minute to time.
2. Press 'B'; Hours flash. Press 'C' to advance the Hour.
NOTE: Pressing and holding 'C' will advance the digits rapidly. When 12 Hour Format is selected, 'AM' indicates 'a.m.' times; 'PM' indicates 'p.m.' times.
3. Press 'B'; The Minutes flash. Press 'C' to advance the Minutes.
4. Press 'B'; The Year flashes. Press 'C' to advance the Year.
5. Press 'B'; The Month flashes. Press 'C' to advance the Month.
6. Press 'B'; The Date flashes. Press 'C' to advance the Date.
7. Press 'A' to end set sequence and return to Time Telling Mode.

NOTE: The countdown will continue in any mode until 'C' is pressed. When the Timer counts down to zero, the Timer Alarm ("Beep Beep Beep") will sound for 60 seconds or until any button is pressed.

9. Press 'C' to stop the Timer.
10. Press 'B' twice to return to Time Telling Mode.

TO RETURN YOUR WATCH FOR SERVICING:

Please call (718) 482-4195 for a listing of all approved and authorized service centers and locations, or visit our website at WWW.ARMITRON.COM.

YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE.

Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.