

INSTRUCTIONS MANUAL

FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, Date and Day of the Week)
- Calendar Mode (Month, Date, and Day of the Week)
- 24 Hour Alarm
- Hourly Chime: One 'Beep' sound every full Hour
- Chronograph Mode: Hours, Minutes, Seconds, and 1/100 of a second with Lap Operation
- Second Time Zone
- 12/24 Hour (Military Time)
- Water Resistant as indicated on the watch
- INSTALITE - Electro Luminescent Display

EL LIGHT FEATURE

1. Press 'D' in any mode to illuminate the watch face. The backlight will remain lit for 3 seconds.

NOTE: Excessive use of the light will shorten battery life.

12/24 HOUR (MILITARY) TIME

While in the Time Telling Mode, press 'A' to select either 12 Hour Time or 24 Hour (Military Time).

SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, Month, Date, and Day of the Week.
2. From Time Telling Mode, press and hold 'C'. Calendar Mode appears and the Month, Date, and Year are displayed. Release 'C' to return to Time Telling Mode.
3. From Time Telling Mode, press 'B'. Alarm Mode appears. Press 'B' three times to return to Time Telling Mode.
4. From Time Telling Mode, press 'B' twice. Chronograph Mode appears. Press 'B' twice to return to Time Telling Mode.
5. From Time Telling Mode, press 'B' three times. Second Time Zone appears. Press 'B' to return to Time Telling Mode.

SETTING THE TIME AND CALENDAR

1. From Time Telling Mode, press and hold 'A'. Seconds flash. Press 'C' to zero out the Seconds.
2. Press 'B'. Hours flash. Press 'C' to advance the Hour. **NOTE: Pressing and holding 'C' will advance the digits rapidly. When 12 Hour Format is selected, 'A' indicates 'a.m.' times; 'P' indicates 'p.m.' times.**
3. Press 'B'. Minutes flash. Press 'C' to advance the Minutes.
4. Press 'B'. The Year flashes. Press 'C' to advance the Year.
5. Press 'B'. Months flash. Press 'C' to advance the Months.
6. Press 'B'. The Date flashes. Press 'C' to advance the Date.
7. Press 'A' to end sequence and return to Time Telling Mode.

SETTING THE ALARM


1. From Time Telling Mode, press and hold 'B' to enter the Alarm Mode. Press 'A'. The Alarm Hour flashes.
2. Press 'C' to adjust the Alarm Hours.
3. Press 'B'. Alarm Minutes flash. Press 'C' to adjust the Alarm Minutes.
4. Press 'A' to end the set sequence.
5. Press 'B' three times to return to Time Telling Mode

STOPWATCH

1. From Time Telling Mode, press 'B' once to enter the Chronograph Mode.
2. Press 'C' to start timing.
3. Press 'C' again to stop timing.
4. Press 'A' to reset to zero.
5. Press 'B' twice to return to Time Telling Mode.

SPLIT TIME

1. While in the Stopwatch Mode, press 'C' to start timing.
2. Press 'D' to measure and display Split Times.
3. Press 'C' to stop timing at the end of the event.
4. Press 'A' to reveal the final Split Time.
5. Press 'A' again to reset to zero.
6. Press 'B' twice to return to Time Telling Mode.

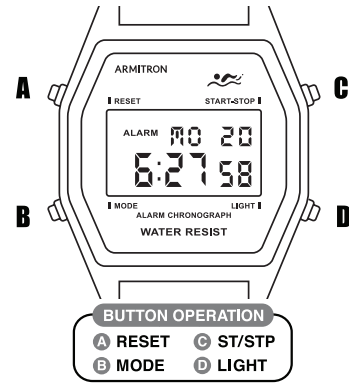

SETTING THE 24 HOUR ALARM

1. From Time Telling Mode, press and hold 'B' to enter the Alarm Mode. Alarm Hours flash.
2. Press 'D' to advance the Alarm Hour.
3. Press 'C'. Alarm Minutes flash. Press 'D' to advance the Alarm Minutes.
4. Press 'B' to end sequence and return to Time Telling Mode.

ACTIVATING ALARM + HOURLY CHIME

1. While in the Alarm Mode, press 'C' to activate the Alarm. The Alarm symbol appears to indicate that the Alarm is activated and will sound at the preset Alarm Time for 60 seconds or until 'A', 'B', or 'C' is pressed.
2. Press 'C' again to deactivate the Alarm and to activate the Hourly Chime. The Hourly Chime will sound with one "Beep" every hour on the hour.
3. Press 'C' again to activate both the Alarm and the Hourly Chime.
4. Press 'C' again to deactivate both the Alarm and the Hourly Chime.

SECOND TIME ZONE

1. From Time Telling Mode, press 'B' three times to enter the Second Time Zone Mode.
 2. Press and hold 'A'. Hours flash. Press 'C' to advance the Hour.
 3. Press 'B'. Minutes flash. Press 'C' to adjust the Minutes.
 4. Press 'A' to end set sequence.
 5. Press 'B' to return to Time Telling Mode.
- NOTE: The Second Time (Second Time Zone) Clock may be used to keep track of a foreign time.**

INSTRUCTIONS MANUAL

CHANGING THE BATTERY

Change the battery when the watch becomes slow, the readout darkens or does not appear, or the backlight fails. Before removing the old battery, be sure to denote its polarity so that the new battery is installed in exactly the same way. Replace with the same kind or equivalent only. This watch contains precise electronic components and should only be opened by a qualified watch technician. However, it is not necessary to return your watch to the manufacturer for battery replacement. It is recommended that you bring your timepiece to a local jeweler.

WATER RESISTANCE

This is a **WATER RESISTANT** watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron Adventure approved Service Centers are available in your area. These repair facilities use Armitron Adventure parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

RETURN YOUR WATCH FOR SERVICING

Please call **(718) 482-4195** for a listing of all approved and authorized service centers and locations, or visit our website at:

WWW.ARMITRON.COM

YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE. Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.