
ASSEMBLY INSTRUCTION BRUNSWICK 120 TV STAND 520977

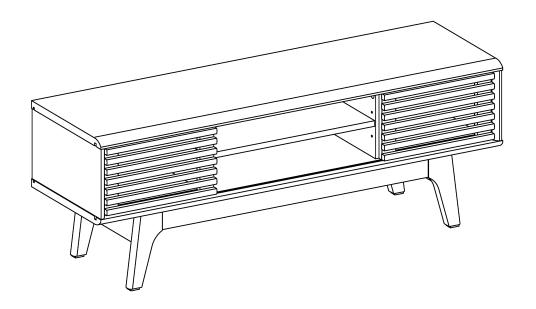

Keep these instructions for future reference

WARNING

Read instructions carefully. Check no parts are missing.

Assemble the furniture on a soft level surface to avoid damaging the furniture or your floor. Carefully identify each component, especially those that are similar.

The most common mistake is getting things back to front.

Separate and identify each component from the hardware pack and rest each one in it's proper location before fastening.

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.


If there is a need to move the furniture, please remove all loose items and have extra hands to help lift the furniture to the desired location. Dragging the furniture will damage both the furniture and the floor.

Regularly check and re-tighten (if necessary) all bolts on furniture that you have assembled yourself.




ALLOW 45 MIN




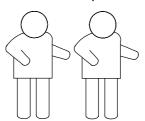




Tools Required

 

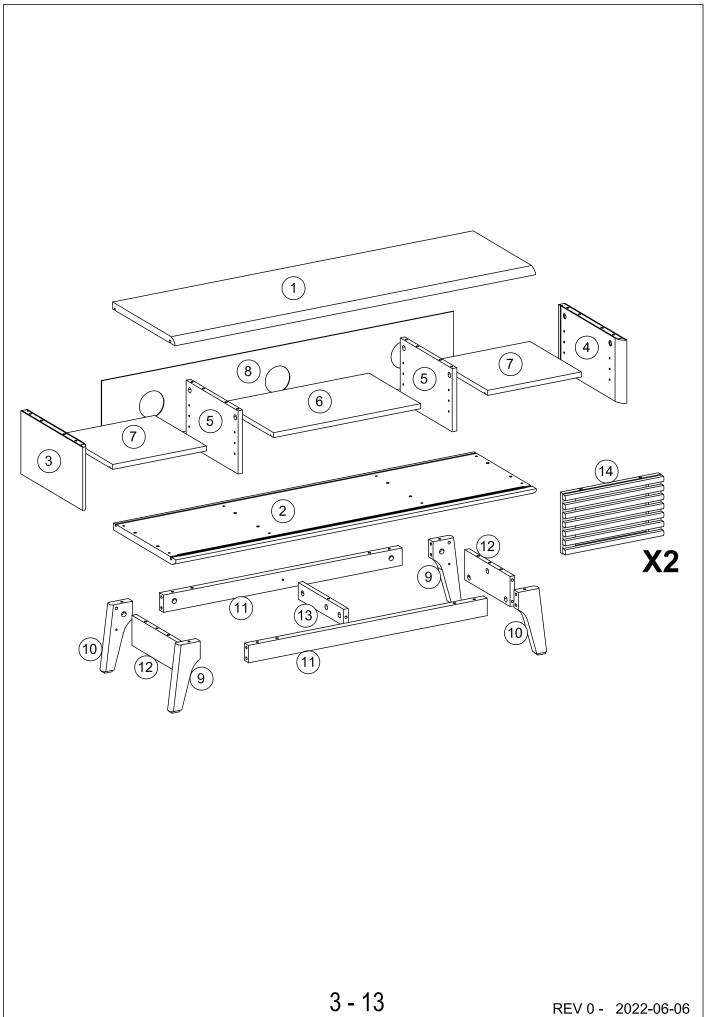



CHECK LIST




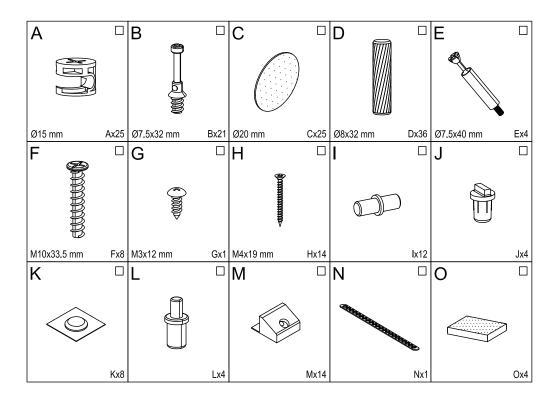



HARDWARE LIST

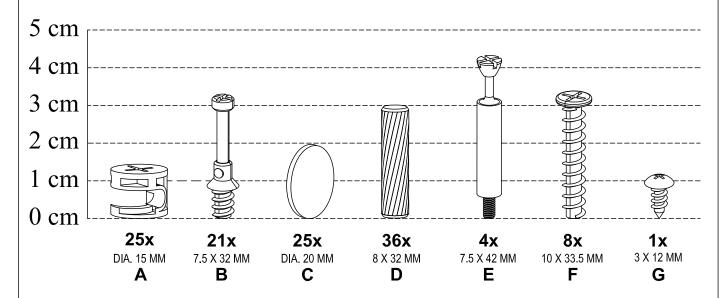

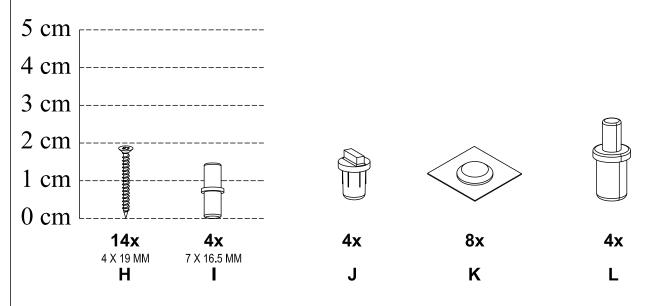


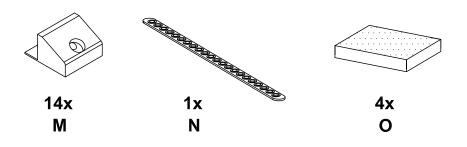


 


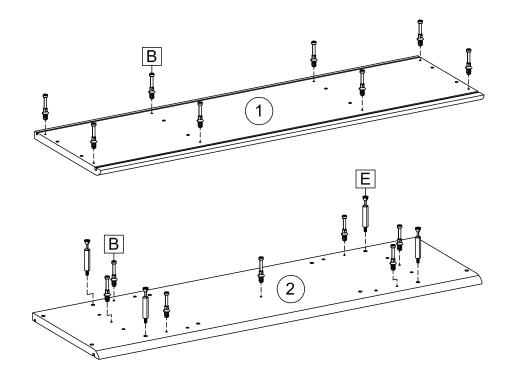 


 


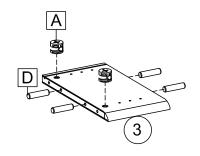

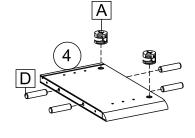


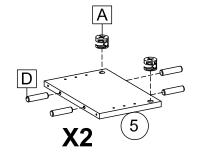


 







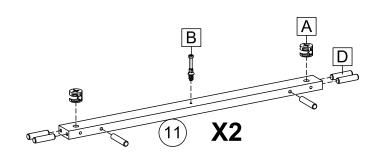


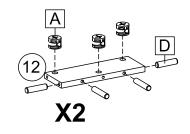





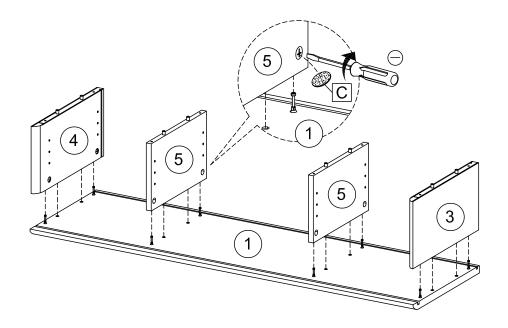

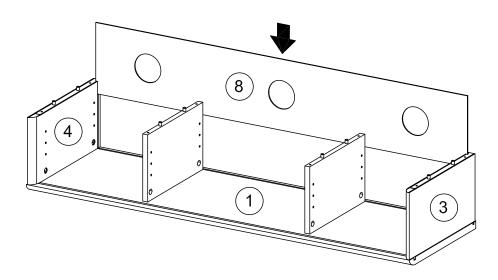

6

