

STEP 4

Open the back of the Seat and Chaise, then depending on which side you wish to have the chaise, Attach the Short Arm (G) to the seat (A) using long bolt (M), Washer (P)and Allen Key M5(S). Then Attach Seat (A) to Chaise(B) using long bolt(M)Washer(P)Nut(Q), Spanner(R) and Allen Key M5(S), by only connecting the bottom holes.

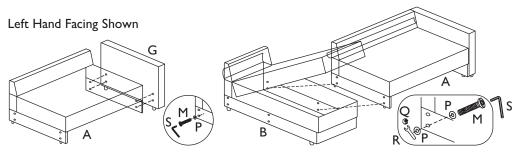

 
STEP 5

Connect the Long Arm (F) to the Chaise (B) using Long Bolt (M), Washer (P) and Allen Key M5 (S). Attach the Metal Plate (U) under the Chaise (B) and Long Arm (F) with Short Bolt (O), Washer (P) and Allen Key M5 (S).

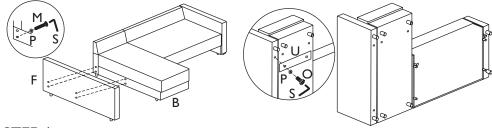

STEP 6

Place Pop Up Section (C) into the Seat (A). Place the Long Cushion (I), Short Cushions (J) on the sofa bed - this is now ready to use.

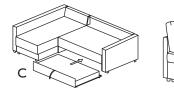





USING YOUR SOFA BED

Carefully, pull the Pop Up Section out using the handle, then gripping the edge of the drawer to open it out fully. Use the handle to pull the Pop Up Section up and gently push it into place. You may need to adjust the placement of the Pop Up section, by pushing it towards the Chaise Section, should there be a gap.

 FABRIC CONTENT MAIN FABRIC 100% POLYESTER OTHER FABRIC (VISIBLE) NON-WOVEN FABRIC 100% POLYESTER

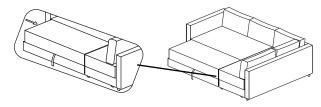

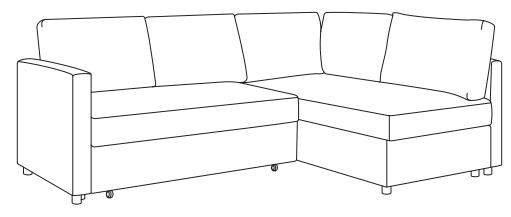

KY470 CORNER SOFA BED

Thank you for your purchase. The following care instructions will allow you to make the most of your sofa bed; helping to prolong the look and life of it by preventing wear and damage.

IMPORTANT INFORMATION PLEASE ENSURE YOU READ THIS LEAFLET BEFORE USING YOUR SOFA BED. DO NOT DISCARD OF ANY PACKAGING UNTIL YOU HAVE CHECKED THE PRODUCT THOROUGHLY.

CARING FOR YOUR SOFA BED

- Pre-brush fabric with a soft brush and then gently vacuum.
- Plump any accent/removable cushions regularly to prevent them becoming mis-shaped or flat.
- Use a microfibre cloth to remove dust from wooden surfaces.
- In the event of a spill or stain, use specialist upholstery cleaner or cleaning services.

SUNLIGHT AND HEAT DAMAGE

- Avoid contact with direct sunlight. If needed, move items or change their position to avoid the same area being exposed to repeated sunlight/heat.
- Do not place your sofa bed close to fire places and/or radiators.
- Hot objects such as mugs/plates can permanently mark the fabric and wood, avoid placing these on the sofa bed.

SAFETY WARNINGS

- Do not allow children or pets to climb or jump on the sofa bed.
- Avoid contact with sharp objects such as buckles, toys and jewellery as these can easily snag, tear and/or pull the fabric.
- Avoid the risk of entrapment by using the sofa bed as intended; sitting facing forward on the seat.
- Keep small parts away and out of reach of children and pets.
- Do not allow children to operate the sofa bed mechanism.


PARTS LIST							
IMAGE	NAME	PART	QTY	IMAGE	NAME	PART	QTY
	Seat	А	1		Long Bolt	Μ	10
	Chaise	В	1		Medium Bolt	Ν	12
	Pop Up Section	С	1		Short Bolt	0	2
	Seat Backrest	D	1	\bigcirc	Washer	Р	14
	Chaise Backrest	E	1		Nut	Q	2
	Long Arm	F	1	S	Spanner	R	1
	Short Arm	G	1		Allen Key M5	S	1
	Plastic Leg	Н	8		Allen Key M4	Т	1
	Long Cushion	I	1	0 0	Metal Plate	U	1
	Short Cushion	J	4		Bracket	V	4
e se	Hook	К	2		Castor	W	4
	Support Leg	L	4				

ASSEMBLY INSTRUCTIONS

Unpack your sofa bed and check that all the parts on the Parts List are present - these may be in a zip compartment within the base. If any are missing, please contact the retailer from whom you purchased the product. We would advise having 2 people to assemble this product.


STEP 1

Assemble your sofa bed on a flat, soft surface to prevent any damage. Attach the Plastic Legs (H) to the Long Arm (F), Short Arm (G) and Chaise (B) and then attach the Support Leg (L) to Seat (A).

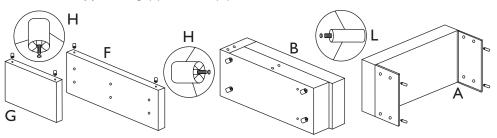

STEP 2

Using the Medium Bolt (N) and the Allen Key M4 (T), attach the Castors (W) and Hook (K) to the Pop Up Section (C). Insert the Brackets (V) into the Seat Backrest (D) and Chaise Backrest (E).

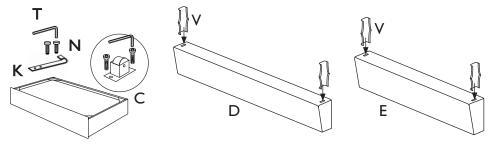

STEP 3

Attach the Seat Backrest (D) to the Seat (A) and Chaise Backrest (E) to the Chaise (B).

