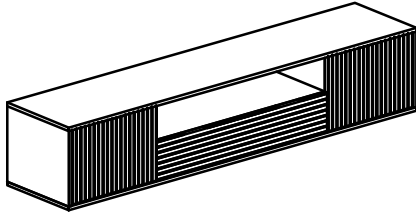
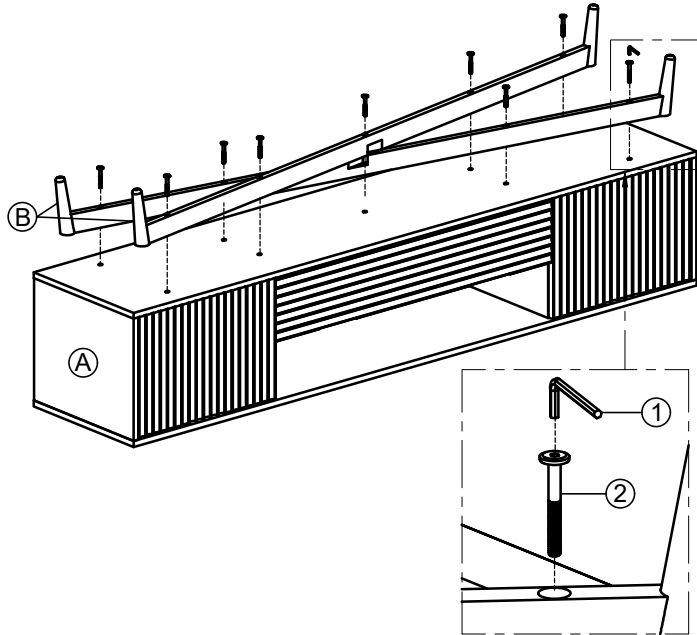
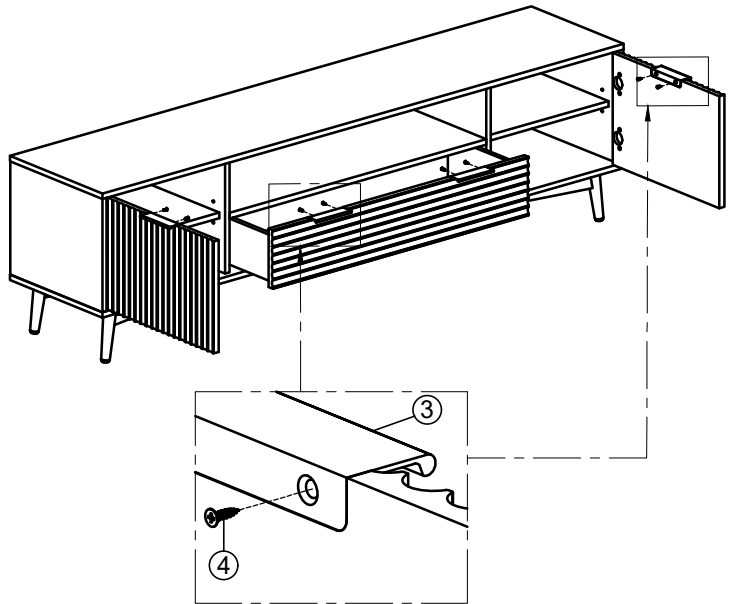
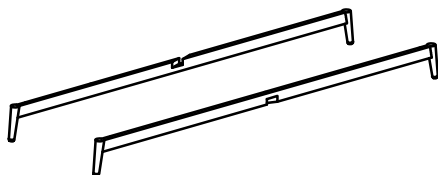

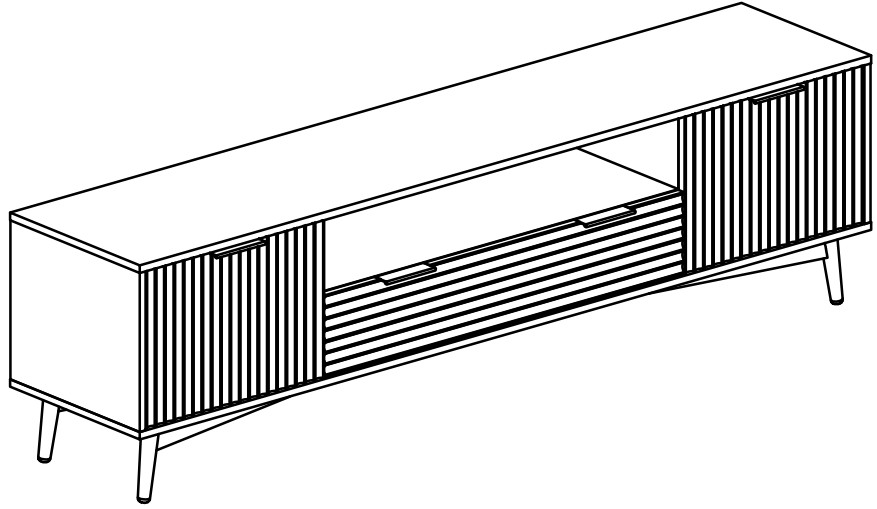

 



# ASSEMBLY INSTRUCTION

## G7362 - TV UNIT 1800

No	PARTS NAME	Q.ty (pcs)	STEP 1	STEP 2
A	 TV Unit	1		
B	 Legs Frame	1 Set		

No	LIST OF HARDWARE	Q.ty (pcs)	FINAL
①	Bolts M6x55 	9	
②	Allen key K4 	1	
③	Handles 	4	
④	Flat screw Ø3.5 x 12 	8	
Screwdriver (not included) 