

# CHAIR STATIC

**Do not discard any of the packaging until you have checked the product.**

Outlined below are General Care Instructions that will help prolong the look and life of your chair by preventing wear and damage.

**PLEASE NOTE: The Fabric on this product is Flame Retardant treated and therefore should be Specialist Upholstery cleaned only**

## **CLEAN REGULARLY:**


- ✚ Remove dust by pre-brushing with a soft brush
- ✚ Gently Vacuum all areas

## **SUNLIGHT AND HEAT**

- ✚ Direct sunlight or heat can cause fabrics to deteriorate or fade. Protect them by situating your furniture out of the way of prolonged direct sunlight or by drawing curtains and blinds when applicable.
- ✚ Avoid placing furniture too close to fires or radiators.
- ✚ Reduce potential damage by moving items around or changing position so that the same piece or area is not always exposed.

 



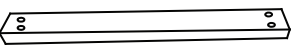 
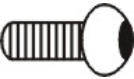 

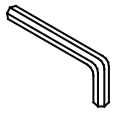 
## **SAFETY WARNINGS**

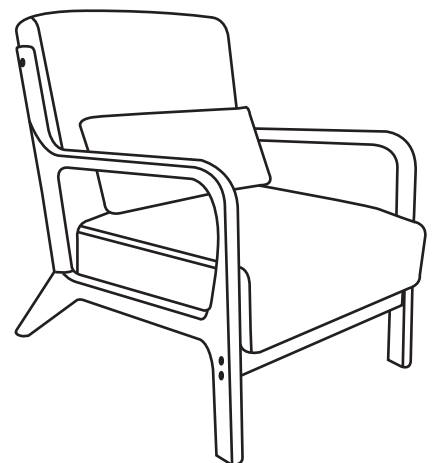- ✚ **ENTRAPMENT WARNING: KEEP HANDS CLEAR WHEN ADJUSTING THE RATCHET MECHANISM TO AVOID FINGER ENTRAPMENT: DO NOT ALLOW CHILDREN TO ADJUST THE MECHANISM.**
- ✚ Never allow children to jump on the chair.
- ✚ Do not allow domestic pets to climb on the chair or chew or claw it; oils and greases from animals will cause deterioration in the appearance of the fabric.
- ✚ Sharp objects such as buckles, toys and jewellery can easily snag on the fabric and produce tears and pulls in the fabric.
- ✚ Hot objects such as the heat from cups and mugs can permanently disfigure upholstery.



# KY391 CHAIR STATIC
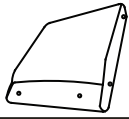
## Parts List:


ITEM	DESCRIPTION	PIC.	QTY
A		BACK CUSHION	1
B		SEAT CUSHION	1
C		LEFT ARM	1
D		RIGHT ARM	1
E		FRONT STRETCHER	1
F		BOLTS	10
G		BIG FLAT WASHERS	2
H		ALLEN WRENCH	1




2 Person Assembly

Unpack chair and check the above items are present. If you have any parts missing contact Kyoto Futons Ltd (01778 ) 380555. [sales@kyoto.co.uk](mailto:sales@kyoto.co.uk)


Step 1. Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Open the bottom covering, then loosely attach seat cushion (B) to back cushion (A) using bolts ( F ), lock big flat washers (G). Loosely tight ten by Allen wrench (H).

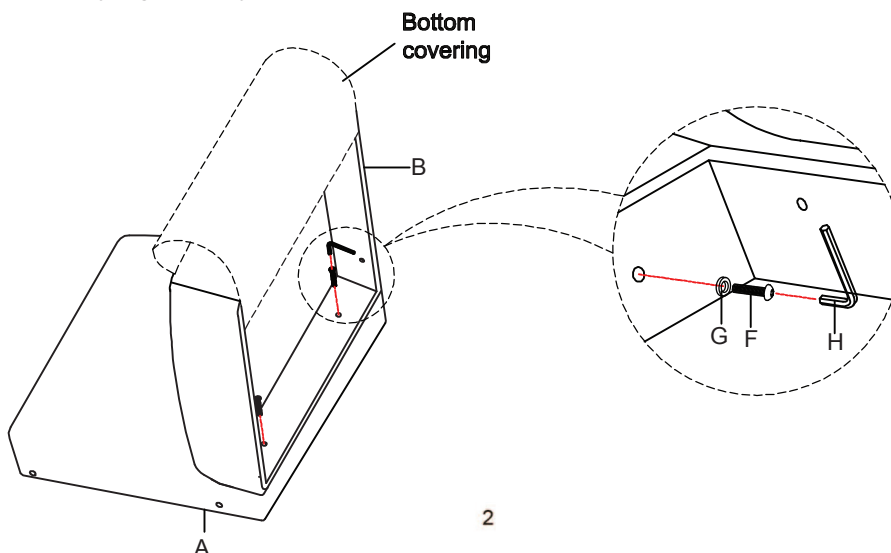


Step 2. Attach left arm (C) to seat cushion (B) and back cushion (A) using bolts (F), lock flat washers (G) according to the label "L" on the left arm (C) and the side of seat cushion (B) and back cushion (A). Loosely tighten by Allen wrench (H) as shown below.

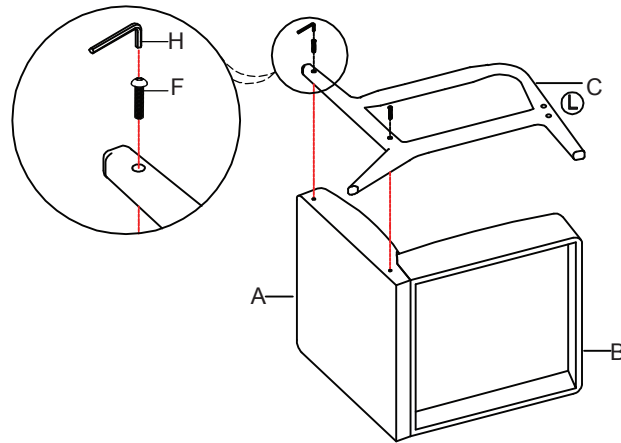

Step 3. Insert front stretcher (E) to left arm (C) with two located dowels. Note: the front stretcher (E) with screw holes should be face down. Attach right arm (D) to the front stretcher (E), seat cushion (B) and back cushion (A) using bolts (F), lock flat washers (G) according to the label R on the right arm (D) and the side of seat cushion (B) and back cushion (A). Securely tighten all bolts by Allen wrench (H).

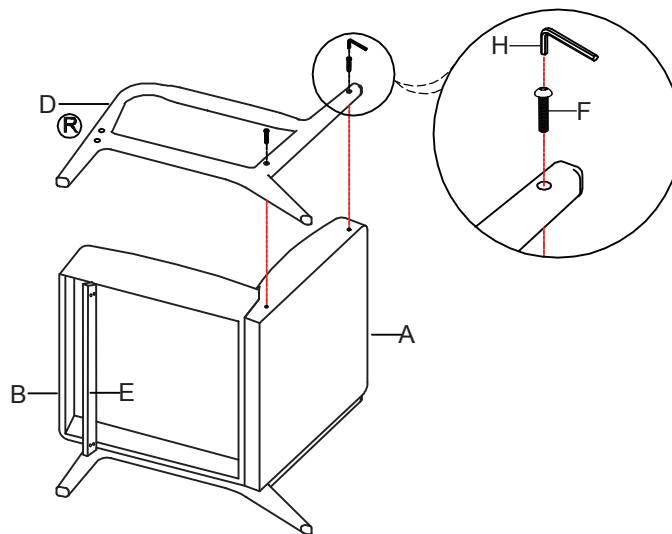

Step 4. Tighten Bolts (F) through the front stretcher (E) to the right arm (D) and left arm (C) with Allen wrench (H).

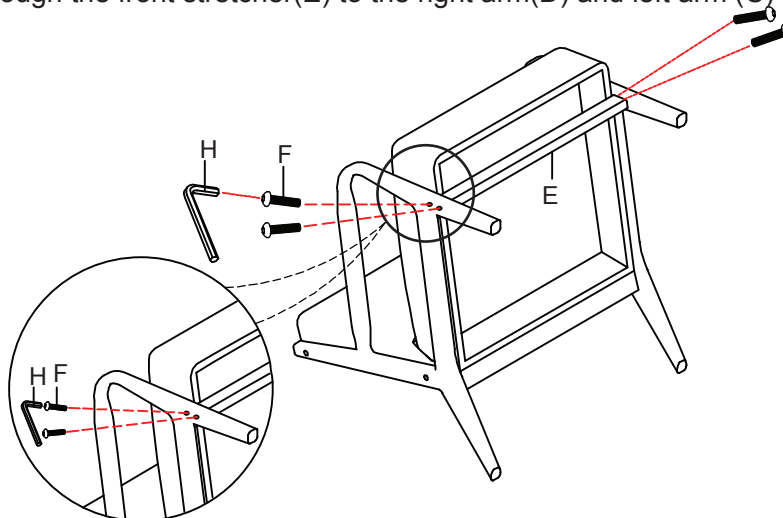

**FABRIC CONTENT:**  
**MAIN FABRIC 100% POLYESTER**  
**OTHER FABRIC (VISIBLE):**  
**NON-WOVEN FABRIC 100% POLYESTER**