



Pandora Click Clack Sofabed

Do not discard any of the packaging until you have checked the product.




Outlined below are General Care Instructions that will help prolong the look and life of your sofa bed by preventing wear and damage.

PLEASE NOTE: The Fabric on this product is Flame Retardant treated and therefore should be Specialist Upholstery cleaned only


CLEAN REGULARLY:





-  Remove dust by pre-brushing with a soft brush
-  Gently Vacuum all areas

 
SUNLIGHT AND HEAT

-  Direct sunlight or heat can cause fabrics to deteriorate or fade. Protect them by situating your furniture out of the way of prolonged direct sunlight or by drawing curtains and blinds when applicable.
-  Avoid placing furniture too close to fires or radiators.
-  Reduce potential damage by moving items around or changing position so that the same piece or area is not always exposed.

SAFETY WARNINGS

 **ENTRAPMENT WARNING: KEEP HANDS CLEAR WHEN ADJUSTING THE RATCHET MECHANISM TO AVOID FINGER ENTRAPMENT: DO NOT ALLOW CHILDREN TO ADJUST THE MECHANISM.**

-  Never allow children to jump on the Sofa bed.
-  Do not allow domestic pets to climb on the sofa bed or chew or claw it; oils and greases from animals will cause deterioration in the appearance of the fabric.
-  Sharp objects such as buckles, toys and jewellery can easily snag on the fabric and produce tears and pulls in the fabric.
-  Hot objects such as the heat from cups and mugs can permanently disfigure upholstery.

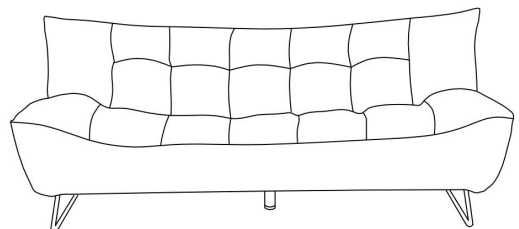

INSTRUCTIONS FOR FIXING LEGS


Parts List:



2 Person Assembly

A		Legs x 4	C		Bolts x 16
B		Support leg x 1	D		Allen key x 1

 
- 1) Unpack sofa bed and check the above items are present.

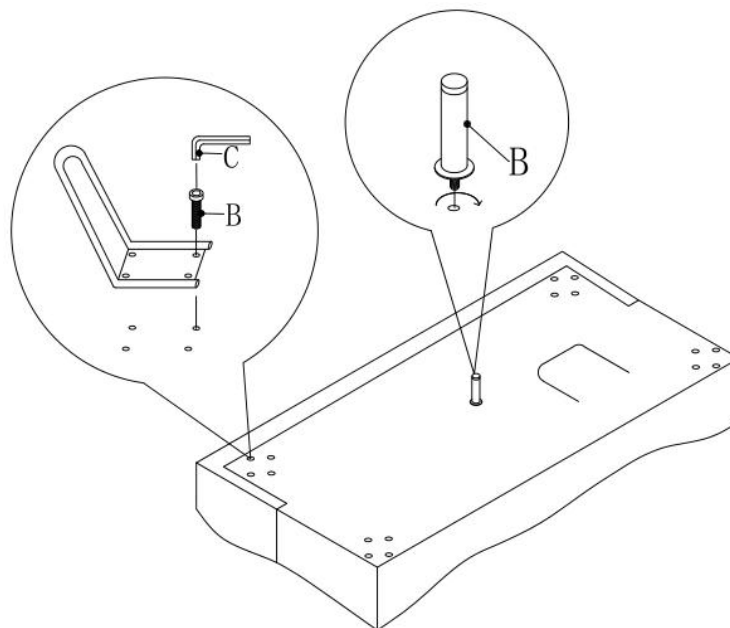

- 2) Place the sofa bed face down on a clean, flat surface.
- 3) Affix the legs as shown in the above diagram using the bolts and allen key supplied. Turn the sofa bed over and place on the legs.

FROM SOFA TO BED: Hold the back of the sofa and tilt forward towards seat until click is heard; now tilt back into the bed position

 FROM BED TO SOFA: Lift the back until 1*click is heard for recliner position;2*clicks for upright sofa position

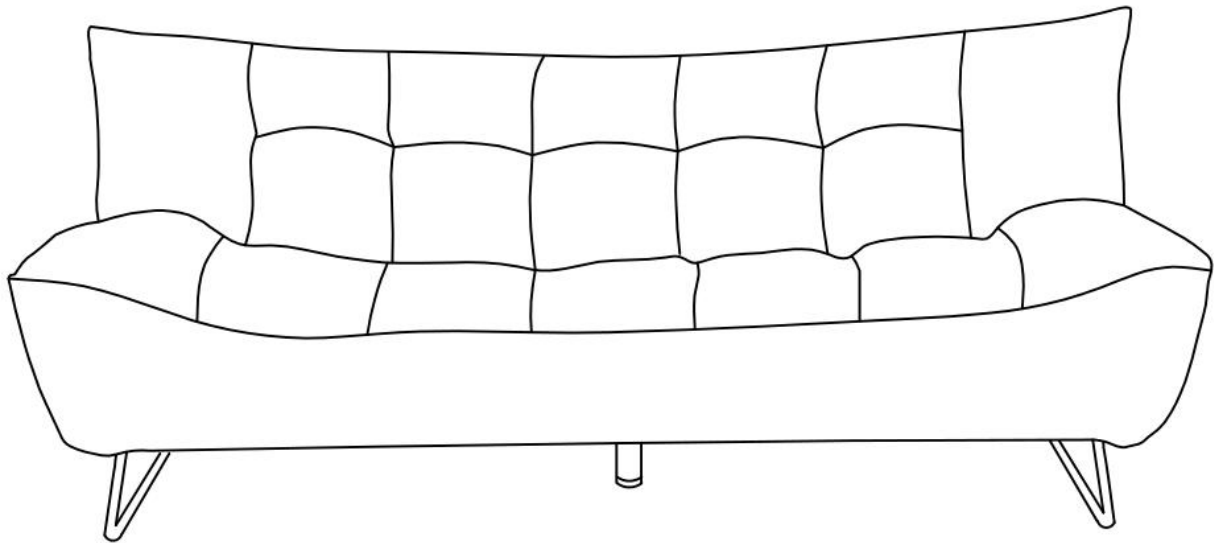

FABRIC CONTENT:

MAIN FABRIC 100% POLYESTER

OTHER FABRIC (VISIBLE):

NON-WOVEN FABRIC 100% POLYESTER