



Segway MiniPro Password Reset

Follow the following steps to clear the Bluetooth password for connecting Segway MiniPRO to the Ninebot App.

Step 1. Turn Segway MiniPRO upside-down on a cardboard box or put it on a knee controlled bar. It is important that MiniPro is levered since reset will also affect leveling sensor.

Step 2. Press the Power Button.

Note, in in 2-4 seconds the wheels will begin to spin. Wait until the MiniPro is turned off completely.

Step 3. Turn off Segway MiniPRO and then turn in On.

