



BOOSTER

Extract Vaporizer

MANUAL



KEY FEATURES

- FLEX TEMP
- ONYX ATOMIZER
- MANUAL MODE
- SESH MODE
- WATER PIPE ADAPTER



@OOZELIFE #OOZELIFE
WWW.OOZELIFE.COM



HOW TO USE YOUR BOOSTER



GET STARTED

Twist the mouthpiece like a car key in the ignition to unlock & remove.

Load extract into the center of the C-Core dish.

Replace the cap.



SETTING UP YOUR BOOSTER

Press the button 5x to turn on & off.

Press the button 3x to switch between the 3 voltage levels. Each level has a different LED color and heats to a different temperature range:

GREEN **2.7V**

BLUE **3.2V**

RED **3.7V**



HOW TO USE

There are 2 ways to operate the Booster:

Manual Mode: Hold the power button then device begins to heat. Inhale and release when you exhale.

Safe Sesh Mode: Click the button twice to activate a sesh mode. The device will heat & LED will flash without you holding the button, and shut off after 15 seconds.



SAFE SESH DURATION

The 3 voltage levels have a 15 second safe sesh and will stop heating afterwards.



CONNECTION ISSUE OR ERROR CODE

3 White LED Flashes:
Short circuit in device or atomizer.

5 White LED Flashes:
Open circuit in device or atomizer.



CHARGING

Needs to Charge: 5 red LED flashes.

While Charging: Flashing white LED.

Charge Complete: Solid white LED.

The Booster takes 60 minutes to fully charge.

SAFE GUARDS

IMPORTANT! SAVE THESE INSTRUCTIONS!

- ⚠ Keep away from water.
- ⚠ Never disassemble.
- ⚠ Only charge indoors.
- ⚠ Only use wall outlet for charging.
- ⚠ Only charge with included charger - no others!
- ⚠ Do not leave unattended while charging.
- ⚠ Only use in legal and adult use state/providence/country.
- ⚠ Do not leave charging overnight.
- ⚠ Only use approved Ooze attachments.
- ⚠ Always dry thoroughly after cleaning.
- ⚠ Never leave unattended around children/pets.