



FLEX TEMP



ATOMIZER



PASS-THROUGH CHARGING



SESHMODE







REGISTER YOUR DEVICE

- 1. Your Booster has an authentication code located on the back of the device near the base.
- 2. Go to ooze.life/register and use this code to fill out the registration form.
- **3.** Submit the form. Your Booster is officially registered in our system, and your warranty is activated!

HOW TO USE YOUR BOOSTER GET STARTED

- 1. Twist the mouthpiece like a car key in the ignition to unlock & remove.
- 2. Load extract into the center of the C-Core dish.
- **3.** Replace the cap.

SETTING UP YOUR BOOSTER

PRESS THE BUTTON 5X TO TURN ON & OFF.

Press the button 3x to switch between the 3 voltage levels. Each level has a different LED color and heats to a different temperature range:



GREEN 2.7V



BLUE 3.2V



RED 3.7V

The Booster will remember the voltage level you selected during your previous session. It will remain at this level unless you click the button 3x.



HOW TO USE

There are 2 ways to operate the Booster:



MANUAL MODE:

Use the Booster as a regular extract vape! Activate a heat cycle and inhale through the mouthpiece.

DAB RIG MODE:

Remove the bottom cap and insert your Booster into any 14mm water pipe. Activate a heat cycle and enjoy the dab rig experience without a torch!

There are 2 ways to activate a heat cycle:

SAFE SESH MODE:

Press the button to heat the device while you inhale, and release when you exhale.



Click the button twice to activate sesh mode. The device will heat & LED will flash without you holding the button, and shut off after 15 seconds.



SAFE SESH DURATION



The 3 voltage levels have a 15 second safe sesh and will stop heating afterwards.





CONNECTION ISSUE OR ERROR CODE

3 White LED Flashes: Short circuit in device or atomizer.

5 White LED Flashes: Open circuit in device or atomizer.



CHARGING

Needs to Charge: 5 red LED flashes. While Charging: Flashing white LED. Charge Complete: Solid white LED.

The Booster takes 60 minutes to fully charge.

SAFE GUARDS

- ▲ Keep away from water.
- **△** Only charge indoors.
- Only charge with included charger no others!
- Only use approved Ooze attachments.
- Never leave unattended around children/pets.

- **△** Never disassemble.
- Only use wall outlet for charging.
- ▲ Do not leave unattended while charging.
- ▲ Do not leave charging overnight.
- ▲ Always dry thoroughly after cleaning.