

FXTRACT RATTERY PRODUCT FFATURES

THERMAL CHAMBER PROTECTS AND INSULATES YOUR OIL

- 650 MAH BATTERY
- 15 SECOND PREHEAT MODE
 - TEMPERATURE CONTROL
 - 2 7V 3 2V 3 6V 4 2V
- 510 THREAD CONNECTION
 - MICRO USB CHARGING

OO7F CHARGER + OO7F BATTERY =



TO ACTIVATE YOUR WARRANTY REGISTER YOUR BATTERY AT OOZELIFE.COM

DOWNLOAD HOW TO USE INSTRUCTIONS







ONE YEAR WARRANTY is included with purchase. Warranty DOES NOT apply to TANKER battery at fault from use of NON OOZE CHARGER. Please use wall outlet @oozelife #oozelife OOZELIFE.COM to charge device for best charging experience.

TANKER EXTRACT BATTERY

INSTRUCTIONS

650 MAH BATTERY

ATTACH ATOMIZER

Screw 510 thread atomizer into battery.

THERMAL SHIELD —

Screw on to battery to protect and thoroughly heat oil for maximum airflow.

POWER BUTTON

TURN ON/OFF

Click Power Button 5 times quickly.

CHANGE VOLTAGE

Click Power Button 3 times quickly. •2.7V •3.2V •3.6V •4.2V

PREHEAT MODE

PREHEAT MODE

Click Power Button twice to start. Click Power Button once to end.

USB CHARGING

Attach Ooze Micro USB charger to USB port on side. When charging, light will be RED. When complete, light will be GREEN.

CLEANING INSTRUCTIONS: Clean parts after each use to keep your Ooze Tanker in working condition. Keep away from water and extremely hot or cold temperatures. Always turn the battery off after each session and before cleaning. To clean the battery connection inside chamber, use a q-tip slightly dipped in rubbing alcohol. Avoid soaking with excess alcohol, and swab the area where the atomizer connects to the battery. Allow to dry completely before use.



