



RIPLY

DAB RIG HOOKAH



DIGITAL
SCREEN



HOOKAH
HOSE



KING SIZE
ONYX ATOMIZER



CARB CAP



LED
LIGHT



WARRANTY
PROGRAM



HOW TO USE THE RIPLEY

GET STARTED

1. Lift the carb cap lid and screw in a King Size Onyx Atomizer.
2. Use a dab tool or Hot Knife to load extract into the center of the atomizer.
3. Replace the carb cap lid.
4. Insert your hose into one of the two Quick Connection ports.

SETTING UP YOUR RIPLEY

Press the power button (bottom button) 5x to turn on and off.

Session Duration:

1. Use the right arrow to select Time and press the power button.
2. Use the arrow buttons to select how long you want each session to last. Press the power button again to return to the main menu.
3. The Ripley will buzz once to confirm your timer is set.

Flex Temp:

1. Use the right arrow to select Temp and press the power button.
2. Use the arrow buttons to select your temperature. Press the power button again to return to the main menu.
3. The Ripley will buzz once to confirm your temp is set.

LED Lights:

1. Use the right arrow to select Color and press the power button.
2. Use the arrow buttons to select your LED light color. You can also choose to keep the light off. Press the power button again to return to the main menu.
3. The Ripley will buzz once to confirm your color selection.


How to Use the Ripley Dab Rig Hookah:

1. Select Go from the main menu to begin your session.
2. Watch the green circle around the temperature disappear. Once it's gone, the Ripley will buzz once to let you know your session has begun.
3. Take your hit from the hookah hose and use your finger to control the carb cap. Swivel it around to direct the airflow hook all around the atomizer to vaporize everything inside. The white dotted circle around the timer will slowly disappear as your session winds down. Once the session is over, the Ripley will stop heating.
4. Use a micro swab to wipe down the atomizer and Quick Connection port of the hose before you put the Ripley away. It will make starting your next session so much easier!

CHARGING

1. Use the type-c charging cable with a wall outlet to charge your Ripley.
2. The screen will turn off once the device is fully charged.

Charging Screen

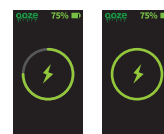

WHILE CHARGING



ACTIVE SCREEN

Temp Indicator:

The green circle will complete as the device heats to your chosen temp

Sesh Time:

The white dotted circle will disappear as your session counts down

- The Ripley screen will turn off once it has been fully charged.

SAFE GUARDS

Important! Save these instructions!

- | | | |
|---|--|---|
| ⚠ Keep away from water. | ⚠ Only use approved Ooze attachments. | ⚠ Do not leave unattended while charging. |
| ⚠ Only charge indoors. | ⚠ Never leave unattended around children/pets. | ⚠ Do not leave charging overnight. |
| ⚠ Only charge with included charger - no others! | ⚠ Never disassemble. | ⚠ Always dry thoroughly after cleaning. |
| ⚠ Only use in legal and adult use state/province/country. | ⚠ Only use wall outlet for charging. | |