













Mind Mind Mind Mind Mind



Remove the mouthpiece and load in up to 0.5g of ground dry herbs. Replace the mouthpiece.



Adjust the temperature (302-446° F/150-230° C) using the Up and Down buttons.



 


Press and hold the main button for 2 seconds to begin heating. The device will buzz again once the desired temperature is reached.









 




Mind Mind Mind Mind



Press and hold the main button for 2 seconds to stop and restart the heating process.







SCREEN MODES



SAFE SESH MODE 3 - 6 MINUTES



SESH MODE



HEATING IN PROGRESS



FLEX TEMP 302°F-446°F

PRO TIP: Press and hold the main button to return to the menu at any time.



Ministry Min

SAFE GUARDS

- ▲ Keep away from water.
- ▲ Only charge indoors.

- Only use approved Ooze attachments.
- Never leave unattended around children/pets.

- ▲ Never disassemble.
- Do not leave unattended while charging.
- ▲ Do not leave charging overnight.
- Always dry thoroughly after cleaning.

DON'T FORGET TO JOIN THE VERGE CREW!

Text VERGE CREW to (323) 772-6106 or scan the QR code to join the Crew!

