# TWIST SLIM PEN



## Instructions

# USB SMART

#### INDICATION LIGHT

- FULLY CHARGEDCHARGING

## **320 MAH BATTERY**

- ADJUSTABLE VOLTAGE 3.3 4.8V
  - PREHEAT MODE
- 15 SECONDS HOLD TIME
  - 510 THREAD

#### **USB SMART CHARGER**

- AUTO SAFETY SHUT OFF
  - RAPID CHARGE

#### WARRANTY INFORMATION

Enter the 6 digit authentication code printed on your battery, at oozelife.com to register your product.



## Featuring Preheat Mode

### 320 MAH BATTERY

# BATTERY

TURN ON/OFF:

## BATTERY LIGHT

- When in use or charging.
- When OFF or not in use

NOTE: Light will flash • 15 times when the battery needs to be charged. If there is connection issue • light will flash 4 times.

#### PREHEAT MODE

To start press power button twice. To end press power button once.

## AUTHENTICATION CODE

ADJUSTABLE VOLTAGE 3.3V - 4.8V

ADJUST BATTERY VOLTAGE: Turn battery dial on the bottom. Turn right to increase voltage. Turn left to decrease voltage.