

CONTROLLER SETTINGS FOR EVOLV E-SCOOTERS (QS-S4)

To access the settings:

Step 1: Simultaneously hold both power and mode buttons for 3-4 seconds.

Step 2: Use the power button to cycle through the P settings.

Step 3: Use the mode button to change a setting.

PAGE NO.	PAGE DESCRIPTION	CITY / CITY PLUS	TOUR (First Gen.)	PRO / PRO-R
P01	Backlight brightness Range: 1-3 Dim: 1, Bright: 3, Default: 3	3	3	3
P02	Mileage unit of measure Default: KM-000, MI-001	Dependent upon country of origin.	Dependent upon country of origin.	Dependent upon country of origin.
P03	Battery Voltage Specification 24V, 36V, 48V, 52V, 60V	36V / 48V	48V	52V / 60V
P04	Display timeout in minutes Range: 0-60 Default: 5 Display will not timeout: 0	5	5	5
P05	Reserved Page	0	0	0
P06	Wheel Diameter Accuracy is 0.1, Default: 10.0	8 Inches	8.5 Inches	10 Inches
P07	Magnet Count for measuring speed Default: 28, Range: 0-255	28	28	28
P08	Available power for use Range: 0 - 100%	100	100	100
P09	Kick to engage motor ON: 001 OFF: 000 (safety / ease of use)	ON: 001	ON: 001	ON: 001
P10	Reserved page	0	0	0
P11	Electronic braking Range: 1-5 Weak: 1, Strong: 5	1	1	1
P12	Acceleration strength Range: 1-5, Soft: 1 Strong: 5	3	3	3
P13	Reserved Page	0	0	0
P14	Reserved Page	0	0	0
P15	Low voltage cut-off Default: 42V	30.5V / 39.6V	39.6V	42.6V / 49V
P16	Odometer reading	ODO	ODO	ODO
P17	Cruise control ON: 1, OFF: 0	OFF: 0	OFF: 0	OFF: 0
P18 / P19	Reserved page	0	0	0
P20	Communication Protocol Default: 4, Cannot be changed	4	4	4