



2020 GT500 Blower Pulley Installation Specifications

Note: SPE Highly recommends having your pulley and hub installed by a professional.


1. Drain cooling system, Remove thermostat top housing, Remove the blower drive snout.
2. Using a 17MM allen socket and SPE holding block remove the factory blower pulley.



3. Install the SPE Hub onto the blower shaft, torque to 75 LB FT Using the supplied hardened hub socket as shown. Blue Loctite is recommended.



4. Install the the blower pulley and included allen bolts torque them to 100 IN LB

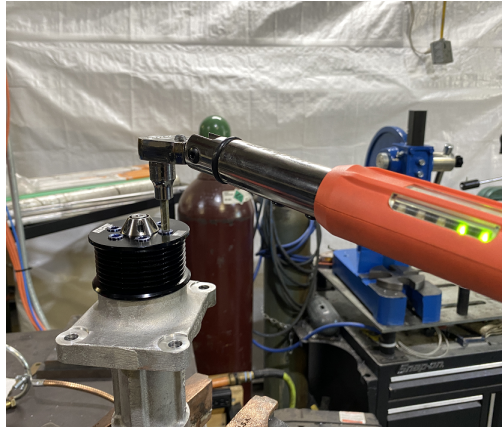

5. Clean the blower manifold and drive the snout off with brake clean and a gasket scraper.



6. Install the blower shaft and pulley assembly into the blower case. Make sure to use anaerobic sealant Permatex (part number 51813) or equivalent.

7. Torque the snout bolts to 20 LB FT



