




## 2020+ GT500 Thermostat Instructions

### Removal


**NOTE:** *Removal steps in this procedure may contain installation details.*

1. Drain the cooling system.
2. Remove the air cleaner tubing.
3. Completely cover the accessory drive belts with waterproof plastic.
4. Remove the bolts and detach the coolant inlet connector.

*Torque: 89 lb.in (10 Nm)*

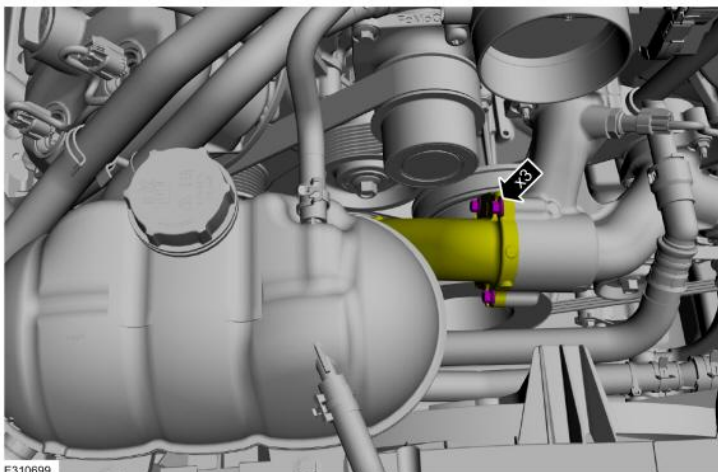

**NOTE:** During installation verify the thermostat vent hole is at the 12 o'clock position. Remove the thermostat. Inspect the O-ring seal and replace it if necessary. During installation, make sure the coolant outlet connection is fully seated on the thermostat housing before tightening the bolts.

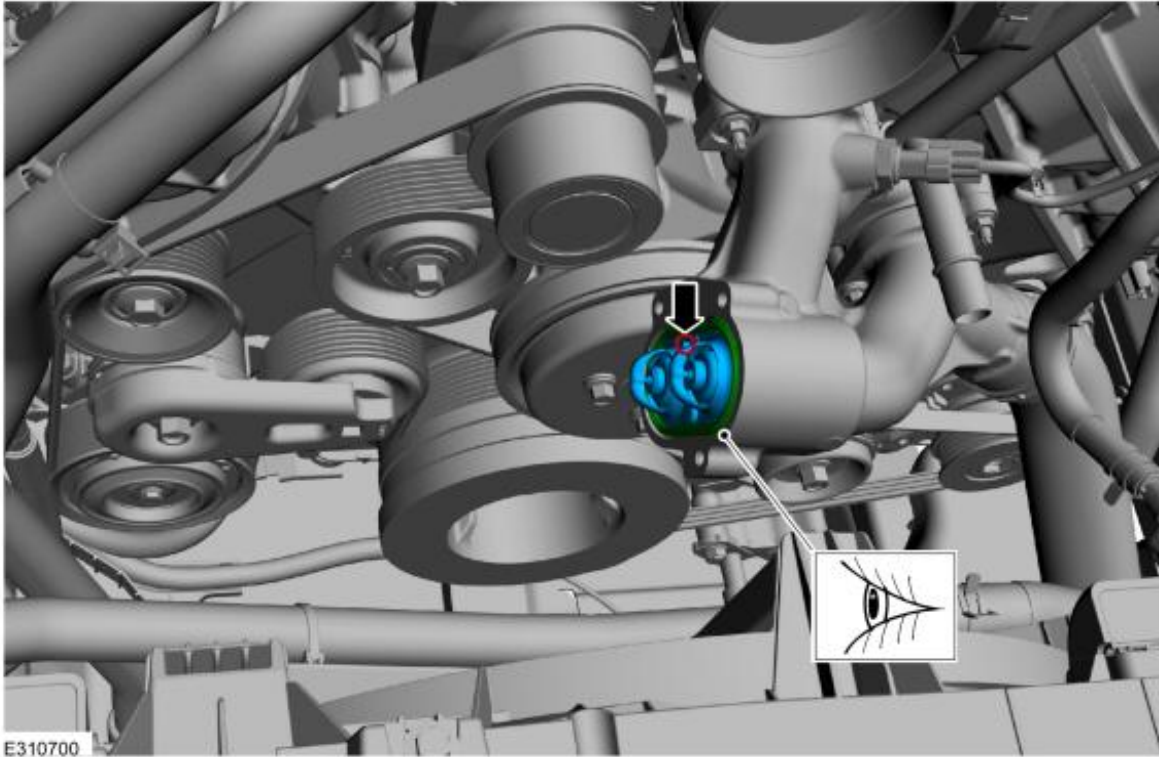

## Installation

1. Install a new O-ring seal and lubricate it with clean engine coolant.
2. To install, reverse the removal procedure.  
*Torque bolts to: 89 lb.in (10 Nm)*
3. Fill and bleed the cooling system.