 





6.7L Powerstroke Thermostat Instructions

Removal

1. Drain the cooling system.
2. Pull the upper radiator hose spring clip until the end of the clip is in the detent on the quick connect coupling and disconnect the upper radiator hose.

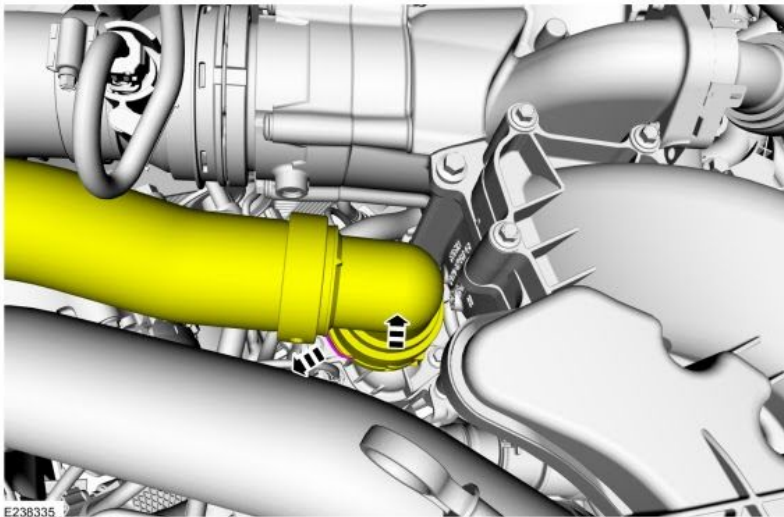


 3. Remove the bolts and the coolant outlet connection.

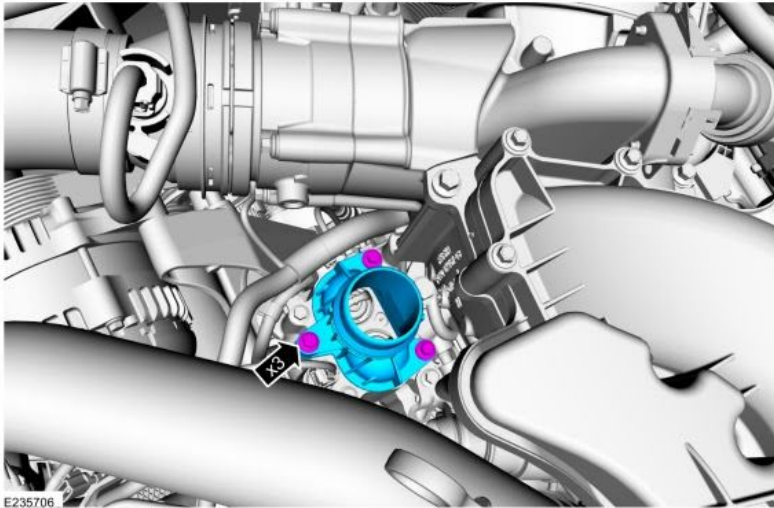

NOTE: During installation verify the thermostat vent hole is at the 12 o'clock position.

4. Remove the thermostat assembly.

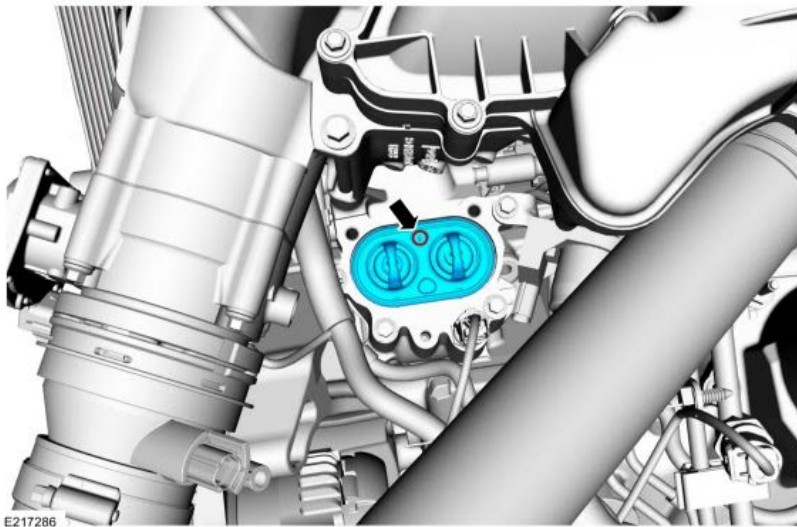

Installation

1. To install, reverse the removal procedure. *Torque bolts to: 89 lb.in (10 Nm)*
2. Refill cooling system, air pockets may need to be vented. Get the vehicle to operating temp. Allow it to cool and top off the system.