


## CHECKING THE 5-POSITION SWITCH

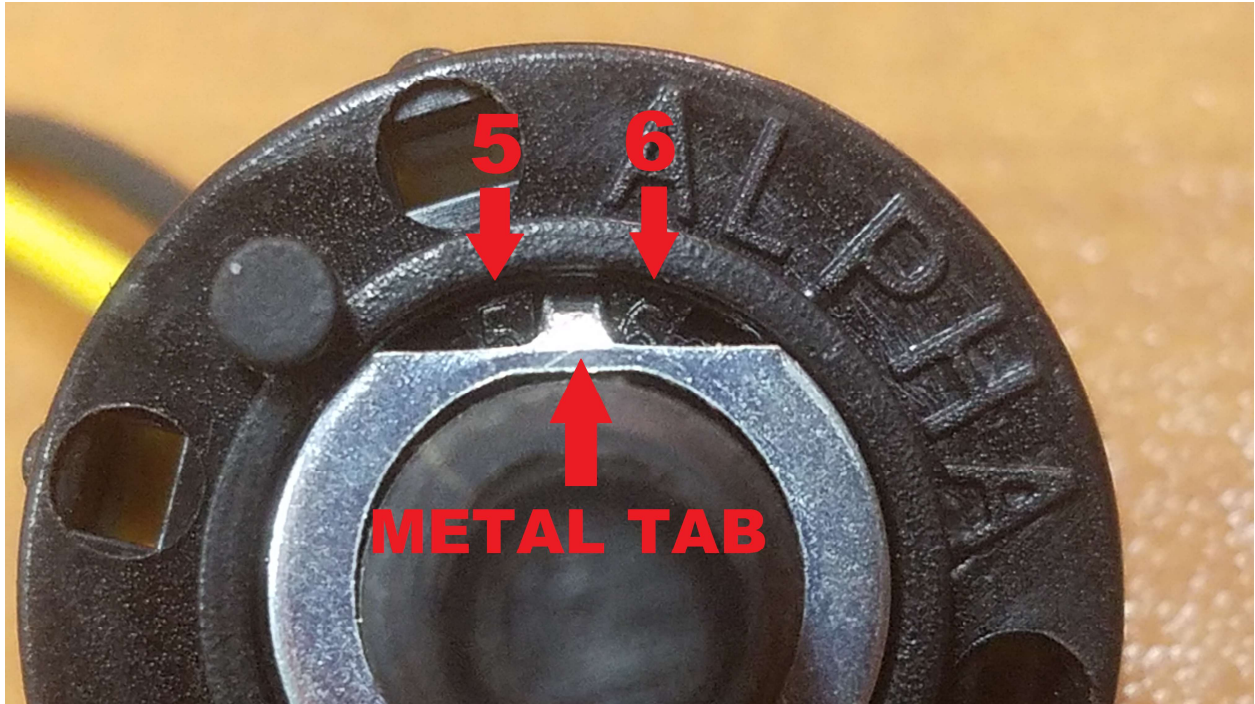

Remove the switch and inspect the location of the metal tab.

The tab **MUST** be located between numbers **5** and **6**.

If the tab is not correctly positioned, the switch will not function correctly. In that case, do the following:

1. Remove the metal ring with the tab.
2. Rotate the switch counterclockwise until it stops.
3. Install the metal ring with the tab.
4. Insure the tab is located between **5** & **6**.
5. Re-install the switch & test for correct operation.

