



MODEL BCAR1B / BCAR-2S STAPLER

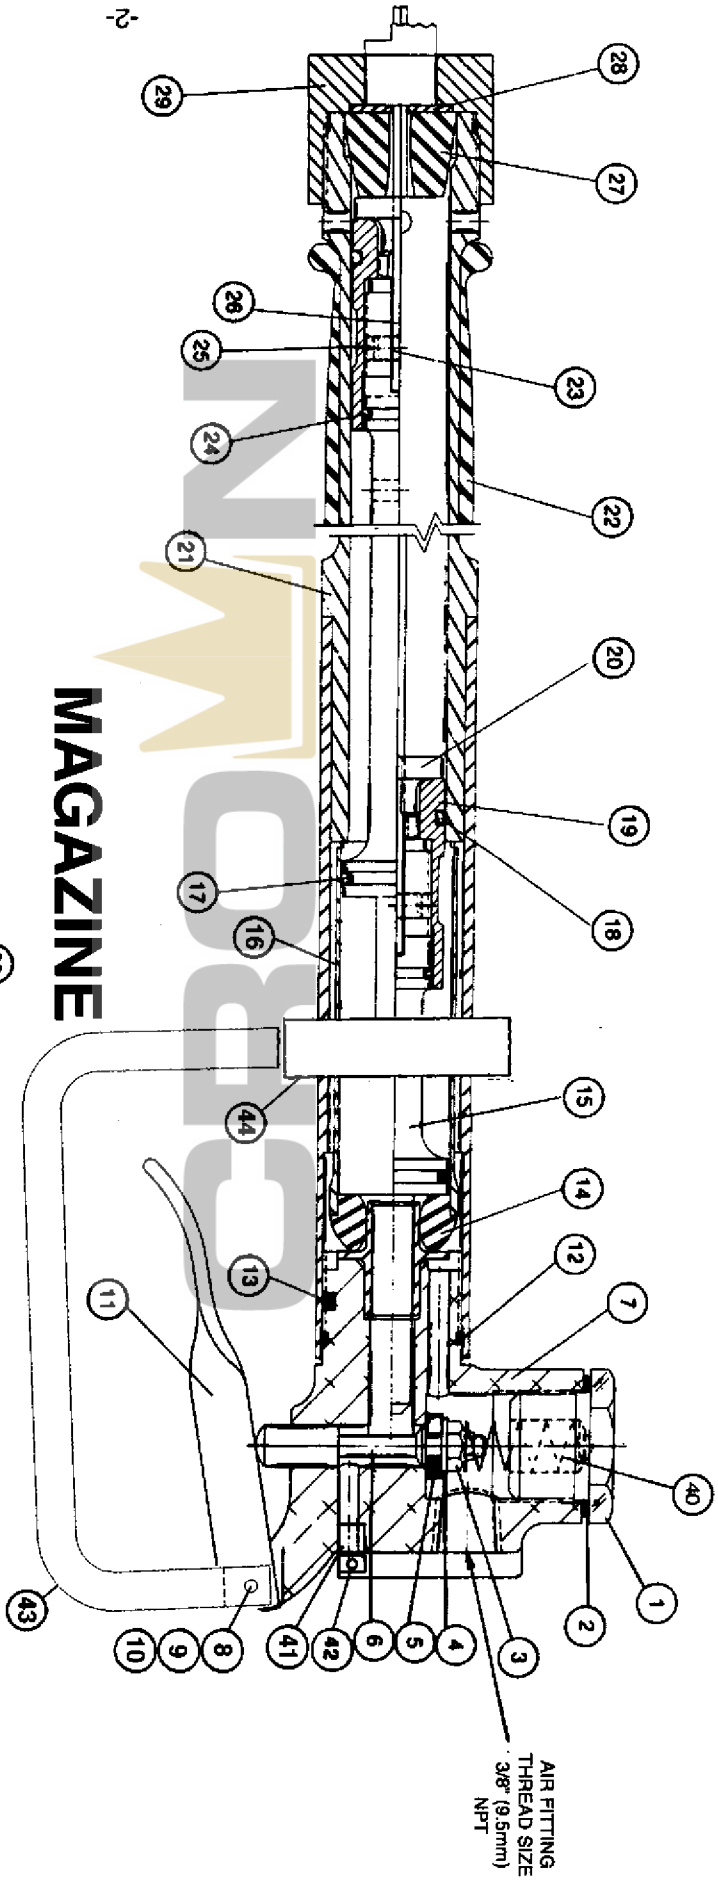

-2-

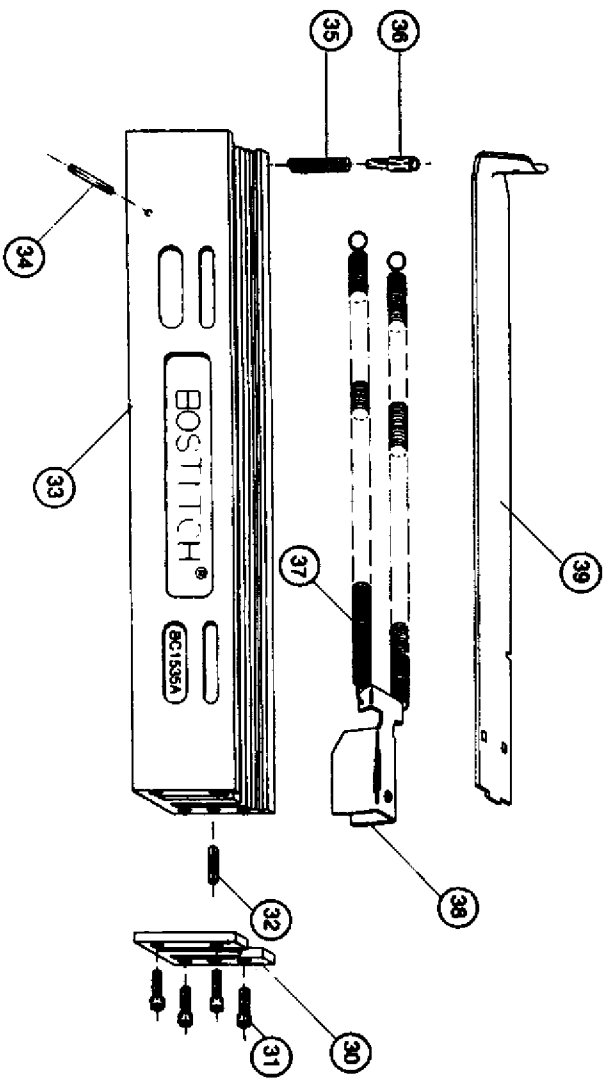

Parts List for BCAR1B-495-92L Type 0

Item Number	Part Number	Description	Qty Required
1	BC156	VALVE PLUG	1
2	105502	GASKET-PLUG	1
3	HN1032.5	NUT- ESN-10-32	1
4	PW10.5	PLAIN WASHER	1
5	BC442	SEAL- VALVE STEM	1
6	BC367	VALVE STEM	1
7	BC1602A	VALVE HOUSING ASSY	1
8	UA3820	SCREW-10-32 X 1 1/4	1
9	PW10.5	PLAIN WASHER	1
10	HN1032.5	NUT- ESN-10-32	1
11	BC283	TRIGGER - AR (LONG)	1
12	88705	O-RING-1.114X.070	1
13	BC347	NYLON INSERT	1
14	BC1474	RETURN BUMPER	1
15	BC1529	UPPER PISTON	1
16	BC1530	CYLINDER SLEEVE	1
17	87137	O-RING	1
18	174308	O-RING-.701X.094	1
19	BC1477	LOWER PISTON	1
20	BC1479	PISTON PLUG	1
21	BC1527A	CYLINDER ASSEMBLY	1
22	H406	GRIP	1
23	BC1478	DRIVER PIN	1
24	86458	O-RING	1
25	T34233	INSERT	1
26	BC1531	DRIVER BLADE	1
27	BC1481	DRIVE BUMPER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for BCAR1B-495-92L Type 0

Item Number	Part Number	Description	Qty Required
28	BC1569	BUMPER PLATE	1
29	BC1532A	NOSE ASSEMBLY	1
30	BC1545	WEARPLATE	1
30	BC1547	WEAR PLATE	1
31	UA3816.4	SCREW-SHCS-10-24X1	1
32	UB2808.2	PIN-SPRING	1
33	BC1535A	MAGAZINE-S3-1IN MAX	1
34	UB2820	PIN- SPRING .094 X 1	1
35	BC41	SPRING-COVER DETENT	1
36	BC34	MAG.COVER LATCH SHOU	1
37	BC1260	SPRING-EXTENSION	1
38	BC694	PUSHER	1
39	BC1537	MAGAZINE COVER	1
40	T36135	SPRING-COMPRESSION	1
41	BC1601	MUFFLER	1
42	UB1110	PIN- SPIROL	1
43	108800	HANDLE-TRIGGER GUARD	1
44	108801	ASSY-TRIGGER GUARD C	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.