



| <b>Item#</b> | <b>Illus.#</b> | <b>Description</b>        |
|--------------|----------------|---------------------------|
| 100392       | 0001           | DRIVER ARM,P6-BLACK       |
| 100393       | 0002           | CLINCHER ARM              |
| 100396       | 0002           | CLINCHER ARM              |
| 102482       | 0002           | ASSEMBLY,CLINCHER ARM     |
| 100394       | 0003           | OPER.LEVER,P6-BLACK       |
| 100537       | 0004           | MAGAZINE - 5019           |
| 100540       | 0004           | MAGAZINE - 2619           |
| 100538       | 0005           | CORE - 5019               |
| 100541       | 0005           | CORE - 2619               |
| 100399       | 0006           | PUSHER                    |
| P627         | 0007           | SPRING,COMPRESSION        |
| 100400       | 0008           | RETAINER, P6              |
| 100401       | 0009           | PIVOT PIN, P6             |
| 100402       | 0010           | DRIVER, 5019              |
| 100403       | 0010           | DRIVER, 2619              |
| 100404       | 0011           | CLINCHER ARM SPRING       |
| 100405       | 0012           | MAGAZINE SPRING           |
| 100406       | 0013           | DRIVE BEARING, P6         |
| 100407       | 0014           | MAGAZINE COVER, P6        |
| 100408       | 0015           | LEVER PIN, P6             |
| 85018        | 0016           | RING, RETAINING CORE CASE |
| 100409       | 0017           | LOADING GUIDE, P6         |

