


Deutsch  
English  
Français  
Español

Ersatzteilliste und Servicehinweise  
Spare parts list, service instructions  
Nomenclature des pièces détachées et instructions de montage  
Lista de recambios e instrcciones de uso



Typ  
Type  
Tipo

Schmelzklebepistole 310 Plus (Art.-Nr. 12500074)

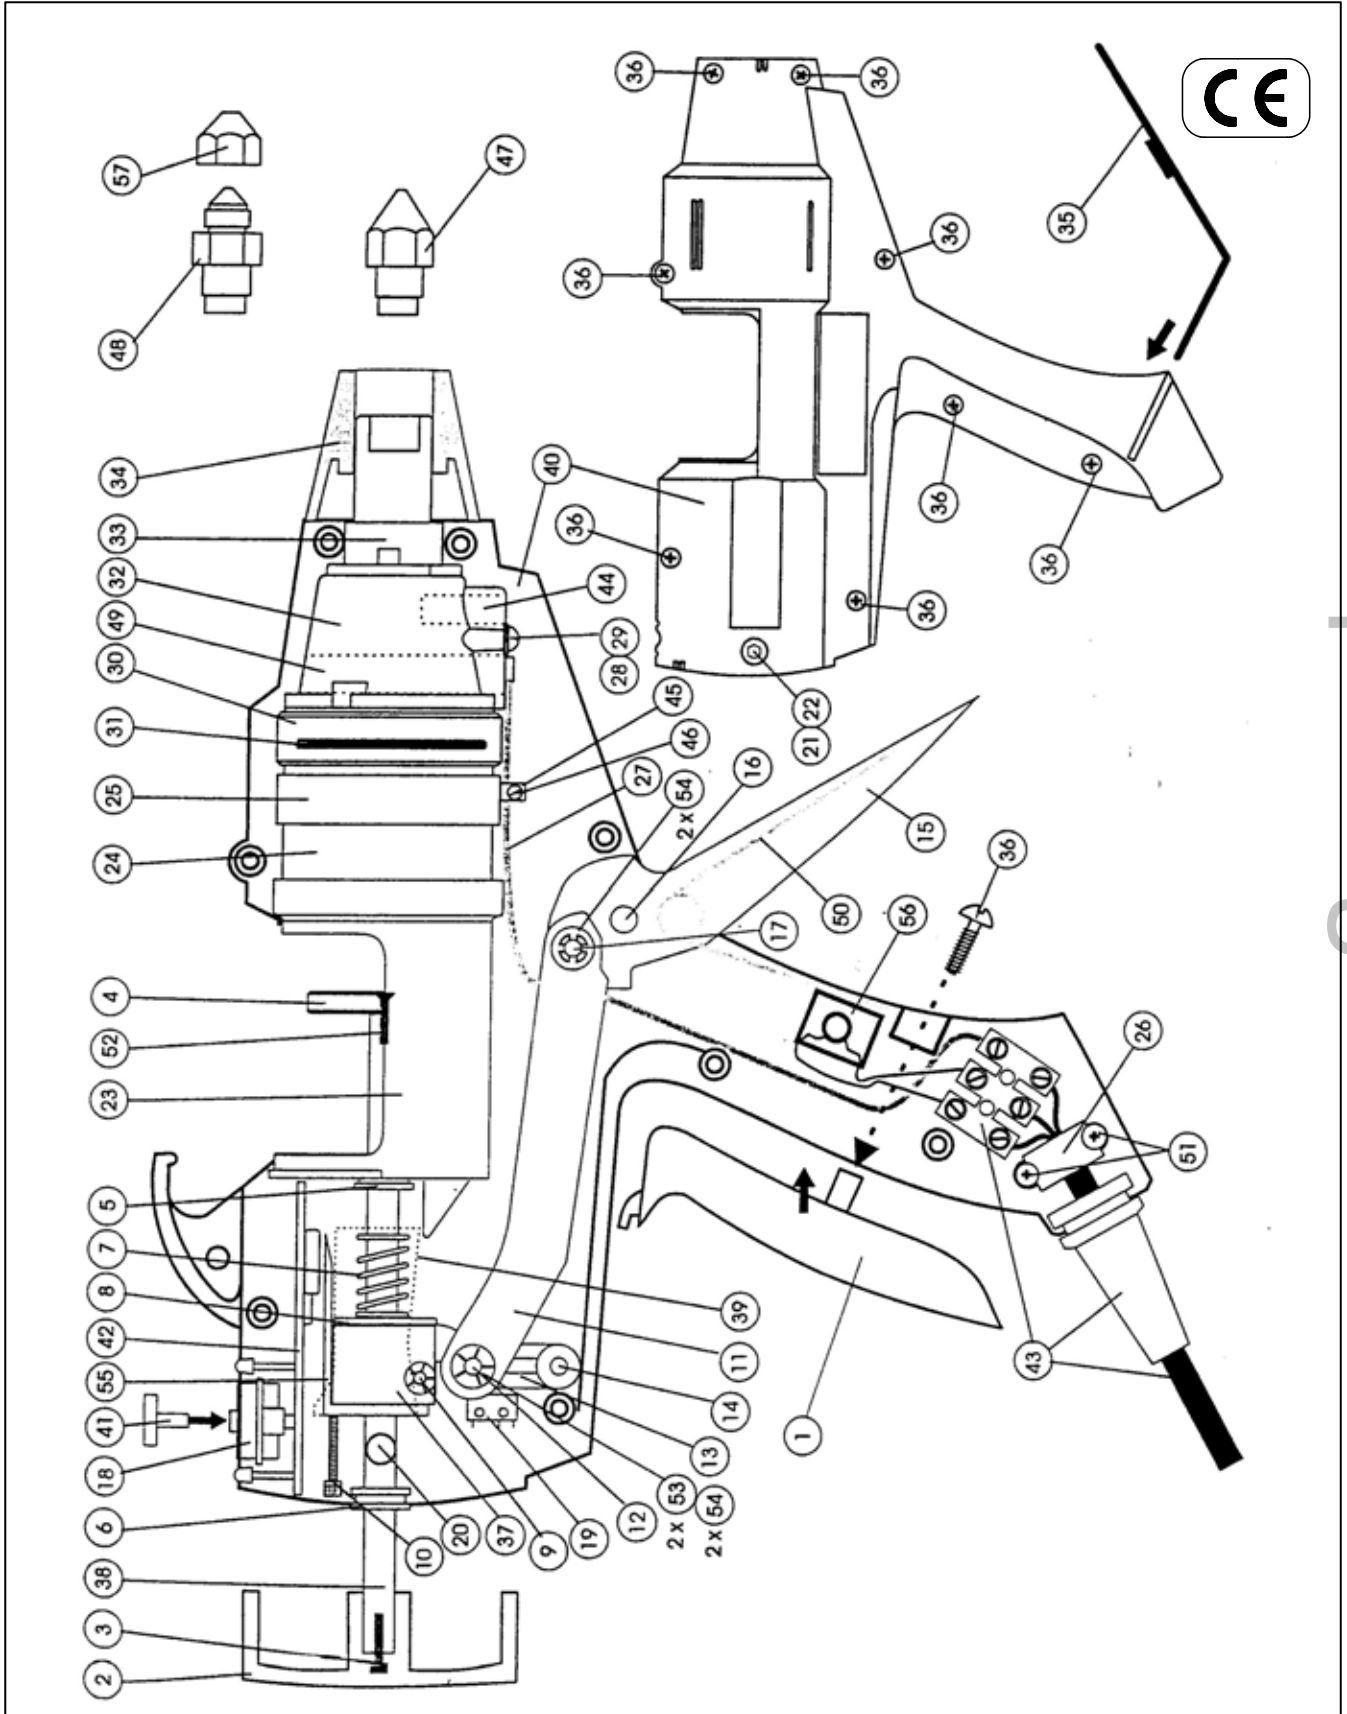

www.crownpartsglobal.com

1	Gehäusegriff Handle grip Poignée Mango	14501536	24	Kleberführungschanal Front barrel Canal guide-colle avant Canal para cola, delante	14502833	44	Sicherung T/Fuse assy Fusible Fusible	14501595
2	Vorschubgriff Feed bar handle Poignée Mango	14501570	25	Haltering Barrel support Anneau de blocage Anillo de soporte	14501543	45	Feder Spring Ressort Muelle	14501531
3	Schraube	14501523	26	Kabelklemme Cord clamp Serre-câble Borne de cable	14501609	47	Düsenkörper Alu Nozzle body Corps de buse Cuerpo de tobera	14502840
10	Screw	14501524	27	Erdung Earth wire assy Mise à la terre Unidad de puesta a tierra	14502834	48	Düsenkörper Stahl Nozzle body Corps de buse Cuerpo de tobera	14502841
22	Vis	14501529	28	Sicherungsscheibe Washer, lock Plaque de sécurité Arandela de seguridad	14502835	49	Heizelement 240 V Heater assy 230 V Élément chauffant Elemento calentador	14502842 14502843
36	Tornillo	14501525	29	Schraube, Erdung Screw, earth Vis, mise à la terre Tornillo, puesta a tierra	14502836	50	Schenkelfeder Torsion spring Ressort à branches Muelle con patas	14501587
46	Vite	14501526	30	Verbindungsring Alu Lock ring alu Bague de raccordement Anillo de unión de aluminio	14501603	53	Sprengring	14501513
51		14501527	31	O-Ring O-ring Joint torique Aro tórico	14501512	54	Snap ring Clips Anillo de sujeción	14502844
52		14501528	32	Schmelzkammer Heater housing Chambre de fusion Cámara de fusión	14502837	55	Druckplatte Pressure plate Plaque de compression Placa de presión	14502845
4	Kolben Plunger Piston Pistón	14501583	33	Distanzbuchse Spacer sleeve Douille de distance Casquillo distanciador	14501548	56	Kondensator 240V Mains capacitor assy 240V	14502846
5	Buchse vorn Feed bar push front Douille Casquillo	14501585	34	Düsenabdeckung Nozzle shroud Cache Tapa	14501533	57	Standarddüse Nozzle cover O81 Buse standard Tobera estándar	14501394
6	Buchse hinten Feed bar push rear Douille Casquillo	14501586	35	Gerätetänder Gun stand Support de l'appareil Soporte de aparatos	14501538		3-Lochdüse Nozzle tip 3 hole Injecteur à 3 trous Tobera de 3 orificios	14501399
7	Vorschub-Feder Feed mechspring Ressort Muelle	14501588	37	Vorschub-Baugruppe Feed mech assy Sous-ensemble d'avance Unidad de avance	14501579		2-Lochdüse Nozzle tip 2 hole Injecteur à 2 trous Tobera de 2 orificios	14501398
8	Druckplatte Pressure plate Plaque de compression Placa de presión	14501571	38	Vorschub-Stange Feed bar shaft Tige d'avance Barra de avance	14501580		Nadelschaftdüse Nozzle tip needle EXT Buse talon d'aiguille Tobera de aguja	14501397
9	Stift Feed mech pivot pin Axe Pasador	14501582	39	Vorschub-Halter Feed mech carrier Fixation Sujeción	14501581		Schaftdüse Nozzle tip EXT Buse en fut Tobera de vástago	14501395
11	Verbindungsarm Feed mech link Barre Barra	14501572	40	Gehäuse Handles pair Boitier Caja	14502838		Adapter Extension nozzle adapter Adaptateur Adaptador	14501393
12	Stift	14501573	41	Temperaturmodul 195°C Plug in module 130°C Module température 160°C Módulo de temperatura 180°C Modulo della temperatura 215°C	14501611 14501612 14501613 14501614 14501615			
14	Toggle pin Axe Pasador Spina	14501575	42	Temperaturregler 220/240 V Temp control Régulation de température Regulación de temperatura	14502839			
13	Schaltgabel Feed mech toggle Levier Gatillo	14501574	43	Kabel Cordset Câble Cable	14501604			
15	Auslöser Trigger Lever de détente Gatillo de disparo	14501550						
16	Stift	14501576						
17	Pin, trigger Axe Pasador	14501577						
18	Modulhalter Modul carrier Module Support Módulo Soporte	14501610						
19	Microschalter Microswitch Microcontact Microconmutador	14501616						
20	Hubbegrenzer Snubber pad Limiteur de course Limitador de de carrera	14501578						
21	Feder Spring Ressort Muelle	14501532						
23	Kleberführungschanal Rear barrel Canal guide-colle arrière Canal para cola, atrás	14501542						

1 把手	14501536	27 地线组件	14502834	53 扣环	14501513
2 进给杆把手	14501570	28 垫圈	14502835	54	14502844
3 螺钉	14501523	29 螺钉	14502836	55 压板	14502845
10	14501524	30 锁圈	14501603	56 电容组件240V	14502846
22	14501529	31 O环	14501512	57 喷嘴罩	14501394
36	14501525	32 加热器主体	14502837	油嘴3孔	14501399
46	14501526	33 间隔套	14501548	油嘴2孔	14501398
51	14501527	34 喷管罩	14501533	油嘴针EXT	14501397
52	14501528	35 枪架	14501538	油嘴EXT	14501395
4 活塞	14501583	37 推动组件	14501579	扩展喷嘴适配器	14501393
5 进给杆前端	14501585	38 推动杆	14501580		
6 进给杆后端	14501586	39 输送机	14501581		
7 机械弹簧	14501588	40 手柄对	14502838		
8 压板	14501571	41 插入模195	14501611		
9 枢轴	14501582	41 插入模130	14501612		
11 连接杆	14501572	41 插入模160	14501613		
12 螺栓	14501573	41 插入模180	14501614		
14	14501575	41 插入模215	14501615		
13 曲拐	14501574	42 220/240V	14502839		
15 扳机	14501550	43 电路组件	14501604		
16 销钉	14501576	44 T/保险丝组件	14501595		
17	14501577	45 弹簧	14501531		
18 装模器	14501610	47 喷嘴主体	14502840		
19 微型开关	14501616	48 喷嘴主体	14502841		
20 缓冲器	14501578	49 加热器组件230V	14502843		
21 弹簧	14501532	50 扭簧	14501587		
23 后枪筒	14501542				
24 前枪筒	14502833				
25 枪筒支座	14501543				
26 夹具	14501609				