

## 10

Parts list R557PN		R557PN	R557PN	R557PN	
When ordering please indicate part number		Vid beställning var vänlig ange artikelnumera	Bei Bestellungen immer Artikel-Nr. angeben		
1	946760	Screw	Skruv	Zylinderschraube	8
2	190204	Top cap	Cylinderlock	Deckel	1
3	148064	Gasket	Packning	Dichtung	2
4	190203	Cylinder	Cylinder	Zylinder	1
5	149057	Piston stop	Kolvdämpare	Kolbenstop	1
6	946004	Nut	Mutter	Mutter	1
7	972115	O-ring	O-ring	O-ring	1
8	191210	Piston R555/557	Kolv R555/557	Kolben R555/557	1
9	947015	Washer	Planbricka	Scheibe	1
10	191205	Piston	Kolvstång	Kolben	1
11	950006	Fix ring	Fix ring	Scheibe	1
12	146245	Chlinch adjustment nut	Justermutter	Einstellmutter	1
13	972142	O-ring	O-ring	O-ring	1
14	139525	Casting	Cylinderbotten	Gehäuse	1
15	150421	Cage	Hylsa höjdställning	Käfig	1
16	139542	Front section	Främre underdel	Gehäuse Vorderseite	1
17	165124	Penetration knob	Ställvred	Drehknopf	1
18	173155	Spring	Fjäder	Feder	1
19	946651	Screw	Skruv	Zylinderschraube	1
20	176417	Anvil holder	Klobärare	Rillplattenhalter	2
21	945096	Pin	Pinne	Zylinderstift	4
22	147127	Spacer	Distansklots	U-Scheibe	2
* 23	158316	Anvil hook 15-18mm	Klo 15-18 mm	Rillplatte	2
24	946687	Screw	Skruv	Zylinderschraube	2
25	945115	Pin	Pinne	Zylinderstift	2
26	163326	Link	Länk	Gelenk	2
27	161368	Connecting yoke	Ök	Anschlussjoch	1
28	960020	Latch	Spärr	Verriegelung	1
29	945119	Pin	Pinne	Zylinderstift	2
* 30	164160	Driver blade R557	Drivare R557	Antriebsschiene R557	1
31	163337	Bending die R557	Bockare R557	Baufnahme R557	1
32	163321	Penetration eccentric	Excenter	Exzenter	1
33	150420	Bushing	Bussning	Buchse	1
34	946776	Screw	Skruv	Schraube	4
35	166111	Guide right	Sidostyrning höger	Führungsschiene	1
36	166112	Guide left	Sidostyrning vänster	Führungsschiene	1
37	946775	Screw	Skruv	Zylinderschraube	4
38	176465	Bottom washer	Bottenplatta	Scheibe	1
39	110336	Lable R557	Klammerskylt R557	Schild R557	1
40	132365	Magazine housing R557	Magasinsdel R557	Magazinehäuse R557	1
41	951020	Retainer	Axelsäkring	Sicherungsring	2
42	181231	Shaft	Axel	Asche	1
43	174077	Plate spring	Bladfjäder	Feder	1
44	946774	Screw	Skruv	Schraube	1
45	166102	Central plate	Övre styrning	Augnahmeblech	1
46	946780	Screw	Skruv	Schraube	6
47	170186	Protecting cover	Täckkåpa	Schutzhaube	1
48	945018	Tension pin	Pinne	Spannstift	1
49	160211	Lever	Hävarm låsning	Hebelarm	1
50	181230	Shaft	Axellåsning	Achse	1
51	147131	Washer	Bricka	Scheibe	1
52	147132	Washer	Vågbricka	Scheibe	1
53	173188	Spring	Fjäderlåsning	Feder	1
54	158313	Bracket	Städlock	Konsole	1
55	945118	Tension pin	Fjädrande pinne	Spannhulse	3
56	173187	Spring	Fjäder	Feder	2
57	161382	Pusher R557	Frammatare R557	Kloben R557	1
58	158312	Anvil	Städ	Alasin	1
59	946769	Screw	Skruv	Schraube	2

\* Recommended wear parts

\* Rekommenderade slitdelar

\* Empfohlene Verschleissteile

Pos.	Part No. Artikelnr. Artikel-Nr.	Part Name	Benämning	Benennung	Quantity Antal Stückzahl
60	166124	Nozzle plate R557	Drivarstyrning R557	Abdeckplatte R557	1
61	946761	Screw	Skruv	Schraube	2
62	947062	Washer	Nitbricka	Scheibe	2
63	945116	Pin	Pinne	Stift	1
64	133179	Trigger compl	Avtryckare kompl	Abzug kompl	1
65	972084	O-ring	O-ring	O-ring	1
66	972077	O-ring	O-ring	O-ring	1
67	147128	Washer	Bricka avslagstapp	Scheibe	1
68	173185	Spring	Fjäder avslag	Feder	1
69	191206	Stem	Avslagstapp spindel	Ressort	1
70	179114	Rear cap	Bakre lock	Verschlussuck	1
71	972176	O-ring	O-ring	O-ring	2
72	187062	Tube	Påluftningsrör	Rohr	1
73	176424	Hanger	Upphångningsbygel	Aufhänger	1
74	946780	Screw	Skruv	Schraube	5
75	110313	Tool lable	Typskylt	Schild	1
76	110335	Tool lable R557	Typskylt R557	Schild R557	1
77	136169	Valve compl	Ventil kompl	Kloben kompl	1
78	972030	O-ring	O-ring	O-ring	1
79	972020	O-ring	O-ring	O-ring	1
80	134321	Piston cpl	Kolv kompl	Kolben kompl	1
81	134324	Clinch unit compl R557	Komplett bockenhet R557	Aufnahme kompl R557	1
82	139541	Handle cpl R557	Handtag kompl R557	Auslösehebel kompl R557	1
83	947038	Washer	Bricka	Scheibe	4

\* Recommended wear parts

\* Rekommenderade sliddelar

\* Empfohlene Verschleissteile

