


## Composite Brad Nailer

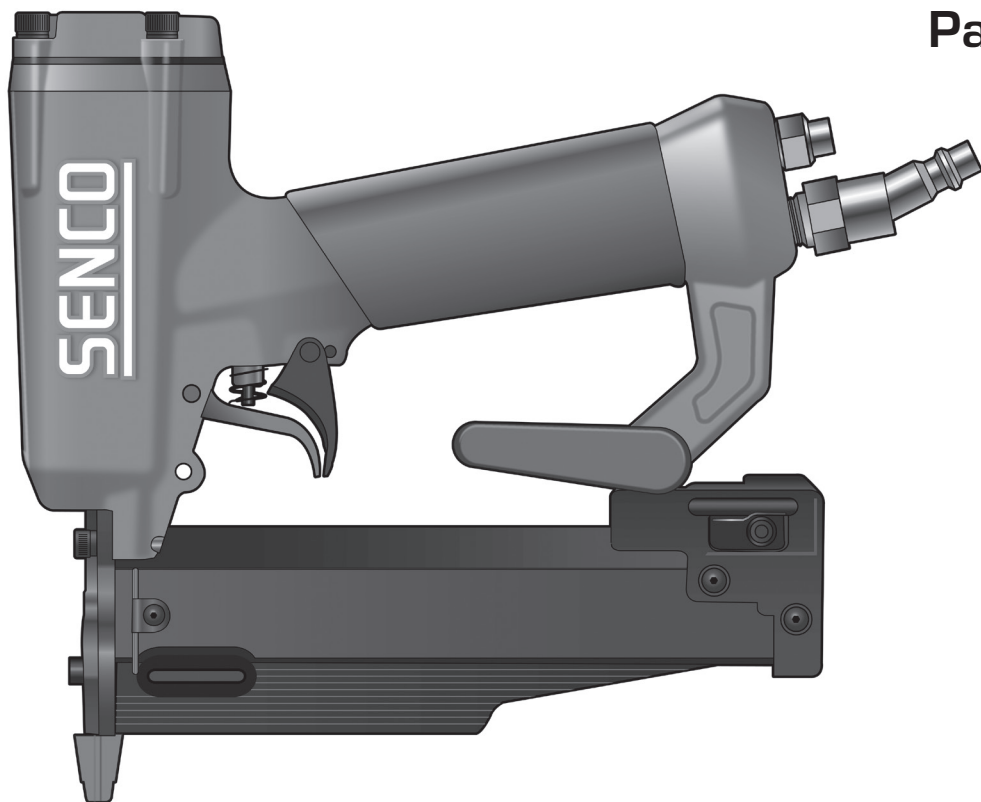

### Parts Reference Guide

Guía de referencia  
de piezas

Pièces Guide  
de référence

Schematic Drawings Inside  
Plano esquemático en el interior  
Schéma intérieur

**Repair Kit**  
YK0880

# SENCO®


Senco Brands, Inc.  
4270 Ivy Pointe Blvd.  
Cincinnati, OH 45245  
1-800-543-4596  
[www.senco.com](http://www.senco.com)

NFG09G • January 23, 2017

Questions? Comments? call SENCO's toll-free Action-Line: 1-800-543-4596  
(North and South America Only) or email: [toolprof@senco.com](mailto:toolprof@senco.com)

¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596  
(sólo para América del Norte y del Sur) o envíe un correo electrónico: [toolprof@senco.com](mailto:toolprof@senco.com)

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco: 1-800-543-4596  
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: [toolprof@senco.com](mailto:toolprof@senco.com)

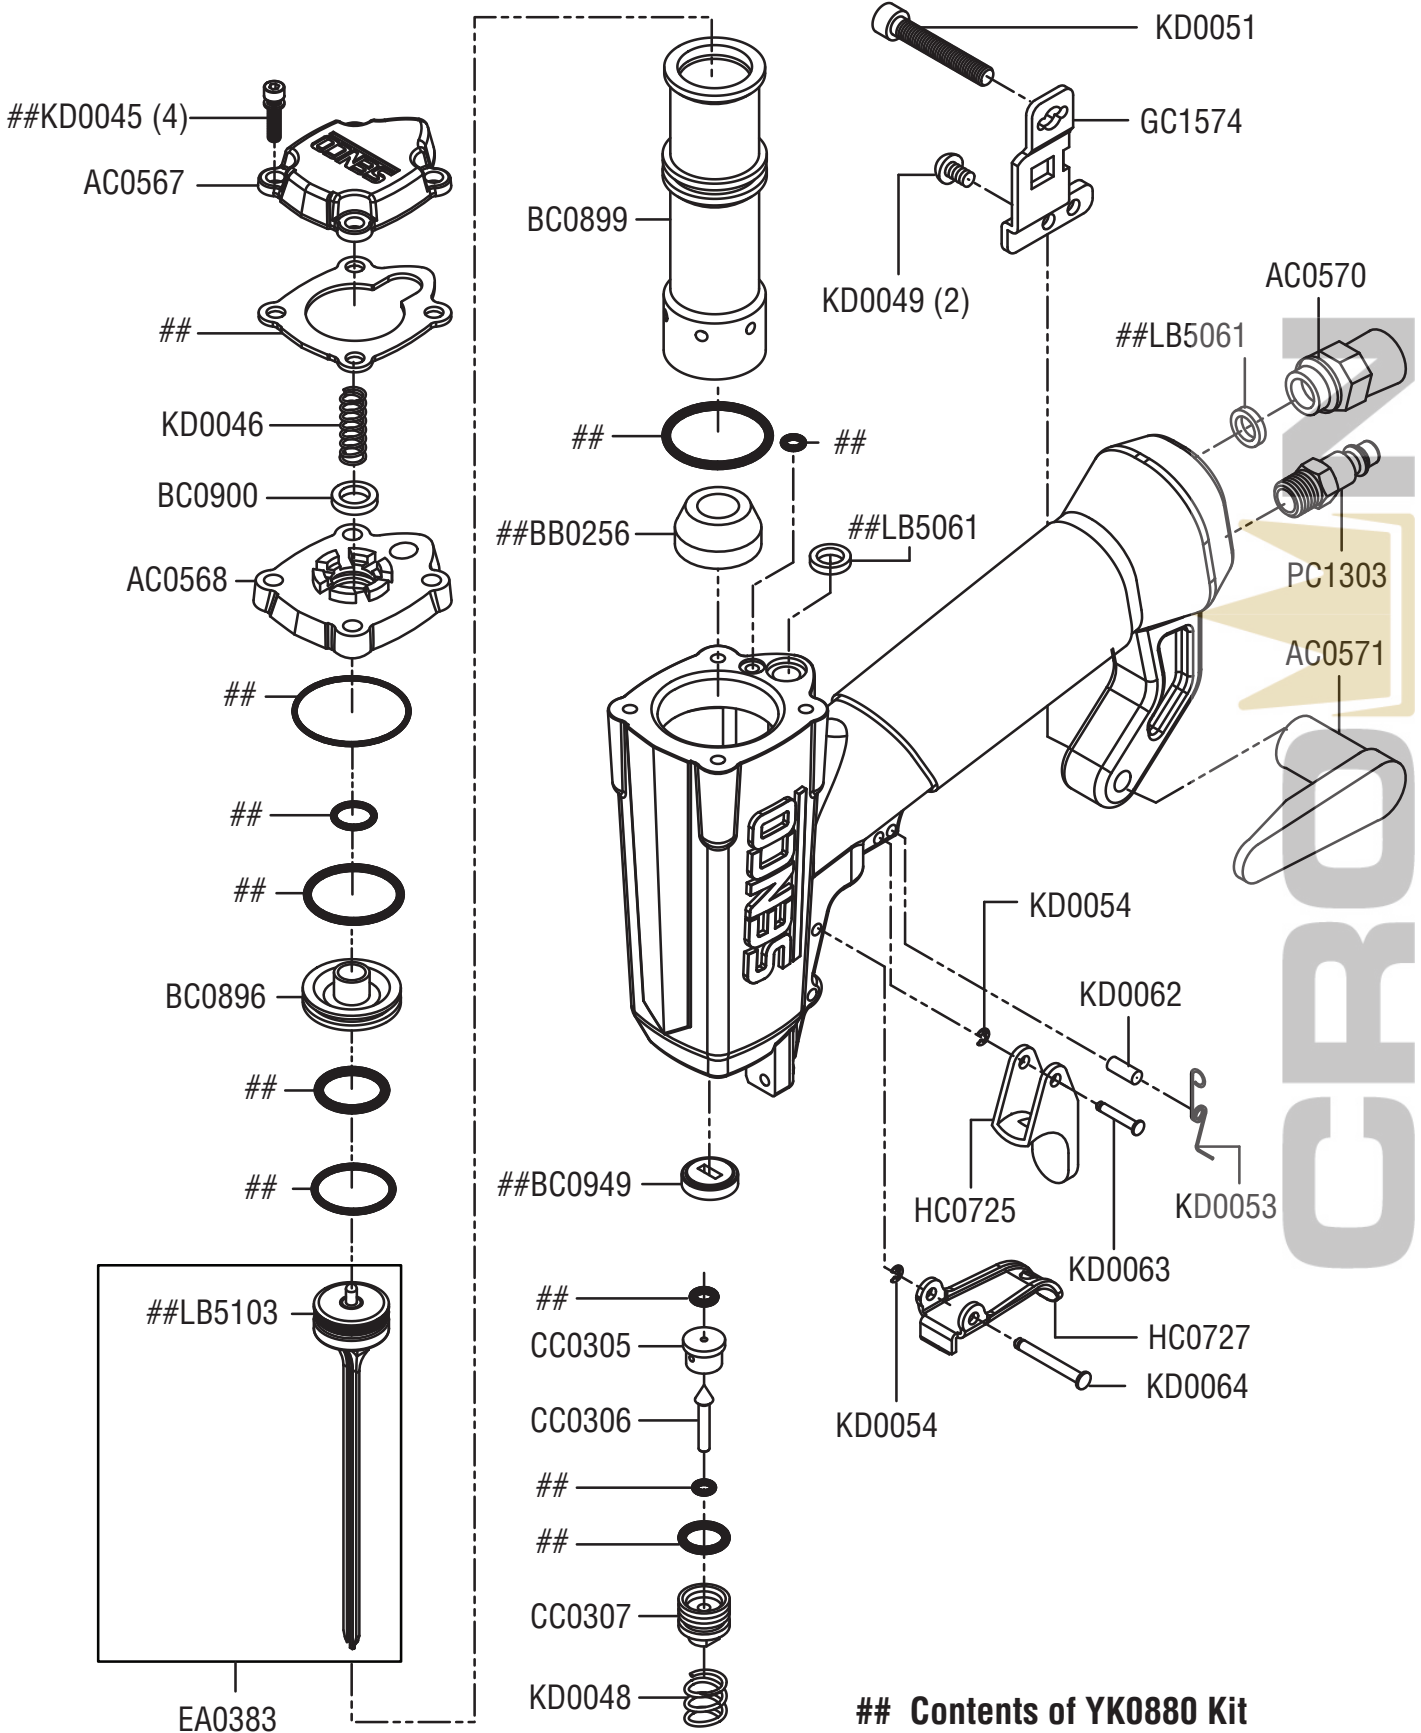


## Contents of YK0880 Kit



# Composite Brad Nailer

## SPBN18XP

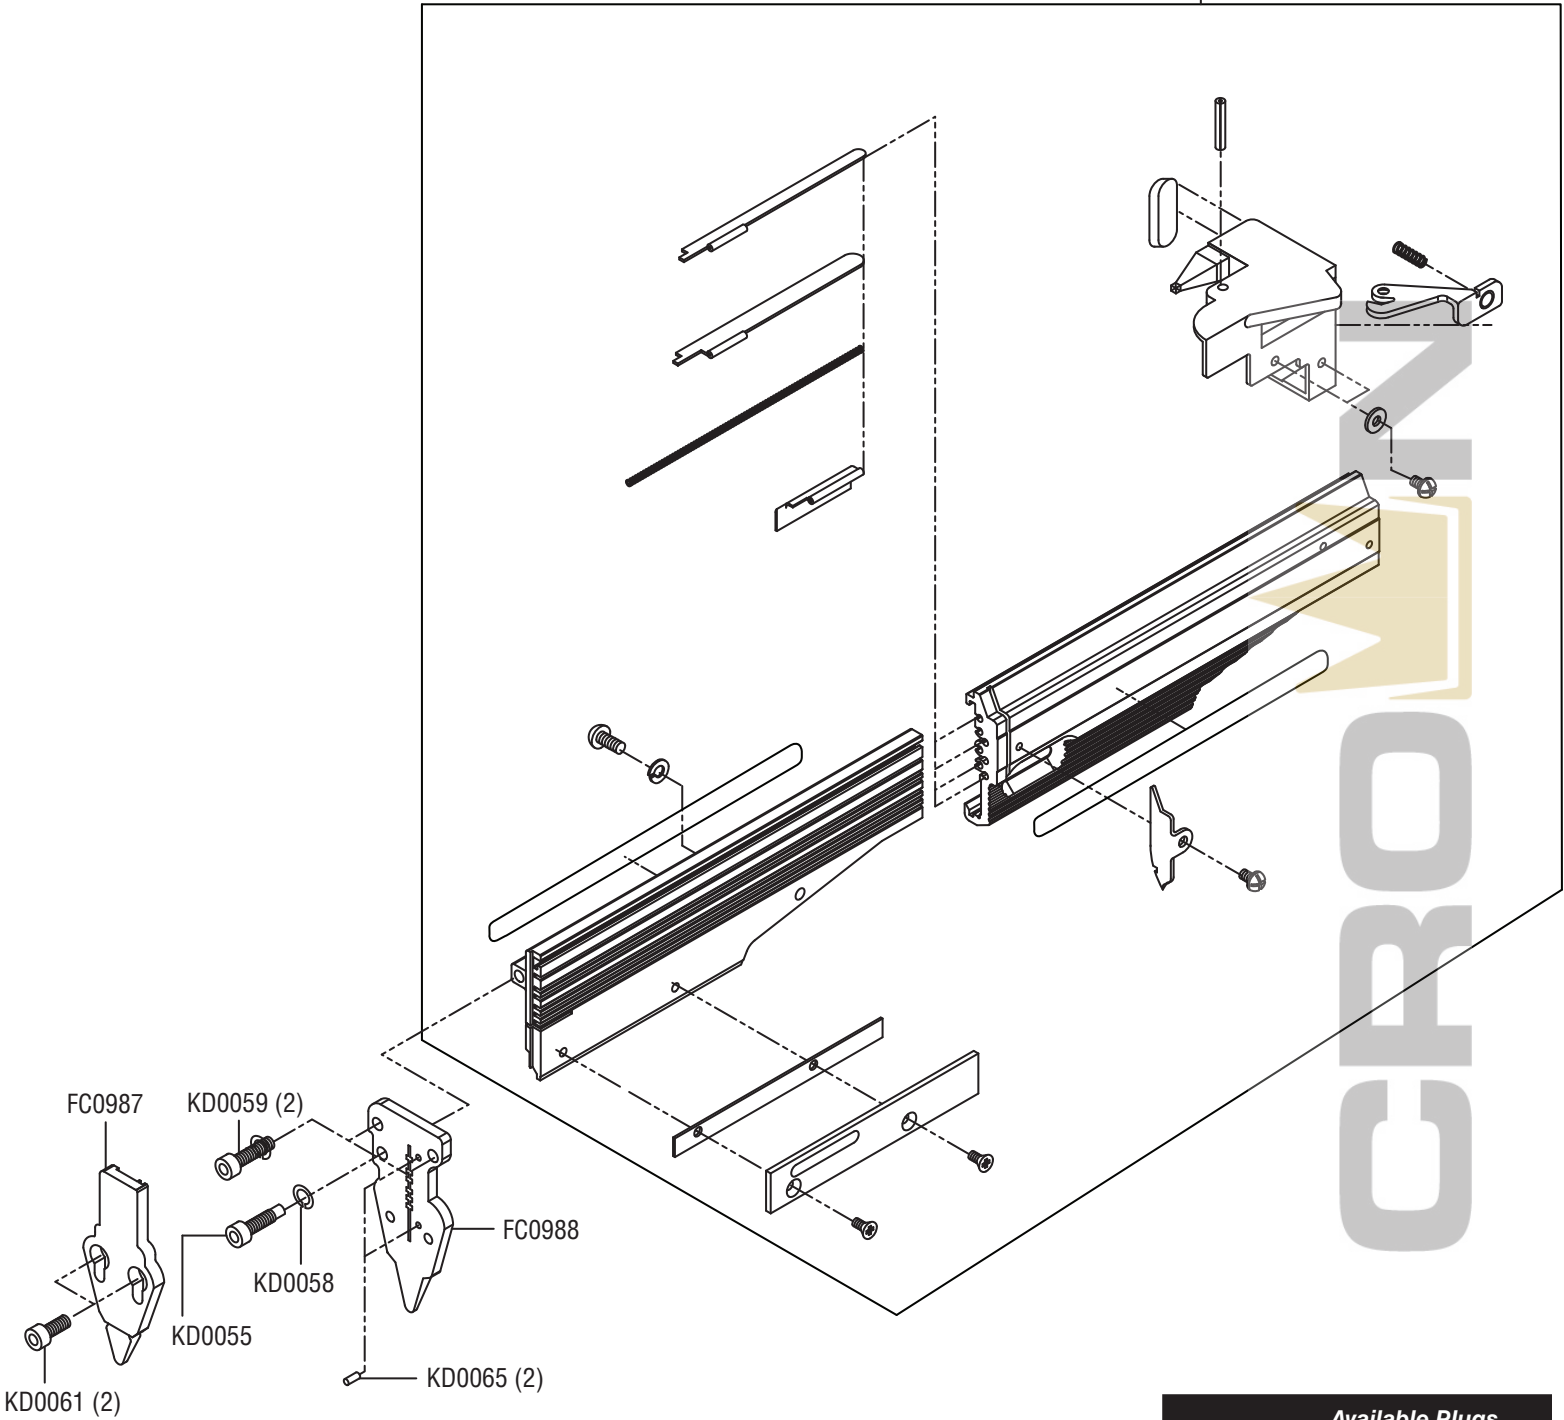GA0739



**Available Plugs**  
(Not Included with Tool)

	PC0479 ✓ 1/4" Body
Ind. Interchange 1/4" NPT	
	PC0486 3/8" Body
Ind. Interchange 1/4" NPT	

✓ **Recommended Plugs**  
Plugs shown smaller than actual size

**REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE**

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AC0567	Cap	Tapa	Bouchon
AC0568	Cylinder Cap	Tapa Cilindro	Bouchon de Cylindre
AC0570	Silencer	Silenciador	Silencieux
AC0571	Belt Hook	Gancho de Correa	Crochet de Ceinture
BB0256	Bumper	Tope	Butoir
BC0896	Head Valve	Válvula De Cabeza	Soupape De Tête
BC0899	Cylinder	Cilindro	Cylindre
BC0900	Valve Stop	Tope de Válvula	Arrêt de Soupape
BC0949	Driver Seal	Sello del Programa Piloto	Joint de Gestionnaire
CC0305	Trigger Valve Seat	Gatillo de Asiento de Válvula	Guide
CC0306	Trigger Valve Stem	Válvula del Gatillo Vástago	Tige de Soupape
CC0307	Trigger Valve Guide	Gatillo Guía de Válvula	Guide de Soupape De Déclenchement
EA0383	Piston Assembly	Pistón/Accionador	Piston/Moteur
FC0987	Cover Plate	Tapadera	Couvercle
FC0988	Guide Plate	Placa de Guía	Plaque Guide
GA0739	Magazine Assembly	Asamblea del Compartimiento	Assemblée de Magasin
GC1574	Support	Ayuda	Support
HC0725	Safety Trigger	Disparador de la Seguridad	Déclenchement de Sûreté
HC0727	Trigger	Gatillo	Détente
KD0045	Screw	Tornillo	Vis
KD0046	Compression Spring	Resorte de Compresion	Ressort de Pression
KD0048	Trigger Spring	Resorte de Gatillo	Ressort de La Détente
KD0049	Screw	Tornillo	Vis
KD0051	Screw	Tornillo	Vis
KD0053	Safety Trigger Spring	Resorte de Gatillo de Seguridad	Détente Ressort de Sécurité
KD0054	E-Ring	Anillo de Retención E	Anneau de Retenue En E
KD0055	Screw	Tornillo	Vis
KD0058	Washer	Arandela	Rondelle
KD0059	Washer	Arandela	Rondelle
KD0061	Screw	Tornillo	Vis
KD0062	Pin	Pasador	Goupille
KD0063	Pin	Pasador	Goupille
KD0064	Pin	Pasador	Goupille
KD0065	Pin	Pasador	Goupille
LB5061	Deflector	Deflector	Deflecteur
LB5103	O-Ring	Anillo O	Joint Circulaire
PC1303	Swivel Fitting	Acoplador Giratoria	Coupleur Pivotant

