


MODEL WS4840 W6

SPOTNAILS

DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd
Rolling Meadows, IL 60008
Phone : 847-259-1620

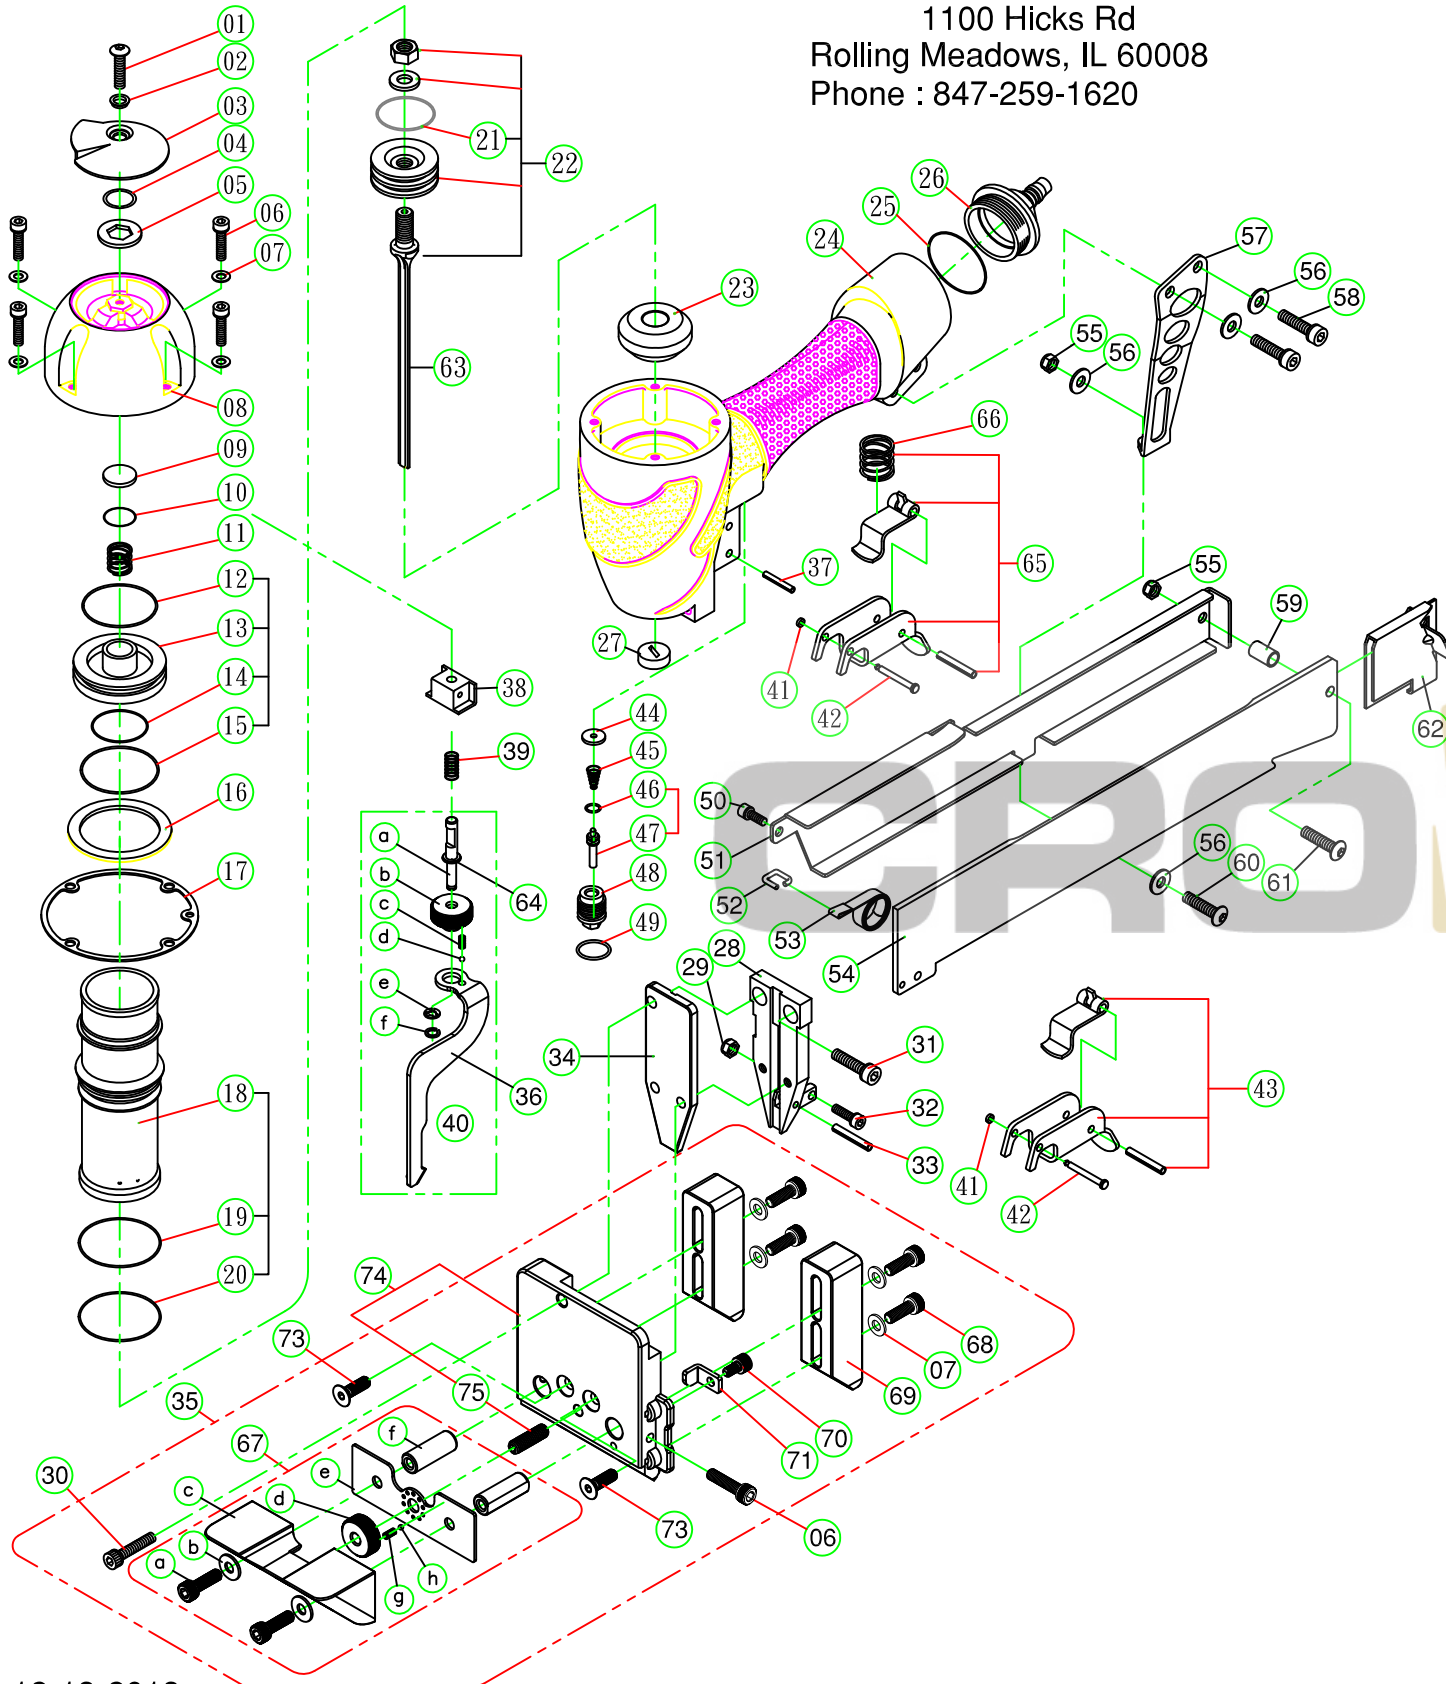

SPOTNAILS MODEL WS4840 W6

Ref No.	Part No.	Description	Ref No.	Part No.	Description
01	P-24370	Screw	39	P-18328	Spring
02	P-96118	Bushing	40	AS-53077	Safety Assembly
03	P-70042	Exhaust Deflector	41	P-64240	O-Ring
04	P-64377	O-Ring	42	P-07327	Trigger Pin
05	P-32217	Washer	43	AS-21008	Trigger Assembly
06	P-24300	Screw	44	P-15194	Valve Seal
07	P-32211	Flat Washer	45	P-18283	Spring
08	P-60174	Cap	46	P-64390	O-Ring
♦ 09	P-15193	Exhaust Seal	47	P-22165	Plunger
♦ 10	P-64384	O-Ring	48	P-22166	Valve Housing
11	P-18331	Poppet Spring	49	P-64391	O-Ring
♦ 12	P-64385	Poppet O-Ring	♦ 50	P-24309	Screw
13	P-63038	Poppet	51	P-12232	Track Cover
♦ 14	P-64233	Piston Stop O-Ring	52	P-18233	Spring Clip
♦ 15	P-64386	Cylinder Seal O-Ring	♦ 53	P-18232	Negator Spring
16	P-03070	Guide Spacer	54	P-12231	Track
♦ 17	P-62071	Gasket	55	P-26124	Nut
18	P-05097	Cylinder	56	P-32114	Washer
♦ 19	P-64387	Cylinder O-Ring	57	P-13081	Bracket
♦ 20	P-64242	O-Ring	58	P-24306	Screw
♦ 21	P-64388	Piston O-Ring	59	P-03053	Spacer
22	AS-06058	Piston & Driver Assembly	60	P-24310	Screw
23	P-15195	Bumper	61	P-24319	Screw
24	P-01273	Body	62	P-09149	Pusher
25	P-64425	O-Ring	63	P-06240	Driver Blade
26	P-60175	End Cap	64	P-07477	Safety Pin
♦ 27	P-15196	Return Seal	65	AS-21029	Restrictive Trigger
28	P-08509	Wear Plate	66	P-18267	Spring
29	P-26125	Nut	67	AS-99099	Base Assy
30	P-24456	Screw	68	P-24312	Screw
31	P-24306	Screw	69	P-97442	Support Foot
32	P-24311	Screw	70	P-24304	Screw
33	P-07290	Roll Pin	71	P-13113	Brachet
34	P-10338	Front Plate	73	P-24607	Screw
35	AS-99098	Flooring Assembly	74	AS-99100	Plate Assy
36	P-52038	Safety	75	P-24605	Set Screw
37	P-07291	Pin			
38	P-53165	Safety Guide			

♦ Parts Included In AS-97281 O-Ring And Seal Kit