


MODEL X1C1016

SPOTNAILS[®]
 DIVISION OF PEACE INDUSTRIES, LTD.
 1100 Hicks Rd
 Rolling Meadows, IL 60008
 Phone : 847-259-1620

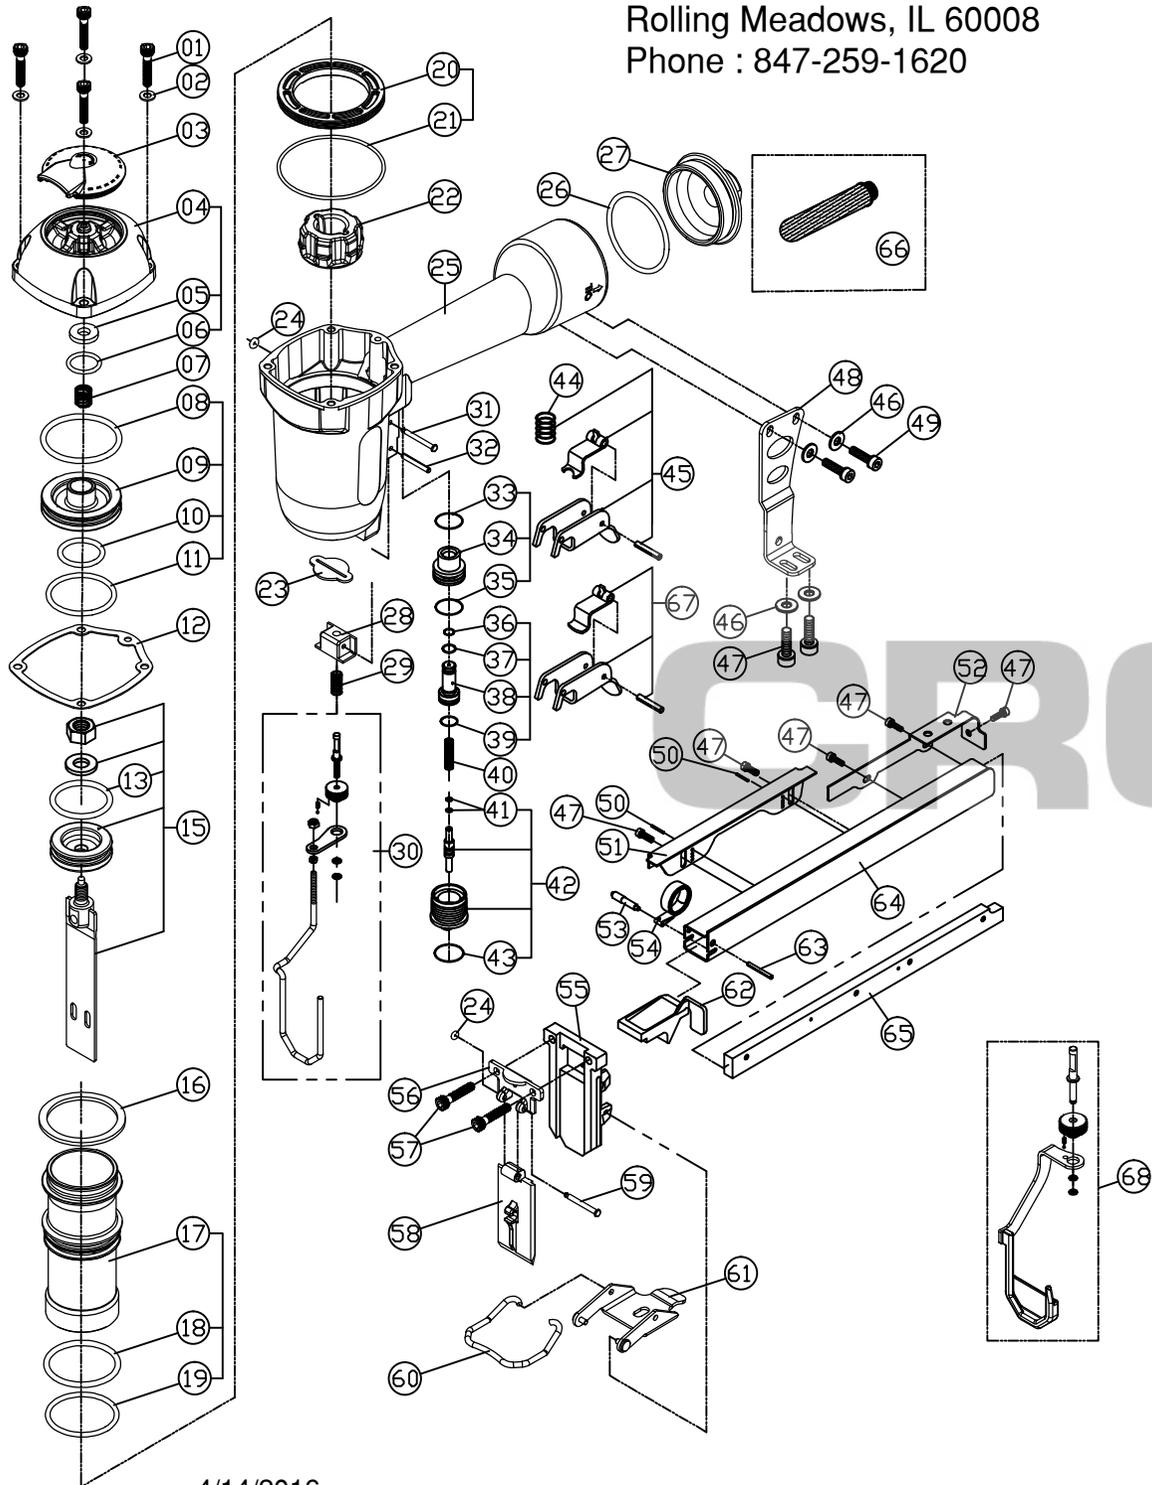

4/14/2016

SPOTNAILS MODEL X1C1016

Ref No.	Part No.	Description	Ref No.	Part No.	Description
01	P-24300	Cap Screw-4	◆	36	P-64334 O-Ring
02	P-32211	Flat Washer-4	◆	37	P-64335 O-Ring
03	P-70058	Exhaust Deflector		38	P-22145 Pilot Valve
04	P-60221	Cap	◆	39	P-64336 O-Ring
◆	05	P-15187 Exhaust Seal		40	P-18227 Spring
◆	06	P-64378 O-Ring	◆	41	P-64383 Plunger O-Rings-2
07	P-18327	Poppet Spring		42	AS-22037 Plunger Assembly
◆	08	P-64601 Poppet O-Ring	◆	43	P-64328 O-Ring
09	P-63055	Poppet		44	P-18267 Spring
◆	10	P-64379 Piston Stop o-Ring		45	AS-21037 Restrictive Trigger Assembly (Red)
◆	11	P-64602 Cylinder Seal O-Ring		46	P-32170 Washer-4
◆	12	P-62094 Gasket		47	P-24433 Screw-7
◆	13	P-64617 Piston O-Ring		48	P-13128 Bracket
15	AS-06110	Piston & Driver Assembly		49	P-24301 Screw-2
16	P-03125	Guide Spacer		50	P-07333 Pin-2
17	P-05131	Cylinder		51	P-12406 Magazine Cover (A)
◆	18	P-64603 Cylinder O-Ring		52	P-12407 Magazine Cover (B)
◆	19	P-64604 O-Ring		53	P-07331 Negator Spring Pin
20	P-03126	Cylinder Guide		54	P-18334 Negator Spring
◆	21	P-64605 O-Ring		55	P-08467 Wear Plate
22	P-15273	Bumper		56	P-10285 Stationary Front Plate
23	P-15198	Return Seal		57	P-24358 Screw-2
◆	24	P-64240 O-Ring-2		58	P-10286 Removable Front Plate
25	P-01308	Body		59	P-07357 Step Pin
26	P-64312	O-Ring		60	P-18333 Latch Spring
27	P-60156	End Cap		61	P-04062 Quick Clear Latch
28	P-53165	Safety Guide		62	P-09185 Pusher
29	P-18328	Spring		63	P-07332 Pin
30	AS-53084	Safety Assembly		64	P-12409 Magazine
31	P-07327	Trigger Pin		65	P-12411 Cover Mounting Bar
32	P-07262	Pin		66	P-97454 Filter (Optional)
◆	33	P-64332 Valve Housing O-Ring		67	AS-21008 Trigger Assembly(Black)
34	P-22144	Trigger Valve Cap		68	AS-53091 Optional Cast Safety
◆	35	P-64333 O-Ring			

◆ Parts Included In AS- 97403 O-Ring And Seal Kit