


Model RN-45 Parts List

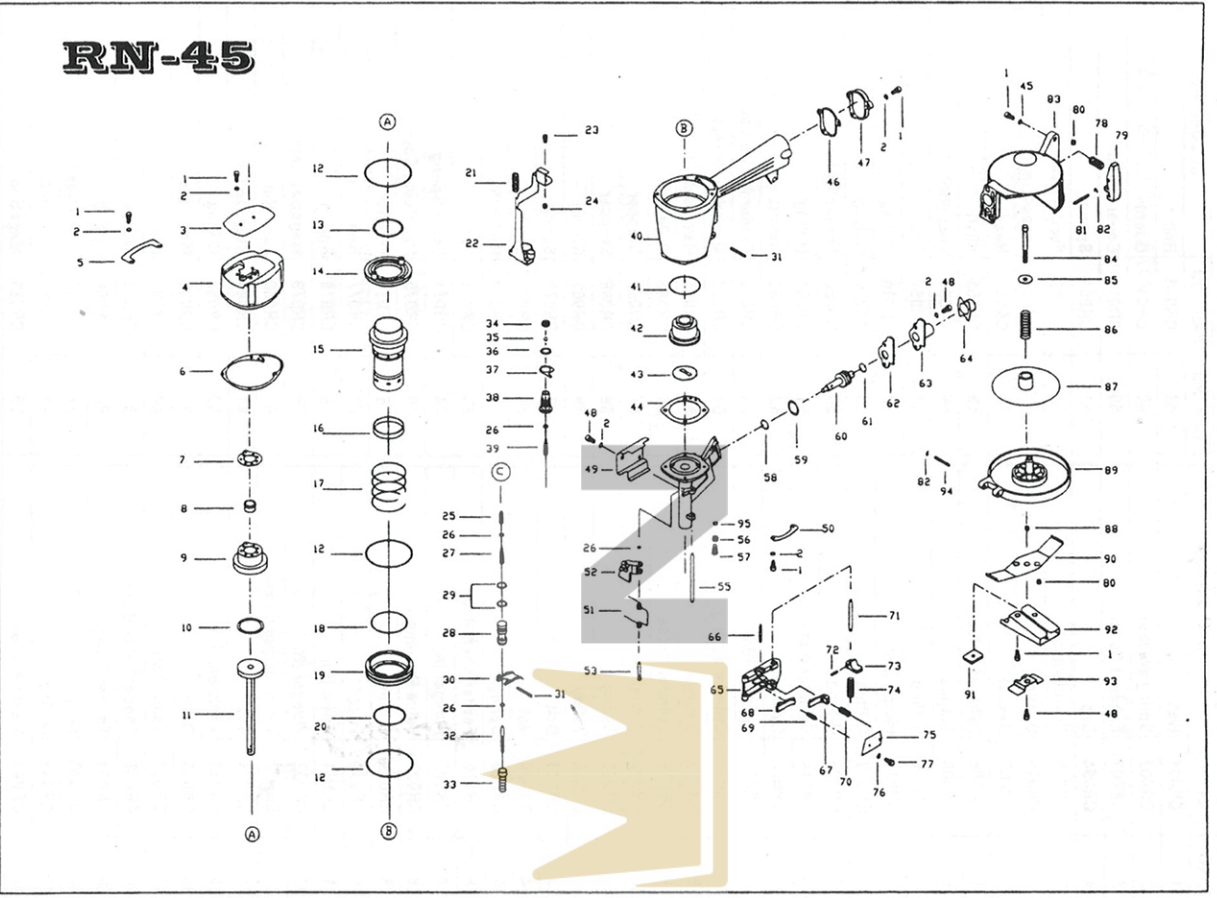

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	CR001	Bolt	48	CR048	Bolt
2	CR002	Spring Washer	49	GR049	Guard
3	CR003	Exhaust Cover	50	CR050	Cover Guard
4	CR004	Cap	51	CR051	Spring
5	CR005	Body Guard	52	CR052	Feeder Pawl
6	CR006	Gasket	53	CR053	Feeder Shaft
7	CR007	Gasket	54	CR054	Nose
8	CR008	Exhaust Valve	55	CR055	Shaft
9	CR009	Stopper	56	CR056	Lock Nut
10	CR010	O-Ring	57	CR057	Bolt
11	CR011	Piston Unit	58	CR058	O-Ring
12	CR012	O-Ring	59	CR059	O-Ring
13	CR013	O-Ring	60	CR060	Feeder Piston
14	CR014	Cylinder Plate	61	CR061	O-Ring
15	CR015	Cylinder	62	CR062	Gasket
16	CR016	Cylinder Ring	63	CR063	Feeder Piston Cover
17	CR017	Cylinder Spring	64	CR064	Magazine Bushing
18	CR018	O-Ring	65	CR065	Nail Guide
19	CR019	Cylinder Guide	66	CR066	Roller Pin
20	CR020	O-Ring	67	CR067	Stopper
21	CR021	Spring	68	CR068	Stopper
22	CR022	Safety	69	CR069	Spring
23	CR023	Bolt	70	CR070	Spring
24	CR024	Nut	71	CR071	Shaft
25	CR025	Spring	72	CR072	Roller Pin
26	CR026	Feeder Shaft Ring	73	CR073	O-Ring
27	CR027	Plunger (A)	74	CR074	Latch Spring
28	CR028	Valve Bushing	75	CR075	Nail Guide Cover
29	CR029	O-Ring	76	CR076	Washer
30	CR030	Trigger	77	CR077	Bolt
31	CR031	Roller Pin	78	CR078	Spring
32	CR032	Plunger (B)	79	CR079	Magazine Latch
33	CR033	Valve Rubber Cover	80	CR080	Lock Nut
34	CR034	Seal	81	CR081	Stepped Pin
35	CR035	Valve Ball	82	CR082	C-Ring
36	CR036	O-Ring	83	CR083	Magazine
37	CR037	Valve Plate	84	CR084	Bolt
38	CR038	Trigger Valve Bushing	85	CR085	Washer
39	CR039	Trigger Plunger	86	CR086	Spring
40	CR040	Body	87	CR087	Nail Holder
41	CR041	O-Ring	88	CR088	Lock Nut
42	CR042	Driver Bumper	89	CR089	Magazine
43	CR043	Driver Guide	90	CR090	Magazine Guard
44	CR044	Gasket	91	CR091	Plate Nut
45	CR045	Washer	92	CR092	Guide Base
46	CR046	Gasket	93	CR093	Shingle Guide
47	CR047	End Cap	94	CR094	Pin
			95	CR095	E-Ring