


## SCOPE JACK INSTRUCTIONS

- 1 Loosen scope ring screws so main tube rotates freely with minimal effort.
- 2 Using thumb screw, attach
  Scope Jack to rail so lifting
  arm is positioned under flat
  section under scope. In case
  of minimal clearance, it may
  be required to unscrew clamp.

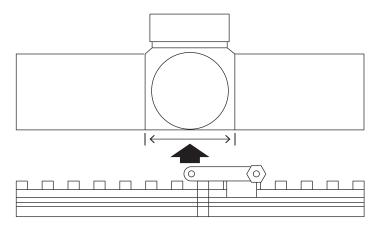

(Minimum 0.26" clearance)

- 3 Using 1/4" driver, rotate lifting arm until it makes contact with flat section on bottom of scope. Continue applying gentle pressure until scope settles to a level position.
- While maintaining light pressure on the lifting arm, snug ring screws in a cross pattern. Apply manufacturer specified torque for final tightening

