



Cassette System Installation

1) Mount the Brackets

Mount the brackets to the wall or window frame, with the outside brackets no further than 2" (5 cm) from the ends of the headrail. On wide shades, space the additional bracket(s) at equal intervals.

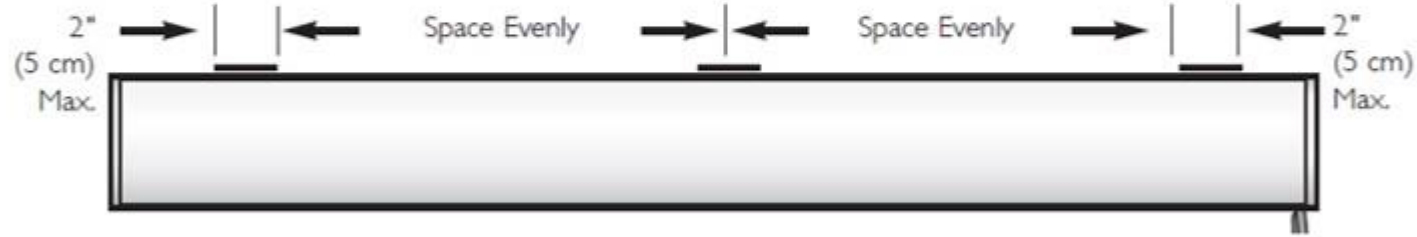


For wall or outside mounts, use the rear bracket holes.

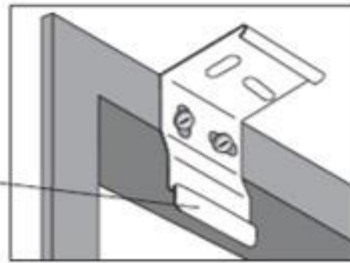

Make sure the release tab is always mounted on the bottom.


For inside or ceiling mounts, use the top bracket holes.

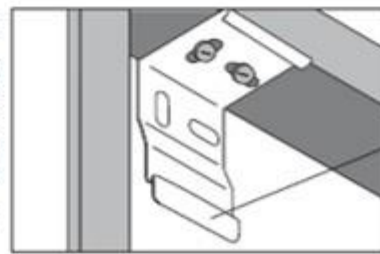


Make sure the release tab is always mounted on the bottom.

2) Mount the Headrail


Position the headrail with the front panel (A) resting on the top lip of all brackets. Push the bottom front of the headrail firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place, (B) as shown.

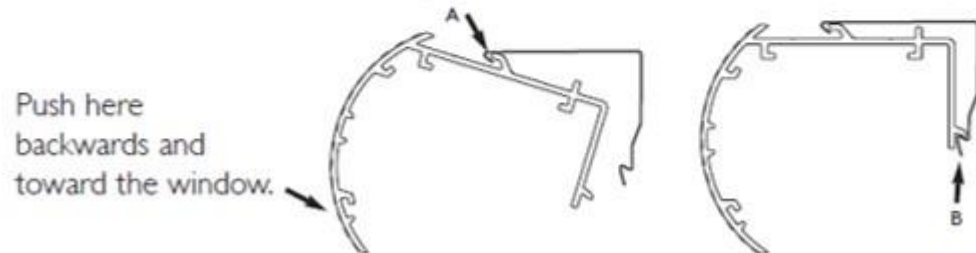


For cordless shades, **AFTER** installation, remove the tension lock

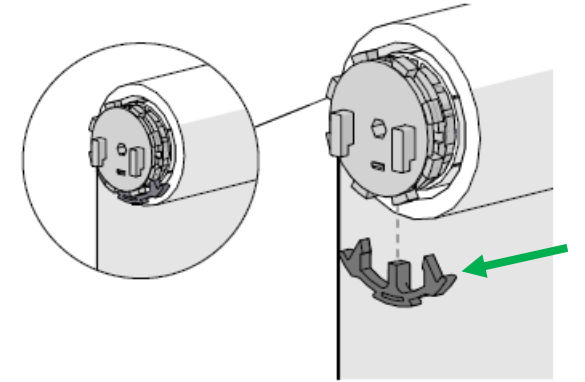

1 Pull Bottom Rail down to bottom location

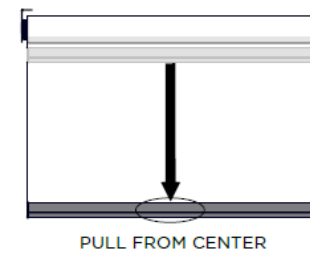

2 Push the Bottom Rail up to top position

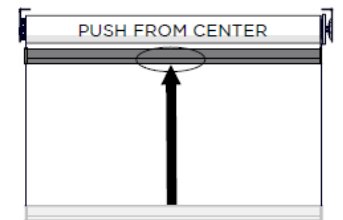

If Cordless shades do not stay at the bottom location, or do not rise when pushed upward, see these [instructions](#).